



Einhell

EXPERT



Cordless Mini Circular Saw

TE-CS 18/89 Li - Solo

Item No.: 4331100

Ident No.: 11019

Bar Code: 4006825646184

The Einhell cordless mini handheld circular saw TE-CS 18/89 Li-Solo is small, light and handy – comfortable to use, making it pleasant to work with. As a member of the Power X-Change family, any PXC battery can be combined with the mini handheld circular saw. Battery and charger from the PXC series are not included. These are available separately. The cutting depth can be adjusted without tools. Thanks to the spindle lock, changing the saw blade is also very easy. The carbide saw blade and the rip fence ensure clean, precise cuts with a max. cutting depth of 28 mm. The high-quality aluminium saw table ensures optimum stability. A vacuum cleaner adapter on the housing ensures a clean workplace.

Features & Benefits

 
 
 
- A member of the Power X-Change family
- Small, light and handy – for comfortable operation
- Easy, tool-free adjustment of the cutting depth
- High-quality saw table made of aluminium for optimum stability
- Easy changing of the saw blade thanks to the spindle lock
- High-grade carbide blade for clean cuts
- Max. cutting depth of 28 mm thanks to the Ø89 mm saw blade
- Dust extraction adapter to keep the workplace clean
- Parallel stop for precise cuts

Technical Data

- Voltage 18 V
- rotation speed 2500 min⁻¹
- saw blade diameter 89 mm
- Cutting depth wood 28 mm

Logistic Data

- Product weight (kg) 1.77
- Gross weight (kg) 2.6
- Dimensions single packaging 431 x 137 x 152 mm
- Pieces per export carton 4 Pieces
- Gross weight of export carton 11 kg
- Dimensions export carton 445 x 285 x 325 mm
- Container quantities (20"/40"/40"HC) 2768 | 5680 | 6520

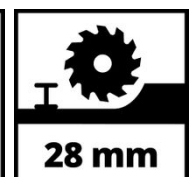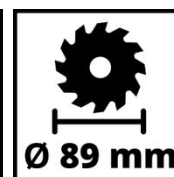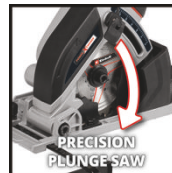

Available as special accessories



18V 2,0Ah Power X-Change
Battery
Item No.: 4511395
Bar Code: 4006825610369
Einhell Accessory



18V 4,0Ah Power X-Change 1
Battery
Item No.: 4511396
Bar Code: 4006825610376
Einhell Accessory



18V 4,0Ah PXC Starter Kit 1
PXC-Starter-Kit
Item No.: 4512042
Bar Code: 4006825613704
Einhell Accessory



18V 5,2Ah Power X-Change Plus
Battery
Item No.: 4511437
Bar Code: 4006825616606
Einhell Accessory



Power X-Twincharger 3A
Charger
Item No.: 4512069
Bar Code: 4006825629729
Einhell Accessory



18V 2,0Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512040
Bar Code: 4006825613681
Einhell Accessory




Power X-Boostcharger 6A
Charger
Item No.: 4512064
Bar Code: 4006825629019
Einhell Accessory



18V 3,0 Ah Power-X-Change 2
Battery
Item No.: 4511341
Bar Code: 4006825590593
Einhell Accessory

Battery-Running-Times

One Battery for All	 sawing ¹ (m)
1.5 Ah	26
2.0 Ah	36
2.5 Ah	50
3.0 Ah	57
4.0 Ah	72
5.2 Ah	104
6.0 Ah	120
8.0 Ah	144

Test setup:

1) wooden board - chipboard 19 mm