


# Model 5392226A/5392227A/ 5392228A/5392229A

DK

GB

Brugsanvisning  
Instruction manual

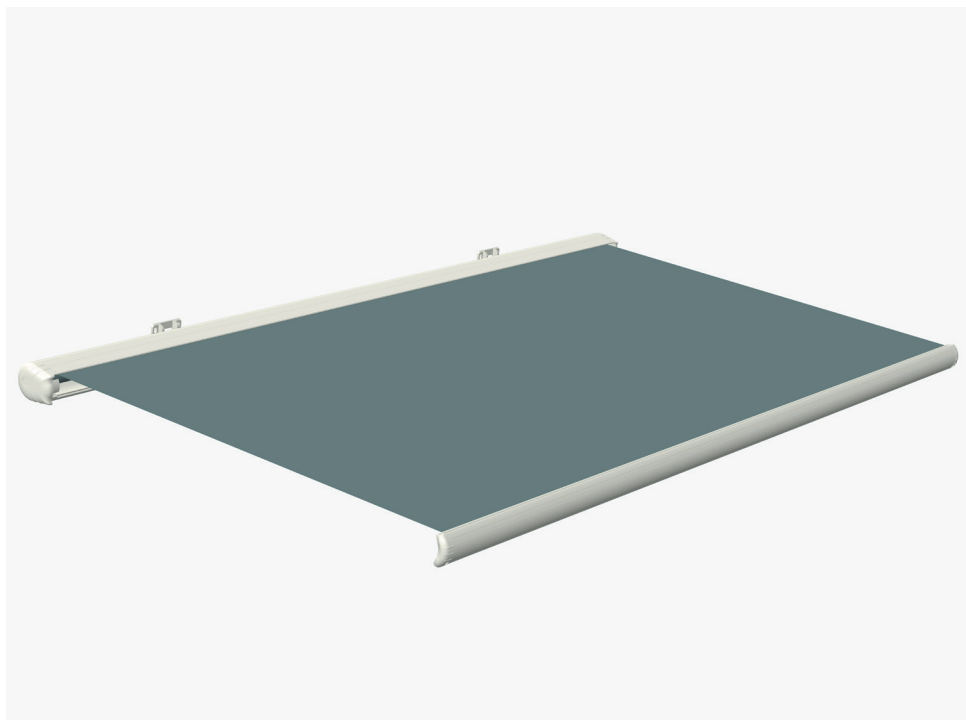

# MARKISE MED MOTOR

## Introduktion

For at du kan få mest mulig glæde af din nye markise med motor, beder vi dig gennemlæse denne brugsanvisning, før du tager markisen i brug. Vi anbefaler dig desuden at gemme brugsanvisningen, hvis du senere skulle få brug for at genopfriske din viden om markisens funktioner.

## Tekniske data

Model:	5392226A/5392227A/ 5392228A/5392229A
Dug:	Polyester
Indkapsling:	Helkassette
Hældning:	0-45°
Maks. vindhastighed:	8 m/s
Mål/vægt:	
350×300 cm	53,3 kg
480×300 cm	66,3 kg
Effekt:	191 W
Beskyttelsesklasse:	IP44
Batteri til fjernbetjening:	CR2450



## Særlige sikkerhedsforskrifter

Markisen er beregnet til at give skygge for solen. Den er ikke beregnet til overdækning ved nedbør.

Markisen må ikke være rullet ud, hvis det blæser mere end 8 sekundmeter.

Rul altid markisen ind, hvis den ikke skal bruges.

Markisen må ikke bruges i frostvejr.

Markisen må ikke bruges, hvis dens mekaniske dele ikke fungerer korrekt.

Sørg for, at monteringsstedet kan tåle belastningen af markisen.

Hæng ikke noget op i markisens stel.

Anbring ikke en tændt grill eller andre varmekilder eller steder med åben ild under markisen.

Markisens dug skal være stram, når den er rullet ud.

Dugen må ikke være våd, når den rulles ind.

Bemærk! Hvis du vil montere markisen på andet end en mur (af mursten, beton, gasbeton eller lignende), skal du selv købe skruer, der er beregnede til materialet på monteringsstedet!




Markisen må maksimalt rulles ud og ind 2 gange i træk, da motoren ellers kan blive overophedet. I tilfælde af overophedning slår en indbygget sikring motoren fra i cirka ½ time for at beskytte den.

## ADVARSEL!

Før markisen åbnes, skal alle beslag være monteret sikkert på væggen, og alle bolte skal være spændt korrekt. LUK ALTID markisen i stormvejr, blæsevejr, regn og når den ikke anvendes. I modsat fald kan det medføre personskafer og/eller materielle skader. Forlængerarmene står under højt tryk og kan også medføre alvorlige personskafer og materielle skader. Forsøg aldrig at reparere eller adskille disse.

## Markisens dele

1. Endestykke
2. Kasette
3. Motor
4. Arm
5. Dug
6. Forreste tværstang
7. Armlid
8. Vægbeslag
9. Ledning
10. Markiseenhed
11. Skabelon til huller
12. Håndsving
13. Justeringsnøgle
14. Fjernbetjening
15. Ekspansionsbolte (M10×110)
16. Knappen OP
17. Knappen STOP
18. Knappen NED
19. Batterirum

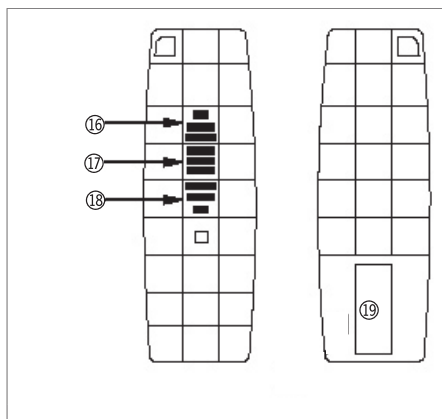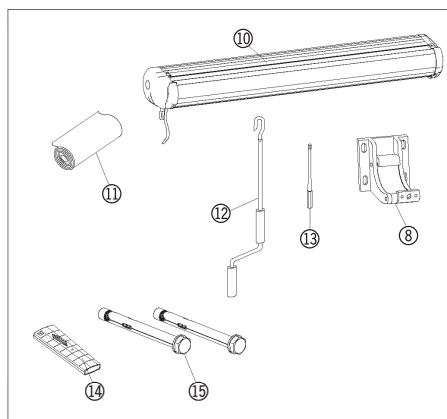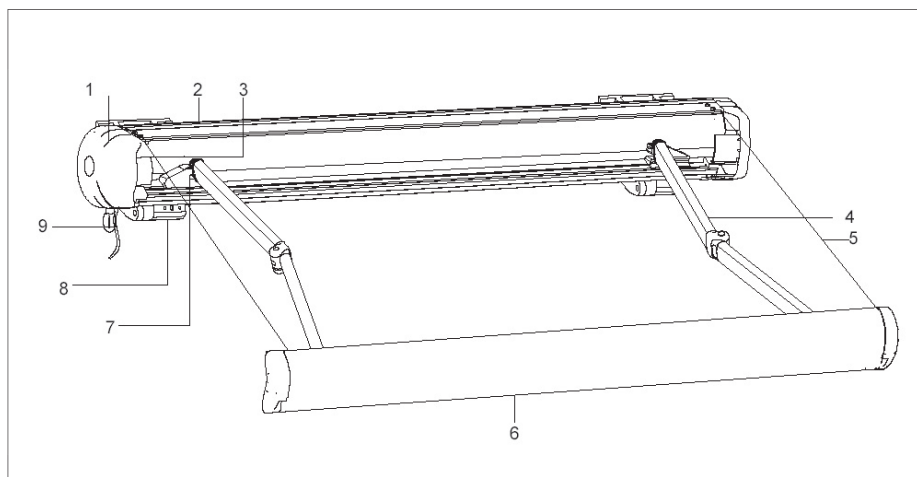


## Montering

Monteringen kræver en vis teknisk forståelse.

Vær tre personer om at montere markisen.

Selve montagen kan du selv klare, men vi gør opmærksom på, at den elektriske del af montagen skal udføres af en autoriseret el-installatør, da varen er leveret uden stikprop.

Markisen bør danne en vinkel på cirka 80 grader i forhold til muren, når den er slået ud. Monteringshøjden (C) skal beregnes som den ønskede højde yderst på markisen (A) plus  $0,17 \times$  markisens udfald (her  $0,17 \times 250 \text{ cm} = 43 \text{ cm}$ ).

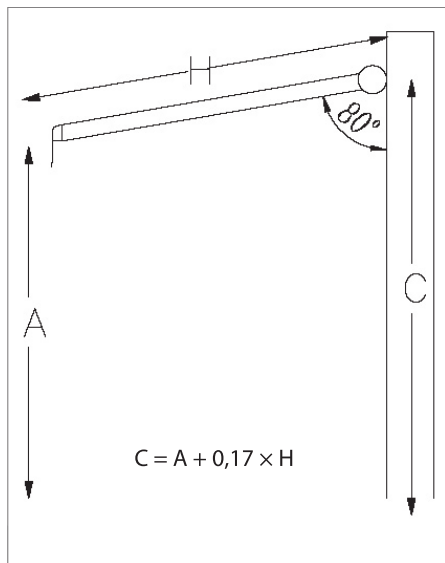


Hvis du i stedet ønsker en vinkel på 60° i forhold til muren, skal du erstatte konstanten 0,17 i beregningen med 0,50 for at få monteringshøjden.

Hvis du i stedet ønsker en vinkel på de maksimale 45° i forhold til muren, skal du erstatte konstanten 0,17 i beregningen med 0,71 for at få monteringshøjden.

Markisens laveste punkt bør være mindst 250 cm fra gulvet, når markisen er rullet ud.

Der skal være et frirum på 10 cm over og 60 cm på hver side af markisen, når den er monteret.

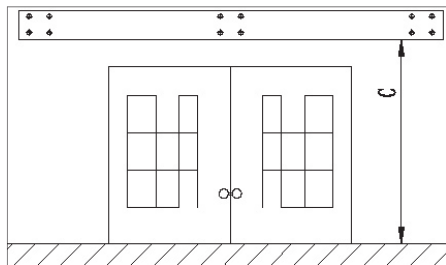

Rul skabelonen (11) ud, og sæt den vandret op på monteringsstedet.


Bor huller i muren til vægbeslagene.

Hullerne skal være 12 mm i diameter og 100 mm dybe.

Sæt ekspansionsboltene (15) ind i hullerne på vægbeslagene (8), og pres ekspansionsboltene ind i de borede huller.


Kontroller, at alle beslag er på en vandret linje i forhold til hinanden.

Spænd beslagene fast ved at stramme ekspansionsboltene med en svensknøgle.

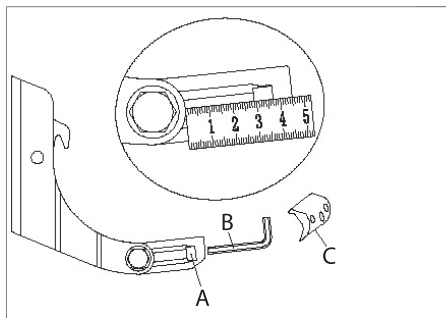



Skrue holderne (C) og boltene af beslagene. Løsn stilleskruerne (A) på beslagene med en sekskantnøgle (B), og træk støttepladen ud, så afstanden til beslaget er mindst 40 mm. Ved en afstand på 45 mm vil markisens vinkel være 80° i forhold til muren.

Bemærk! Støttepladerne skal indstilles ens på alle beslag.

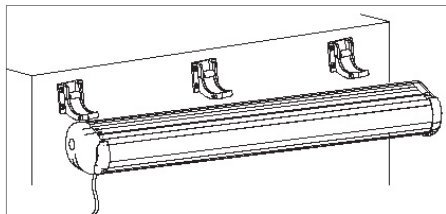

Der medfølger 2 beslag til markiser <4 m.  
Der medfølger 3 beslag til markiser >4 m.

Sæt markiseenheden (10) ind i beslagene.  
Spænd markisen fast i beslagene med holderne (C) og boltene (D). Spænd låsemøtrikkerne på beslagene.

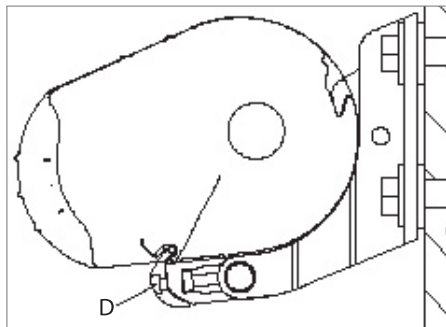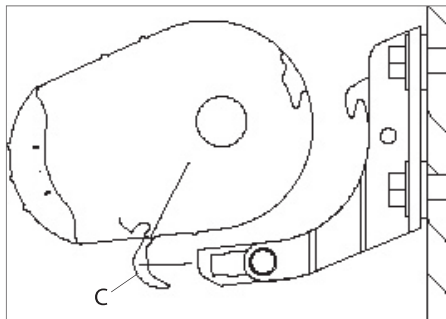

Kontroller med et vaterpas, at markisen er i vater. Hvis det ikke er tilfældet, skal du løse låsemøtrikkerne på vægbeslagene, dreje på stilleskruen, til markisen er i vater, og spænde låsemøtrikkerne igen.

Du kan på samme måde ændre markisens vinkel i forhold til muren.

Kontroller, at markisen sidder forsvarligt fast på monteringsstedet.


Slut markisens ledning (9) til et egnet strømudtag.

## Brug

Vigtigt! Brug kun fjernbetjeningen, hvis der er frit udsyn til markisen.

Tryk på knapperne NED (18) eller OP (16) på fjernbetjeningen (14) for at rulle markisen ud eller ind. Tryk på knappen STOP (17) for at stoppe markisens bevægelse.


Du kan indstille markisens yderpositioner ved at dreje på knapperne (E, F) med justeringsnøglen (13).

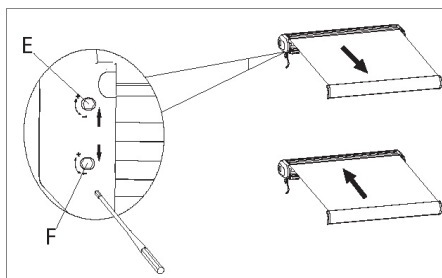

Den hvide knap (E) bestemmer den indrullede position for markisen.

Den røde knap (F) bestemmer den udrullede position for markisen.


Hvis markisen ikke er sluttet til strøm, kan du også betjene den manuelt: Sæt håndsvinget i øjet ved udvekslingen. Drej håndsvinget for at rulle markisen ud eller ind.

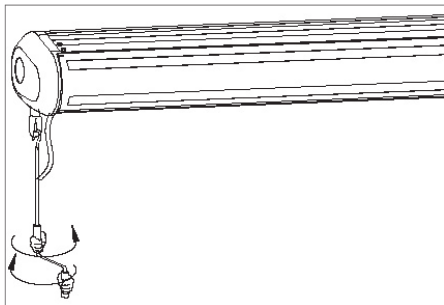



Når den forreste tværstang rører kassetten, må du ikke forsøge at rulle markisen længere ind!

### Korrekt og forkert brug

Forsøg ikke at rulle dugen længere ind, når den forreste tværstang (6) rører ved kassetten.

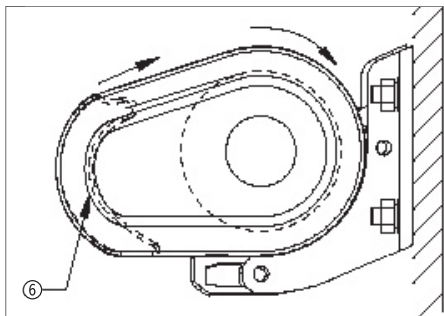

Dugen skal være stram og må ikke hænge, når markisen er rullet ud.

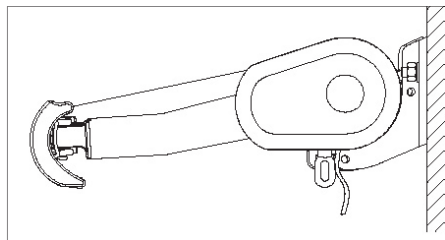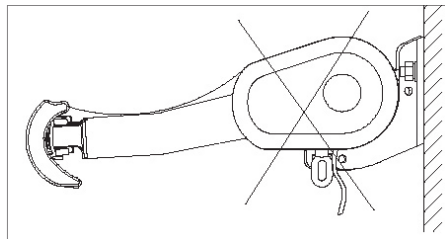

### Rengøring og vedligehold

Kontroller og smør udvekslingen med smørespray eller syrefri olie mindst hver 3. måned.

Tør markisens metaldele af med en hårdt opvredet klud.

Kontroller regelmæssigt, at markisen sidder forsvarligt fast på monteringsstedet, og at alle dele er fuldt funktionsdygtige.


Hvis markisen er tilsluttet strøm og ikke reagerer på fjernbetjeningen, skal du udskifte batteriet i fjernbetjeningen.

Husk at vende polerne korrekt.

## 1. Justering af yder-/inderpositioner

Du kan indstille markisens yderpositioner ved at dreje på knapperne (E, F) med medfølgende justeringsnøgle eller en sekskantsnøgle str. 4.

OBS! Man skal kun dreje en kvart omgang af gangen, så kan man høre motoren bevæge sig lige så stille.

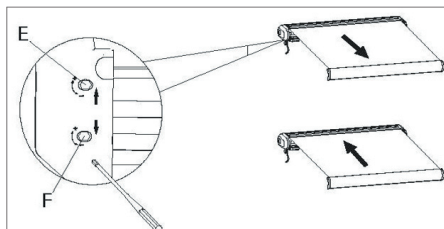

Den hvide knap (E) bestemmer den indrullede position for markisen.

Knappen drejes mod plus for at køre ind og mod minus for at køre ud.


(Hvis markisen står og brummer, når den er inde, skal man dreje på minus).

Den røde knap (F) bestemmer den udrullede position for markisen.

Knappen drejes mod plus for at køre ud og mod minus for at køre ind.

(Hvis dugen bliver slap, skal man køre den ind igen).


Hvis man drejer den mod minus, skal man køre markisen ind og ud med fjernbetjeningen for at se, hvordan justeringen er.

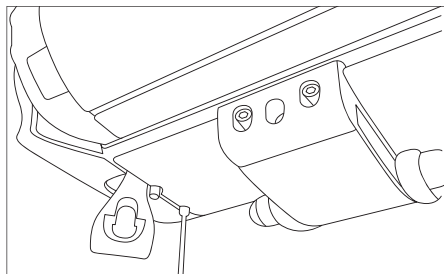

## 2. Justering af markisearme

For at denne justering kan foretages, SKAL punkt 1 være afklaret. Denne justering kræver 2 personer.



Rul markisen ud så den er ca. 40 cm åben. Tjek om armene har samme højde.

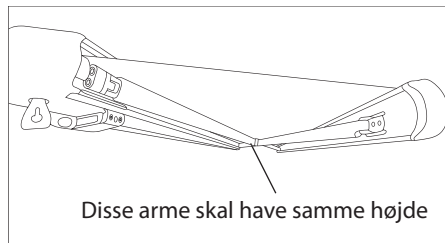

### Juster armene således:


Person 1 løfter den hængende arm op, så den er lidt over den anden arm, imens person 2 løsner skrue A og B.

Derefter strammes skrue A, indtil markisearmen har samme højde som den anden arm.

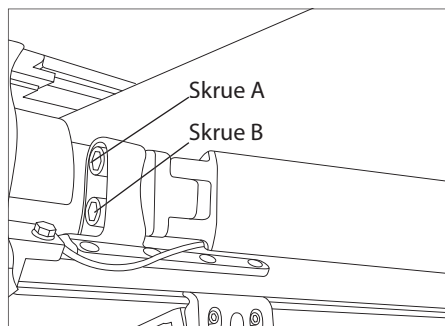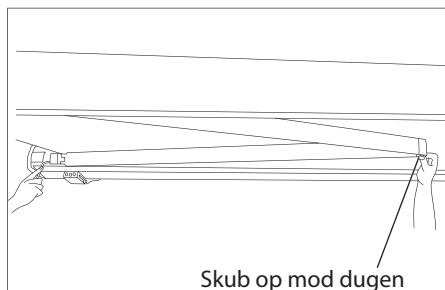


### 3. Justering af skævhed, når markisen er kørt helt ud

Før justering

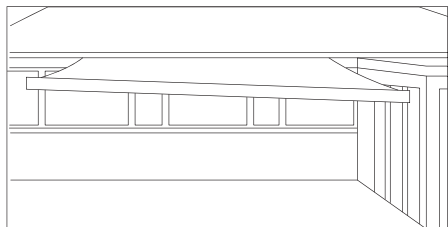

Efter justering

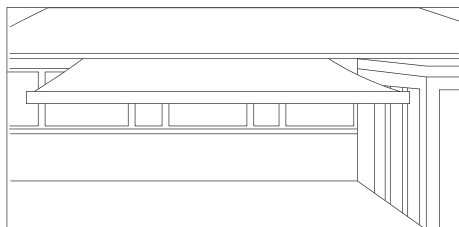


Udgangspunktet er, at punkt 2 er afklaret. Markisen skal kunne køre uhindret ind og ud af kassetten, inden nedenstående kan udføres.


Denne justering kræver 2 personer.

Kør markisen så langt ud, som den kan.

Løsn skruerne på begge sider af vægbeslaget i den side, som skal justeres.

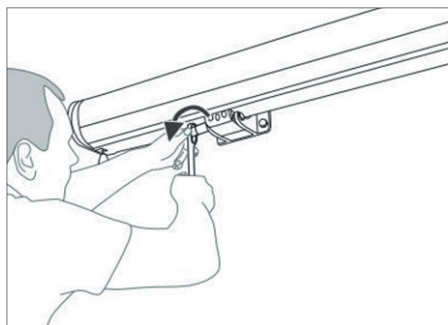


Figur 1

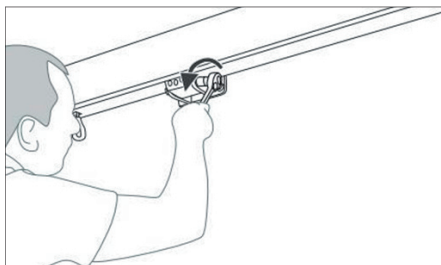

Figur 2

Person 1 løfter fronten af markisen opad til det ønskede niveau. Person 2 justerer skruen som vist nedenfor.

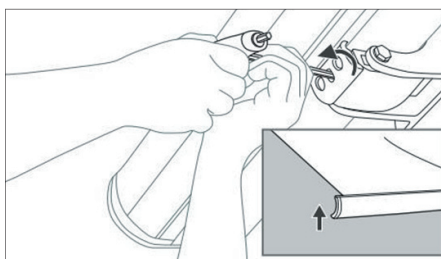

Figur 3

Skal markisen justeres nedad, skal der skrues med uret.

Når markisen er justeret, skrues skruerne fast igen på vægbeslaget (figur 1 og 2).

### Servicecenter

**Bemærk: Produktets modelnummer skal altid oplyses i forbindelse med din henvendelse.**

Modelnummeret fremgår af forsiden på denne brugsanvisning og af produktets typeskilt.

Når det gælder:

- Reklamationer
- Reservedele
- Returvarer
- Garantivarer
- [www.schou.com](http://www.schou.com)



# Ydeevnedeklaration nr.: 50377, 50378, 50379, 50380

DK

## 1. Entydig identifikationskode for produkttypen:

Art.-nr. 50377/5392226A, 50378/5392227A

Mål 3,5 x 3 m.

Art.-nr. 50379/5392228A, 50380/5392229A

Mål 4,8 x 3 m.

GB

## 2. Tilsigtet brug:

Markise med motor

## 3. Fabrikant:

Schou Company A/S

Nordager 31

DK-6000 Kolding

## 4. System eller systemer til vurdering og

kontrol af en konstant ydelse af

konstruktionsproduktet, som angivet i CPR, bilag V: System 4

## 5. Harmoniseret standard

EN 13561:2004+A1:2008

### Testhus

Navn INTERTEK

Adresse Intertek Testing Service Ltd. Shanghai

Plant 7, No. 6958 Daye Road, Fengxian District, Shanghai, China 201405

## 7. Angivet ydelse:

Væsentlige egenskaber	Ydelse	Harmoniseret teknisk specifikation
Vindmodstand	Klasse 1	EN 13561:2004+A1:2008
Vandlomme	Klasse 1	
Modstandskraft	Klasse 1	
Metalkomponenter	Klasse 4	

## 8. Ydeevnen for det produkt, som er identificeret ovenfor, opfylder de angivne ydelser.

Ydeevnedeklarationen er udfærdiget iht. Europa-Parlamentets og Rådets forordning (EU) nr. 305/2011 med ovennævnte fabrikant som eneansvarlig:


Underskrevet for og på vegne af producenten af:

Kolding 27.10.2021

Kirsten Vibeke Jensen, CSR Manager.

## EF-overensstemmelseserklæring

<b>Fabrikant:</b>	
<b>Firmanavn:</b>	Schou Company A/S
<b>Adresse</b>	Nordager 31
<b>Postnummer</b>	6000
<b>By</b>	Kolding
<b>Land</b>	Danmark
<b>erklærer herved, at produktet</b>	
<b>Produktidentifikation:</b>	Foldemarkiser. Model-nr.: 50379/5392228A, 50380/5392229A (4,8x3m) 50377/5392226A, 50378/5392227A (3,5x3m)
<b>er i overensstemmelse med bestemmelserne i følgende EF-direktiv(er) (inklusive alle gældende ændringer):</b>	
<b>Reference-nr.</b>	<b>Titel</b>
2006/42/EF	Maskindirektivet
2014/53/EU	Radioudstyrsdirektivet
2014/35/EU	Lavspændingsdirektivet
2011/65/EU	ROHS-direktivet
<b>Referencer af standarder og/eller tekniske specifikationer gældende for denne overensstemmelseserklæring, eller dele heraf:</b>	
<b>Harmoniseret standard nr.</b>	<b>Navn på standard</b>
Udkast EN 301 489-1 V2.2.0:2017	Elektromagnetisk kompatibilitetsstandard (EMC) for radioudstyr og tjenester; del 1: Generelle tekniske krav: Harmoniseret standard, der dækker vigtige krav i artikel 3.1(b) i Rådets direktiv 2014/53/EU og vigtige krav i artikel 6 i Rådets direktiv 2014/30/EU
Udkast EN 301 489-3 V2.1.1:2017	Elektromagnetisk kompatibilitetsstandard (EMC) for radioudstyr og tjenester; del 1: Generelle tekniske krav; Harmoniseret standard, der dækker vigtige krav i artikel 3.1(b) i Rådets direktiv 2014/53/EU og de vigtigste krav i artikel 6 i Rådets direktiv 2014/30/EU
EN 300 220-2 V3.1.1:2017	Kortrækkende netværksbaseret udstyr (SRD) til brug i frekvensområdet 25 MHz til 1 000 MHz; del 2: Harmoniseret standard, der dækker adgang til radiospektrum for ikke-specifikt radioudstyr
EN 55014-1:2006/A2:2011	Elektromagnetisk kompatibilitet (EMC). Krav til husholdningsapparater, elværktøj og lignende apparater. Emission
EN 55014-2:2015	Elektromagnetisk kompatibilitet (EMC). Krav til husholdningsapparater, elværktøj og lignende apparater. Immunitet. Produktfamiliestandard

EN 60335-2-97:2006-A12:2015	Elektriske apparater til husholdningsbrug o.l. Sikkerhed. Særlige bestemmelser for drev til rullende skodder, markiser, rullegardiner og lignende udstyr
EN 61000-3-2:2014	Elektromagnetisk kompatibilitet (EMC). Grænseværdier. Grænseværdier for emission af harmonisk strøm (indgangsstrøm til udstyret ≤ 16 A pr. fase)
EN 61000-3-3:2013	Elektromagnetisk kompatibilitet (EMC). Grænseværdier. Begrænsning af spændingsændringer, spændingsfluktuationer og flimrer i offentlige lavspændingsforsyningsnet for udstyr med mærkestrøm ≤ 16 A pr. fase og ikke underlagt regler om betinget tilslutning
EN 62233:2008	Metoder til måling af elektromagnetiske felter i husholdningsapparater og lignende med hensyn til eksponering af mennesker
EN 62479:2010	Vurdering af elektronisk og elektrisk laveffektudstyrs overensstemmelse med de grundlæggende restriktioner for personeksponering for elektromagnetiske felter (10 MHz-300 GHz)
<b>Andre standarder og/eller tekniske specifikationer:</b>	
<b>Standard eller teknisk procedure</b>	<b>Titel på standard eller teknisk procedure</b>
(1) Hvor det er muligt, skal der refereres til de gældende dele eller bestemmelser i standarden eller den tekniske specifikation.	
Kolding 25/02/2020  Kirsten Vibeke Jensen Product Safety Manager	

## Miljøoplysninger



Elektrisk og elektronisk udstyr (EEE) indeholder materialer, komponenter og stoffer, der kan være farlige og skadelige for menneskers sundhed og for miljøet, når affaldet af elektrisk og elektronisk udstyr (WEEE) ikke bortskaffes korrekt. Produkter, der er mærket med en "overkrydset skraldespand", er elektrisk og elektronisk udstyr. Den overkrydsede skraldespand symboliserer, at affald af elektrisk og elektronisk udstyr ikke må bortskaffes sammen med usorteret husholdningsaffald, men skal indsamles særskilt.

Produceret i P.R.C.

Fabrikant:  
Schou Company A/S  
Nordager 31  
DK-6000 Kolding

Alle rettigheder forbeholdes. Indholdet i denne vejledning må ikke gengives, hverken helt eller delvist, på nogen måde ved hjælp af elektroniske eller mekaniske hjælpemidler, f.eks. fotokopiering eller optagelse, oversættes eller gemmes i et informationslagrings- og -hentningssystem uden skriftlig tilladelse fra Schou Company A/S.

# AWNING WITH MOTOR

GB

## Introduction

To get the most out of your new awning with motor, please read through these instructions before use. Please also save the instructions in case you need to refer to them at a later date.

## Technical data

Model:	5392226A/5392227A/ 5392228A/5392229A
Fabric:	Polyester
Enclosure:	Full case
Incline:	0-45°
Max. wind speed:	8 m/s
Dimensions/weight:	
629152:	350×300 cm/53.3 kg
629153:	480×300 cm/66.3 kg
629154:	350×300 cm/53.7 kg
48352:	480×300 cm/72 kg
48353:	480×300 cm/72 kg
49150:	350×300 cm/ 53.7 kg
Voltage/frequency:	230 V ~ 50 Hz
Power rating:	
629152, 629153	191 W
629154, 48352, 48353, 49150	205 W
Protection class:	IP44
Battery for remote control:	CR2450



## Special safety instructions

The awning is designed to provide shade from the sun. It is not suitable as rain protection.

The awning must not be unrolled if the wind is blowing more than 8 m/s.

Always roll the awning up when not in use.

The awning must not be used in temperatures below zero degrees Celsius.

The awning must not be used if its mechanical parts are not working correctly.

Make sure that the mounting point can handle the weight of the awning.

Do not hang anything on the awning frame.

Do not place a lit barbecue or other heat source or naked flames under the awning.

The awning fabric must be taut when unrolled.

The fabric must not be wet when rolled up.

NB! If you mount the awning anywhere other than a wall (made of brick, concrete, porous concrete, etc.), you must buy screws suitable for the material at the mounting point!

Do not unroll or roll up the awning more than twice in a row, as the motor may otherwise overheat. In the event of overheating, a built-in safety feature switches off the motor for around ½ hour to protect it.




## WARNING!

Before the awning opens, all brackets must be securely mounted to the wall, and all the bolts must be properly tightened. ALWAYS CLOSE the awning in stormy weather, windy weather, rain and when not in use. Failure to do so can result in material damage and personal injury. The extension arms are under high pressure and can cause serious injury and property damage. Never try to repair or dismantle them.



## Main components

1. End piece
2. Case
3. Motor
4. Arm
5. Fabric
6. Front cross bar
7. Arm joint
8. Wall bracket
9. Cord
10. Awning unit
11. Template for holes
12. Hand crank
13. Adjustment tool
14. Remote control
15. Expansion bolts (M10×110)
16. UP button
17. STOP button
18. DOWN button
19. Battery compartment

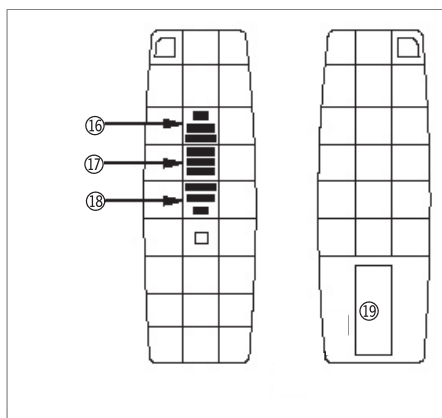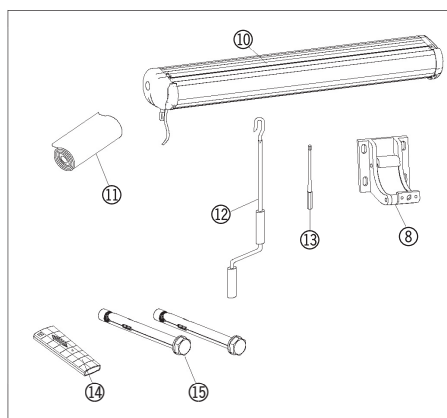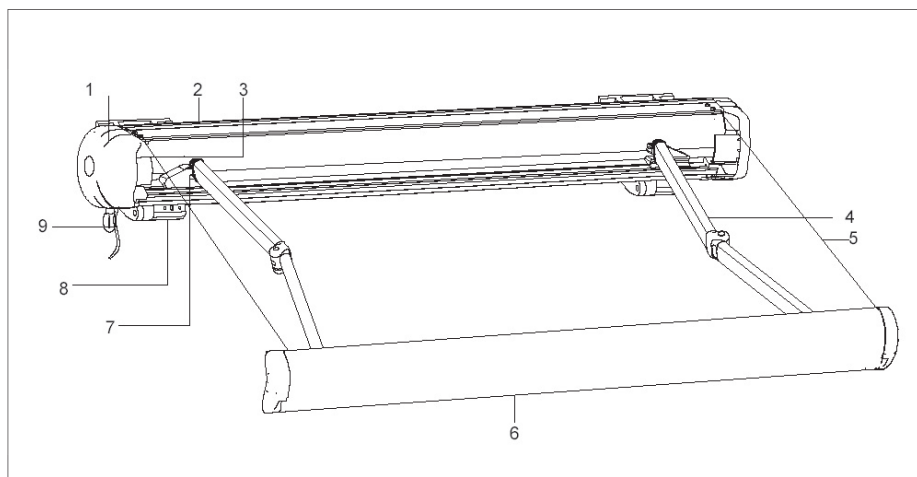


## Mounting

Mounting requires some technical understanding.

Three people are required to mount the awning.

You can do the actual mounting yourself, but please be aware that the electrical installation element must be carried out by an authorised electrician, as the product is delivered without a plug.

The awning should form an angle of about 80 degrees in relation to the wall when it is extended. The mounting height (C) should be calculated as the desired height of the outermost point of the awning (A) plus  $0.17 \times$  the awning's drop (here  $0.17 \times 250 \text{ cm} = 43 \text{ cm}$ ).

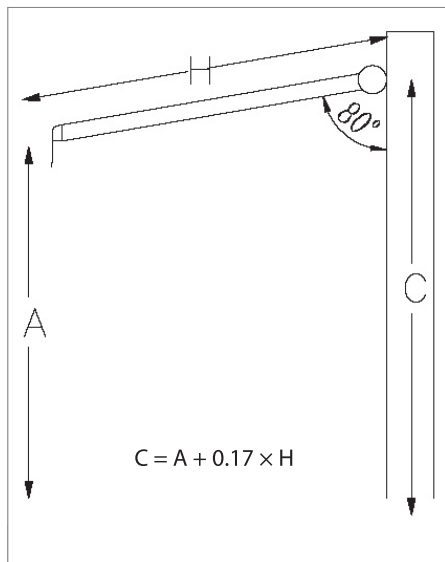


If instead you want an angle of  $60^\circ$  in relation to the wall, replace the constant of 0.17 in the calculation with 0.50 to get the mounting height.

If instead you want an angle of maximum  $45^\circ$  in relation to the wall, replace the constant of 0.17 in the calculation with 0.71 to get the mounting height.

The lowest point of the awning should be at least 250 cm from the floor when it is unrolled.

There must be a clear space of 10 cm above and 60 cm on each side of the awning once it is fitted.

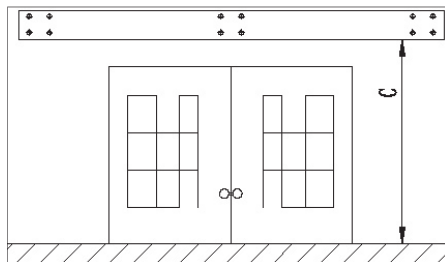


Unroll the template (11) and place it horizontally on the wall where the awning will go.

Drill holes into the wall for the wall brackets. The holes must be 12 mm in diameter and 100 mm deep.

Insert the expansion bolts (15) into the holes on the wall brackets (8) and press the expansion bolts into the drilled holes.


Check that all brackets are in a horizontal line in relation to each other.

Tighten the brackets by tightening the expansion bolts with a spanner.

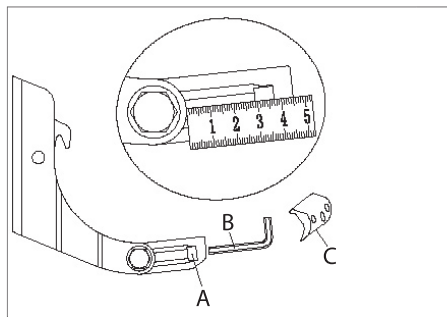

Unscrew the holders (C) and bolts from the brackets. Loosen the adjustment screws (A) on the brackets using an Allen key (B) and pull the support plate out so that the distance to the bracket is at least 40 mm. At a distance of 45 mm, the angle of the awning to the wall will be 80°.



**NB!** The support plates must be lined up on all the brackets.

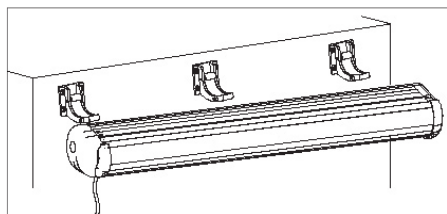

For awnings <4 m, 2 brackets are included.

For awnings >4 m, 3 brackets are included.

Insert the awning unit (10) into the brackets. Tighten the awning securely in the brackets with the holders (C) and bolts (D). Tighten the lock nuts on the brackets.

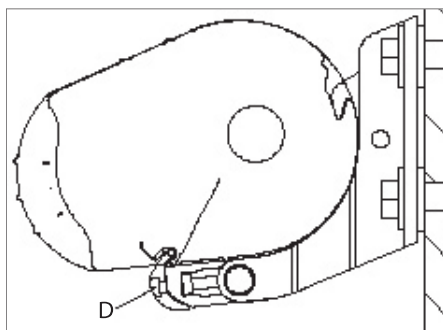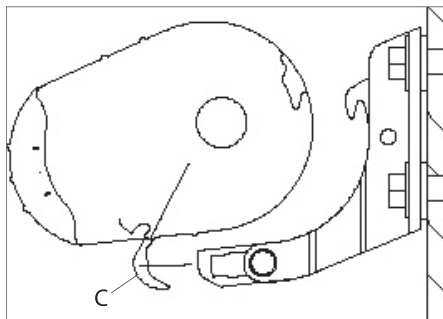

Use a spirit level to check that the awning is straight. If this is not the case, loosen the lock nuts on the wall brackets, turn the adjustment screw until the awning is straight and re-tighten the lock nuts.

You can change the angle of the awning in relation to the wall in the same way.

Check that the awning is securely mounted.


Connect the awning cord (9) to a suitable power outlet.

## Use

Important! Only use the remote control if you have an unobstructed view of the awning.

Press the DOWN (18) or UP (16) buttons on the remote control (14) to unroll or roll up the awning. Press the STOP button (17) to stop the awning moving.


You can adjust the outer positions of the awning by turning the buttons (E, F) using the adjustment tool (13).

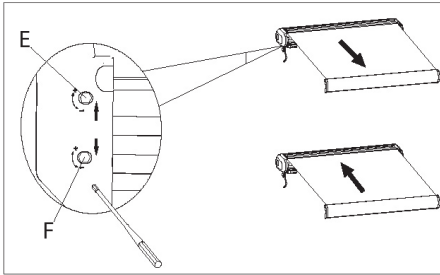

The white button (E) determines the rolled up position for the awning.

The red button (F) determines the unrolled position for the awning.


If the awning is not connected to power, you can also operate it manually: Insert the hand crank in the eye by the interchange. Turn the hand crank to unroll or roll up the awning.

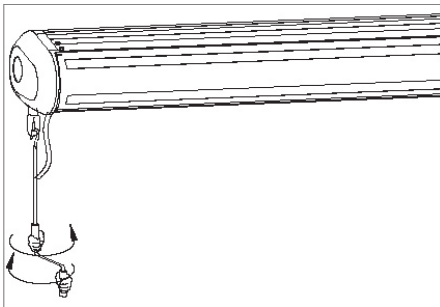



Once the front cross bar touches the case, do not try to roll the awning in any further!

## Correct and incorrect use

Do not try to roll the fabric any further in once the front cross bar (6) touches the case.

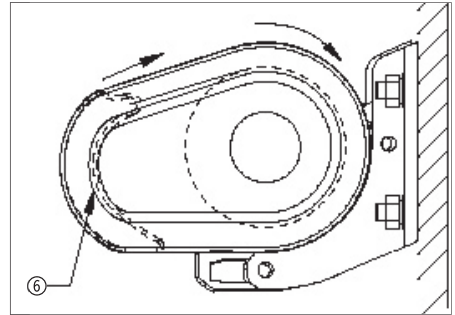

The fabric must be taut and must not hang when the awning is unrolled.

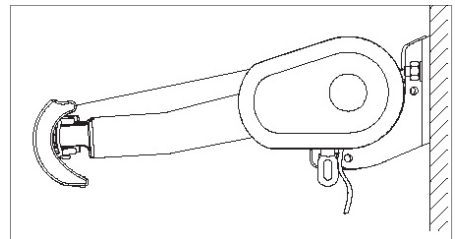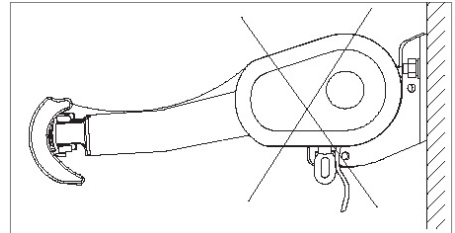



## Cleaning and maintenance

Check and lubricate the interchange with lubricating spray or acid-free oil at once every 3 months.

Wipe the metal parts of the awning with a well-wrung cloth.

Check regularly that the awning is securely mounted and that all the parts are fully functional.

If the awning is connected to power and does not respond to the remote control, replace the remote control battery.

Remember to check that the battery poles are correctly aligned.

## Service centre

**Note: Please quote the product model number in connection with all inquiries.**

The model number is shown on the front of this manual and on the product rating plate.


For:

- Complaints
- Replacement parts
- Returns
- Guarantee issues
- [www.schou.com](http://www.schou.com)

## 1. Adjusting the outer/inner positions

You can adjust the outer positions of the awning by turning the buttons (E, F) using the adjustment tool provided or a size 4 Allen key.

NB! You only need to turn a quarter of a revolution at a time, then you can hear the engine moving just as quietly.

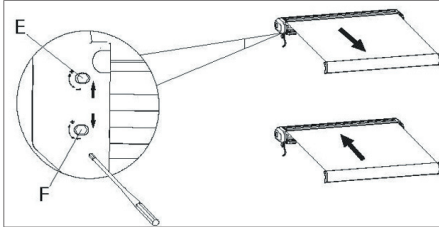

The white button (E) determines the rolled-up position for the awning.

Turn the button towards the plus symbol to roll the awning in and towards the minus symbol to roll it out.


(If the awning stops and buzzes when it is in, turn to the minus symbol.)

The red button (F) determines the extended position for the awning.

Turn the button towards the plus symbol to roll the awning out and towards the minus symbol to roll it in.

(If the awning fabric becomes slack, roll it in again).


If you turn it towards the minus symbol, run the awning in and out using the remote control to see what the adjustment is like.

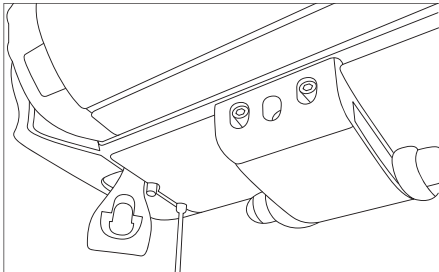

## 2. Adjusting the awning arms

You MUST have completed point 1 in order to make this adjustment. This adjustment requires 2 people.



Roll out the awning so that it is open about 40 cm. Check if the arms are the same height.

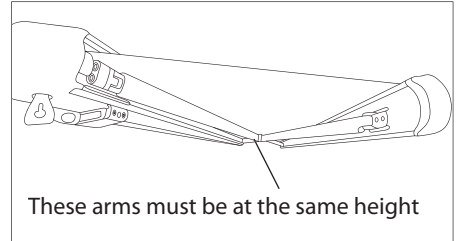

### Adjust the arms as follows:


Person 1 lifts the hanging arm up so that it is slightly above the other arm, while person 2 loosens screws A and B.

Then tighten screw A until the awning arm is the same height as the other arm.

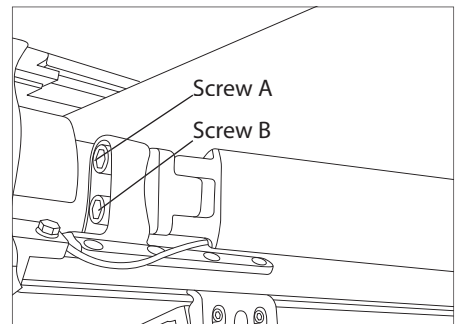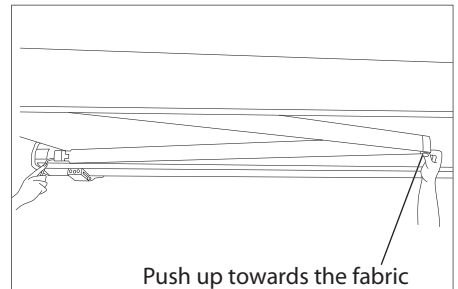


### 3. Adjusting misalignment when the awning is fully extended

Before adjustment

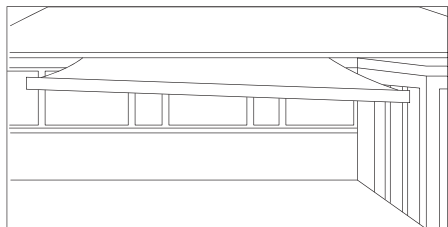

After adjustment

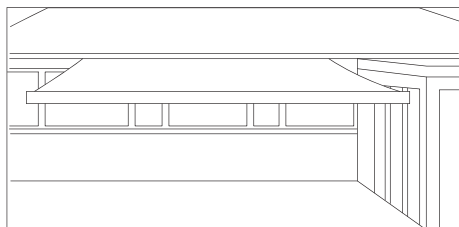

The starting point is that point 2 has been completed. The awning must be able to run in and out of the casing unhindered before the following can be carried out.

This adjustment requires 2 people.

Run the awning as far out as it will go.

Loosen the screws on both sides of the wall bracket on the side to be adjusted.

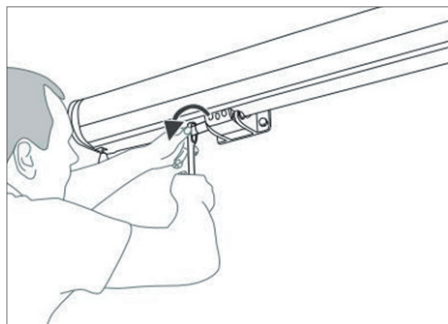


Figure 1

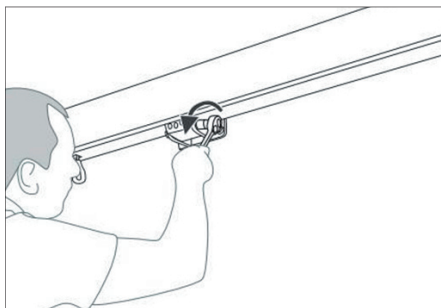


Figure 2

Person 1 lifts the front of the awning upwards to the desired level. Person 2 adjusts the screw as shown below.

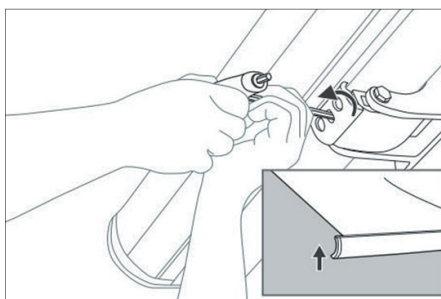


Figure 3

If you want to adjust the awning downwards, unscrew it clockwise.

**Once the awning has been adjusted, retighten the screws on the wall bracket (figures 1 and 2).**

# Declaration of Performance No: 50377, 50378, 50379, 50380

## 1. Unique identification code of the product type:

Item no. 50377/5392226A, 50378/5392227A      Size 3,5 x 3 m.  
Item no. 50379/5392228A, 50380/5392229A      Size 4,8 x 3 m.

2. Intended use:      Motor Awning

3. Manufacturer:      Schou Company A/S  
Nordager 31  
DK-6000 Kolding

4. System of assessment and verification of constancy of performance of the construction product as set out in Annex V:      System 4

5. Harmonized standard      EN 13561:2004+A1:2008

### Test house

Name      INTERTEK

Address      Intertek Testing Service Ltd. Shanghai  
Plant 7, No. 6958 Daye Road, Fengxian District, Shanghai, China 201405

## 7. Declared performances:

Essential characteristics	Performance	Harmonized technical specification
Wind Resistance	Class 1	EN 13561:2004+A1:2008
Water Pocket	Class 1	
Endurance	Class 1	
Metal components	Class 4	

8. The performance of the product identified above is in conformity with the set of declared performances. This declaration of performance is issued , in accordance with Regulation (EU) No 305/2011, under the sole responsibility of the manufacturer identified above:

Signed for and on behalf of manufacturer by:

Kolding 27.10.2021



Kirsten Vibeke Jensen, CSR Manager.


## EC Declaration of Conformity

DK

GB

<b>Manufacturer:</b>	
<b>Company name</b>	Schou Company A/S
<b>Address</b>	Nordager 31
<b>Postal code</b>	6000
<b>City</b>	Kolding
<b>Country</b>	Denmark
<b>herewith declares that the product</b>	
<b>Product identification:</b>	Folding Arm awnings. Model no.: 48352, 48353, 629153 (4,8 x 3 m) 49150, 629152, 629154 (3,5 x 3m)
<b>is in conformity with the provisions of the following EC directive(s) (including all applicable amendments):</b>	
<b>Reference no.</b>	<b>Title</b>
2006/42/EC	Machinery Directive
2014/53/EU	Radio Equipment Directive (RED)
2014/35/EU	The Low Voltage Directive
2011/65/EU	ROHS Directive
<b>References of standards and/or technical specifications applied for this declaration of conformity, or parts thereof:</b>	
<b>Harmonized Standard No.</b>	<b>Title of the standard</b>
Draft EN 301 489-1 V2.2.0:2017	ElectroMagnetic Compatibility (EMC) standard for radio equipment and services; Part 1: Common technical requirements: Harmonised Standard covering the essential requirements of article 3.1(b) of Directive 2014/53/EU and the essential requirements of article 6 of Directive 2014/30/EU
Draft EN 301 489-3 V2.1.1:2017	ElectroMagnetic Compatibility (EMC) standard for radio equipment and services; Part 1: Common technical requirements; Harmonised Standard covering the essential requirements of article 3.1(b) of Directive 2014/53/EU and the essential requirements of article 6 of Directive 2014/30/EU
EN 300 220-2 V3.1.1:2017	Short Range Devices (SRD) operating in the frequency range 25 MHz to 1 000 MHz; Part 2: Harmonised Standard for access to radio spectrum for non specific radio equipment
EN 55014-1:2006/A2:2011	Electromagnetic compatibility. Requirements for household appliances, electric tools and similar apparatus. Emission
EN 55014-2:2015	Electromagnetic compatibility. Requirements for household appliances, electric tools and similar apparatus. Immunity. Product family standard
EN 60335-2-97:2006-A12:2015	Household and similar electrical appliances. Safety. Particular requirements for drives for rolling shutters, awnings, blinds and similar equipment



EN 61000-3-2:2014	Electromagnetic compatibility (EMC). Limits. Limits for harmonic current emissions (equipment input current $\leq 16$ A per phase)
EN 61000-3-3:2013	Electromagnetic compatibility (EMC). Limits. Limitation of voltage changes, voltage fluctuations and flicker in public low-voltage supply systems, for equipment with rated current $\leq 16$ A per phase and not subject to conditional connection
EN 62233:2008	Measurement methods for electromagnetic fields of household appliances and similar apparatus with regard to human exposure
EN 62479:2010	Assessment of the compliance of low power electronic and electrical equipment with the basic restrictions related to human exposure to electromagnetic fields (10 MHz to 300 GHz)
<b>Other standards and/or technical specifications:</b>	
<b>Standard or technical procedure</b>	<b>Title of the standard or technical procedure</b>
<b>(1) Where appropriate, the applicable parts or clauses of the standard or the technical specification shall be referenced.</b>	
Kolding 25/02/2020  Kirsten Vibeke Jensen Product Safety Manager	

## Environmental information



Electrical and electronic equipment (EEE) contains materials, components and substances that may be hazardous and harmful to human health

and the environment if waste electrical and electronic equipment (WEEE) is not disposed of correctly. Products marked with a crossed-out wheeled bin are electrical and electronic equipment. The crossed-out wheeled bin indicates that waste electrical and electronic equipment must not be disposed of with unsorted household waste, but must be collected separately.

Manufactured in P.R.C.

Manufacturer:  
Schou Company A/S  
Nordager 31  
DK-6000 Kolding

All rights reserved. The content of this manual may not be reproduced, either in full or in part, in any way by electronic or mechanical means, e.g. photocopying or publication, translated or saved in an information storage and retrieval system without written permission from Schou Company A/S.