





# Manual innstallasjon bad


## Installasjonsanvisning

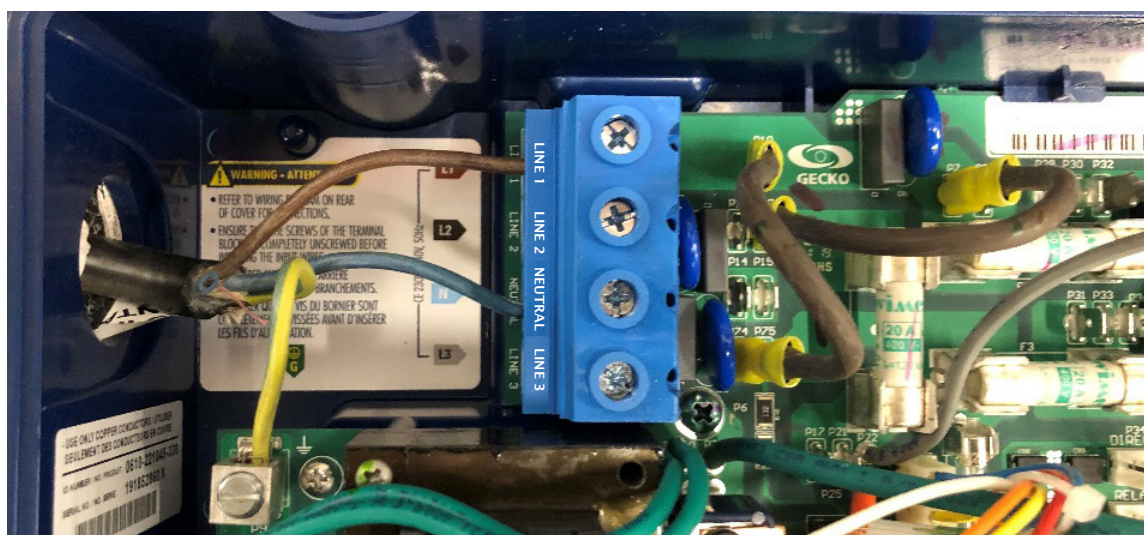


**En fas 400v/230v med null, jumpers P10-P74, P7-P13**

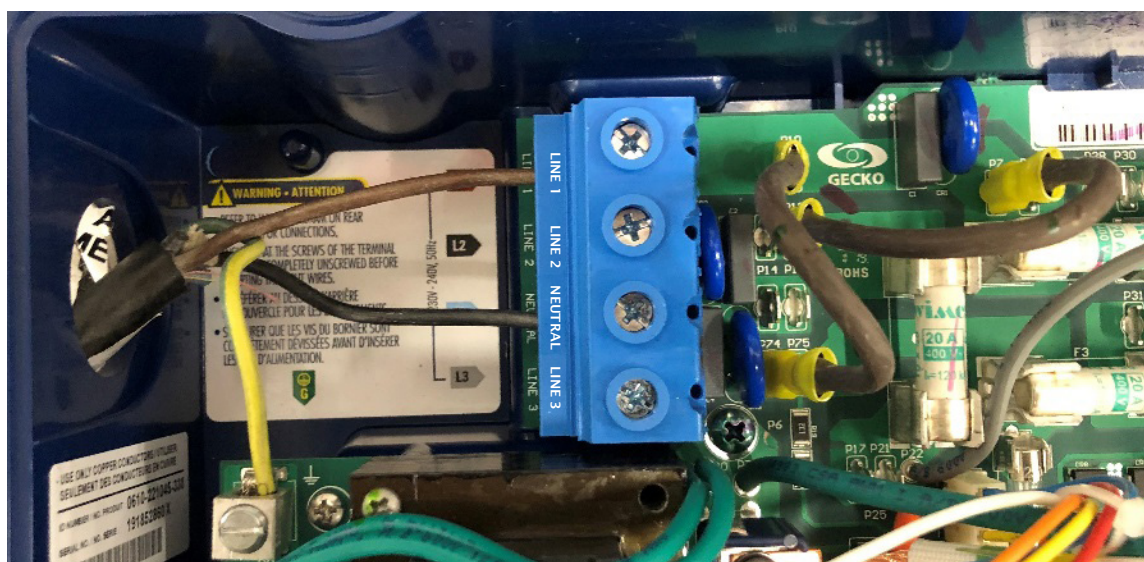


**En fas 230v uten null, jumpers P10-P74, P7-P13**

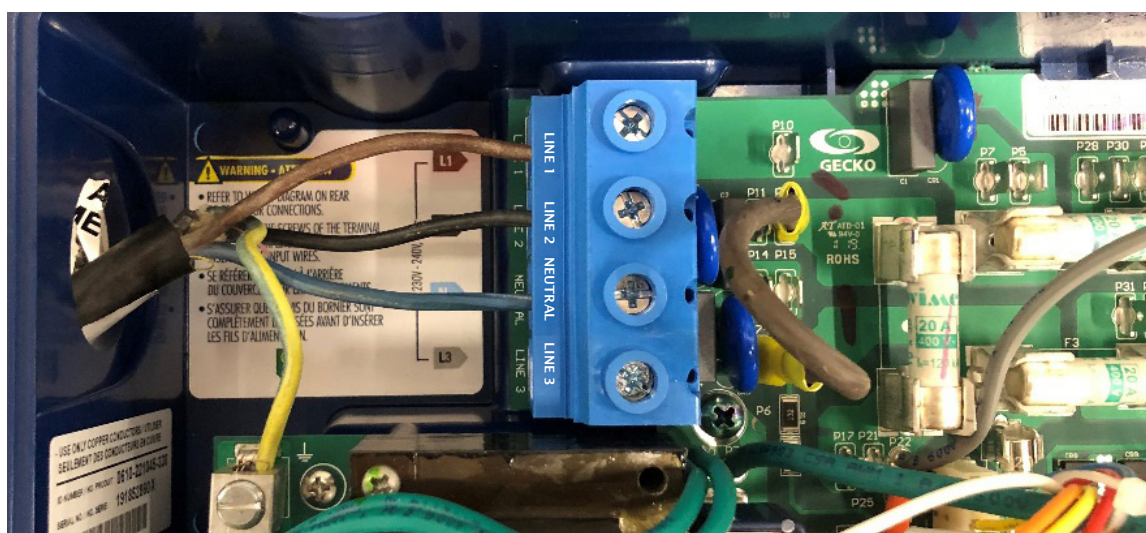


**To fas 400v/230v med null, jumpers P13-P74**

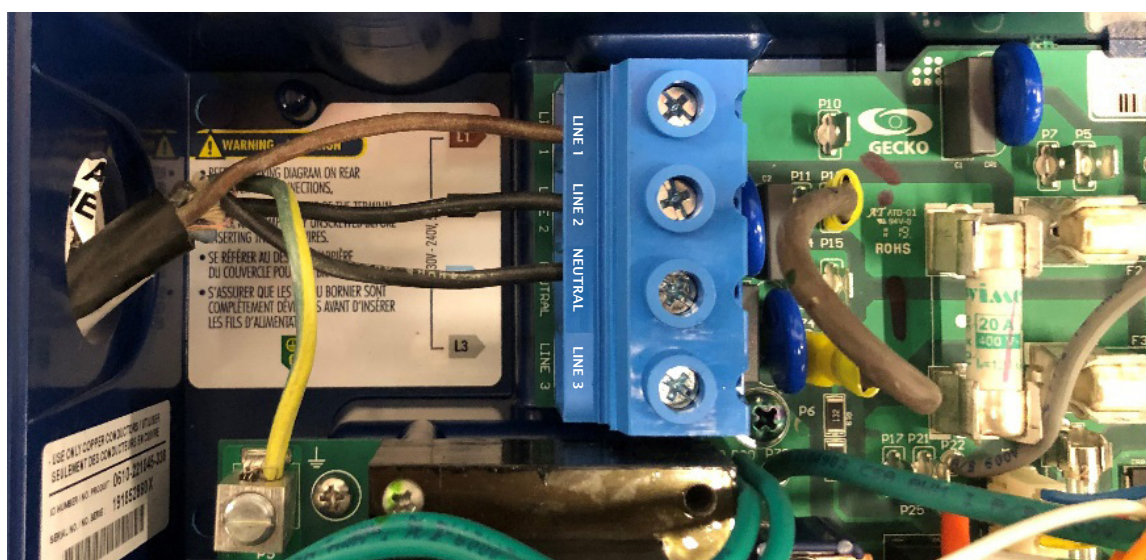

**To fas 230v uten null, jumpers P13-P74**

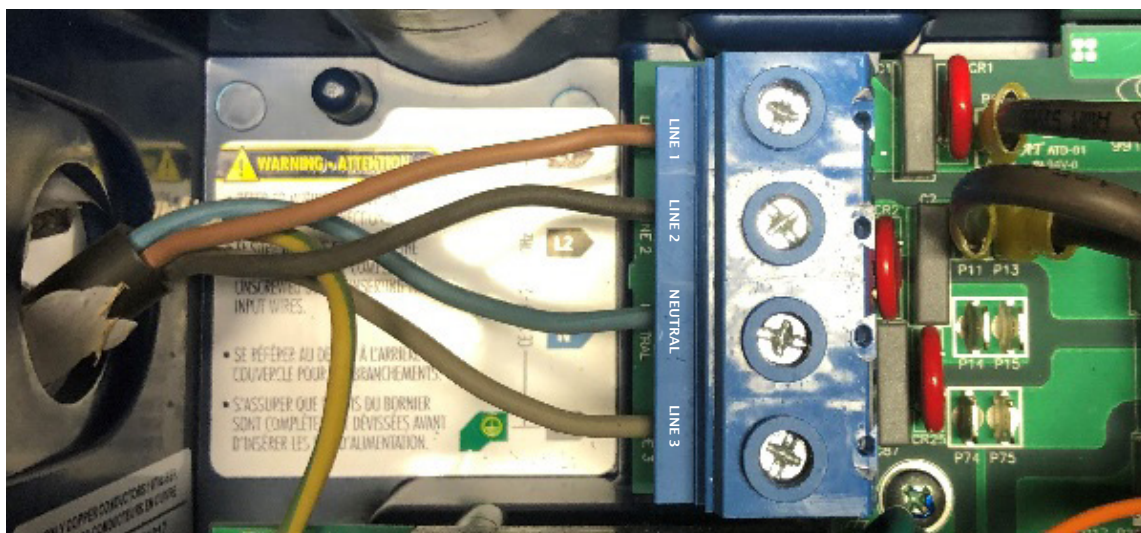

**Tre fas 400v/230v med null, jumpers P7-P10, P11-P13**

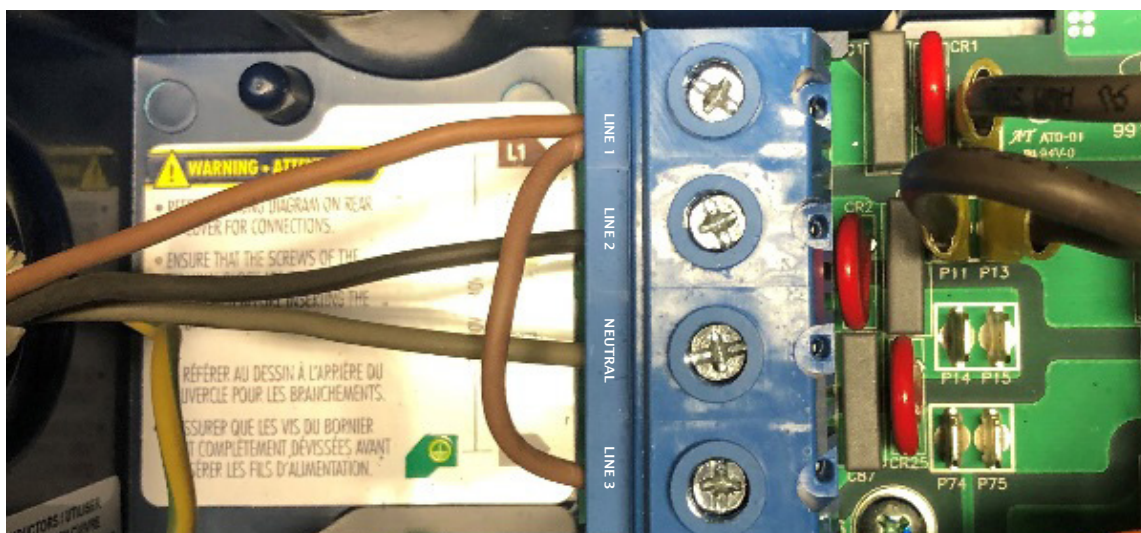

**Tre fas 230v uten null, jumpers P7-P10, P11-P13**

## LINE INPUT CONNECTION

# OF PHASE CONNECTED	LINE INPUT CONNECTION	JUMPERS (BROWN WIRES)	
1	L 1 - N - G	P10 - P74	P7 - P13
2	L 1 - L 2 - N - G	P13 - P74	
3	L 1 - L 2 - N - L 3 - G	P7 - P10	P11 - P13

**Bygning/jumper posisjon samt hvilken innkoblingsplint som skal brukes (3 fas ved levering)**

### 4- Select breaker current

Specify the current rating and the number of phases of the RCD used to ensure safe and efficient current mangement (and no RCD trippings).



Press and hold the **Program** key for 20 seconds until you access the breaker setting menu.

**Note:** For the **Color keypad series**, select **Settings menu**, go into **Electrical config** and choose Input current.



#### Current setting for each phase setting

# of phases	Current setting range
1	10 to 48 A
2	10 to 20 A
3	10 to 16 A

Choose the number of phases supplying your spa (1-3). Use the **Up/Down** key to select the desired value. Then press the **Program** key to confirm the selection.



The values displayed by the system correspond to the maximum amperage capacity of the RCD.



Use the **Up/Down** key to select the desired value. Then press the **Program** key to confirm the selection.

**Note:** If the keypad does not have the **Program** or **Filter** key, use the **Light** key instead.

For more information, see our website: [www.geckoalliance.com](http://www.geckoalliance.com)

**Endre antall fas i display (3 fas ved levering)**

[illegible]



