


### Adjustable Diffuser Screw


Turn screw to adjust spray from powerful jet to mist

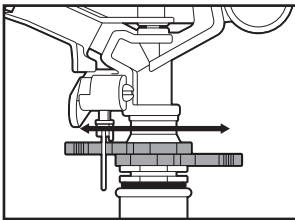

### Adjustable Collars

Set the collars for desired part circle coverage (5-360°)


5-360°

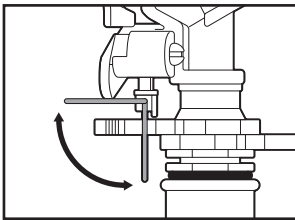

### Adjustable From Full To Part Circle



Flip lever up for full circle (360°)

360°

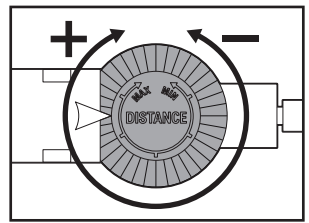

### Adjustable Deflector

Adjust diffuser screw for spray distance control

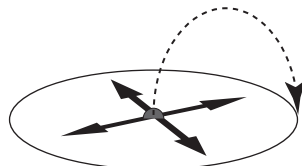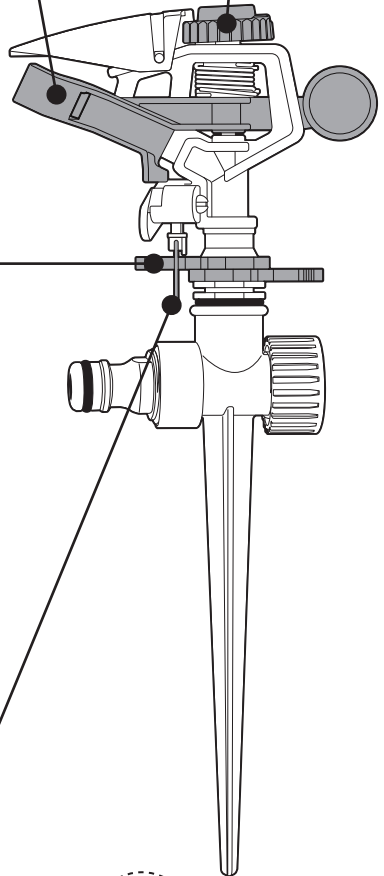

12M