



# Einhell

# EXPERT



Cordless Pruning Saw

**GE-GS 18/150 Li-Solo**

**Item No.: 3408290**

Ident No.: 21011

Bar Code: 400682566649

The Einhell GE-GS 18 Li - Solo cordless tree pruning saw is a reliable helper in the garden. Thanks to its high-quality features the cordless tree pruning saw with a blade length of 150 millimeters will even cut through very thick branches with diameters of up to 90 millimeters effortlessly. The saw blade on the Einhell cordless tree pruning saw can be changed quickly and easily because no tools are required to do so. The removable branch handle enables branches to be cut easily in every situation and therefore contributes to tireless working and a perfectly firm hold. The GE-GS 18 Li – Solo cordless tree pruning saw is equipped with a high-quality KWB saw blade "Made in Switzerland". The battery and charger are available separately.

## Features & Benefits

- Member of the Power X-Change family, 1x 18V battery required
- Reliable helper for sawing branches (trees and bushes)
- Effortless cutting of branches up to 10 cm thickness
- Tool-free, easy saw blade change
- Cover of the saw blade holder for protection
- Incl. branch handle for easy and one-handed sawing
- Quick and easy remove of branch handle
- Vibration-decoupled battery holder to protect the battery
- Softgrip for comfortable working and perfect grip
- Belt clip for optimal working comfort
- Incl. 2x kwb quality saw blade "Made in Switzerland"
- Supplied without battery and without charger (sold separately)




## Technical Data

- Saw blade length 150 mm
- Cutting depth without branch handle 100 mm
- Cutting depth with branch handle 80 mm

## Logistic Data

- Product weight (kg) 1.14
- Gross weight (kg) 1.9
- Dimensions single packaging 378 x 130 x 115 mm
- Pieces per export carton 6 Pieces
- Gross weight of export carton 11.9 kg
- Container quantity (20"/40"/40"HC) 4200 | 8400 | 9240

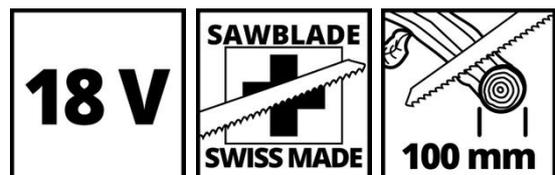

## Available as special accessories



2x 3,0Ah & Twincharger Kit  
PXC-Starter-Kit  
Item No.: 4512083  
Bar Code: 4006825638509  
Einhell Accessory



18V 4-6Ah Multi-Ah PXC Plus  
Battery  
Item No.: 4511502  
Bar Code: 4006825644210  
Einhell Accessory



18V 2,5Ah PXC Starter Kit  
PXC-Starter-Kit  
Item No.: 4512097  
Bar Code: 4006825646962  
Einhell Accessory



18V 2,0Ah Power X-Change  
Battery  
Item No.: 4511395  
Bar Code: 4006825610369  
Einhell Accessory



18V 4,0Ah Power X-Change 1  
Battery  
Item No.: 4511396  
Bar Code: 4006825610376  
Einhell Accessory



18V 4,0Ah PXC Starter Kit 1  
PXC-Starter-Kit  
Item No.: 4512042  
Bar Code: 4006825613704  
Einhell Accessory



2x2 Power X-Quattrocharger 4A  
Charger  
Item No.: 4512102  
Bar Code: 4006825649536  
Einhell Accessory



18V 2,5Ah Power X-Change  
Battery  
Item No.: 4511516  
Bar Code: 4006825650518  
Einhell Accessory



Power X-Fastcharger 4A  
Charger  
Item No.: 4512103  
Bar Code: 4006825650228  
Einhell Accessory



18V 5,2Ah Power X-Change Plus  
Battery  
Item No.: 4511437  
Bar Code: 4006825616606  
Einhell Accessory



2x 5,2Ah & Twincharger Kit  
PXC-Starter-Kit  
Item No.: 4512108  
Bar Code: 4006825652376  
Einhell Accessory



Power X-Twincharger 3A  
Charger  
Item No.: 4512069  
Bar Code: 4006825629729  
Einhell Accessory



18V Battery Charger 3,0A - PXC  
Charger  
Item No.: 4514095  
Bar Code: 4006825655292  
Einhell Accessory



Power X-Car Charger 3A  
Charger  
Item No.: 4512113  
Bar Code: 4006825655377  
Einhell Accessory



2x 4,0Ah & Twincharger Kit 1  
PXC-Starter-Kit  
Item No.: 4512112  
Bar Code: 4006825655766  
Einhell Accessory



2x 18V 2,5Ah PXC-Twinpack CB  
Battery  
Item No.: 4511524  
Bar Code: 4006825656206  
Einhell Accessory



2x 18V 5,2Ah PXC-Twinpack  
Battery  
Item No.: 4511526  
Bar Code: 4006825656695  
Einhell Accessory



5,2Ah & 4A Fastcharger  
PXC-Starter-Kit  
Item No.: 4512114  
Bar Code: 4006825656787  
Einhell Accessory



2x18V 4,0Ah PXC-Twinpack CB 1  
Battery  
Item No.: 4511489  
Bar Code: 4006825638578  
Einhell Accessory



18V 2,0Ah PXC Starter Kit  
PXC-Starter-Kit  
Item No.: 4512040  
Bar Code: 4006825613681  
Einhell Accessory



18V 4,0Ah Power-X-Change Plus  
Battery  
Item No.: 4511553  
Bar Code: 4006825660869  
Einhell Accessory



Power X-Boostcharger 6A  
Charger  
Item No.: 4512064  
Bar Code: 4006825629019  
Einhell Accessory



18V 3,0Ah Power X-Change Plus  
Battery  
Item No.: 4511501  
Bar Code: 4006825644197  
Einhell Accessory



Power X-Caravan Charger 3A  
Charger  
Item No.: 4512136  
Bar Code: 4006825664010  
Einhell Accessory



18V 3,0 Ah Power-X-Change 2  
Battery  
Item No.: 4511341  
Bar Code: 4006825590593  
Einhell Accessory



18V 5-8Ah Multi-Ah PXC Plus  
Battery  
Item No.: 4511600  
Bar Code: 4006825665055  
Einhell Accessory



18V 4-6Ah & 6A Boostcharger  
PXC-Starter-Kit  
Item No.: 4512143  
Bar Code: 4006825667653  
Einhell Accessory

# Battery-Running-Times



One Battery for All

cutting<sup>1</sup>  
(pieces)

1.5 Ah	70
2.0 Ah	90
2.5 Ah	115
3.0 Ah	140
4.0 Ah	180
5.2 Ah	240
6.0 Ah	280
8.0 Ah	360

Test setup:

1) wood - round wood Ø 60 mm