

DET SNABBASTE SÄTTET ATT LADDA DITT RYOBI 18V BATTERI!

60
min

50
min

40
min

25
min

15
min

1.3 Ah **1.5 Ah** **2.5 Ah** **4.0 Ah** **5.0 Ah**

