



Connect the thermostat according to the connection diagram.

The screen of the heating cable must be connected to the earth conductor of the power supply cable by using a separate connector.

Note: Always install the floor sensor in a conduit in the floor. The sensor is provided together with the thermostat.