

Operating Instruction

Sigge Wi-Fi G95 LED Bulb JP-G95FWB rev 1



Luminans

Description

Sigge can be controlled through an App in your mobile or tablet.

 
In the App you can setup your device and create scenarios and schedules for your lighting.

Usage and Connection


1. Download and install the app "TuyaSmart" from the Apple App Store or Google Play on your smart device. Scan the QR code below for a direct link to the App.
2. Launch the "TuyaSmart" app.





3. Create a new account or log in to your existing account.
4. Make sure Bluetooth is turned on in your smart device, as it's necessary for the connection.
5. Screw in the lamp in a E27 socket, turn on the power. If the light does not flash: Turn the power on and off, on - off - on - off - on.
6. When the light flashes, Sigge will appear in the app. If Sigge does not show up, press "+" in the upper right corner.



 
7. Add Sigge by clicking on "+"

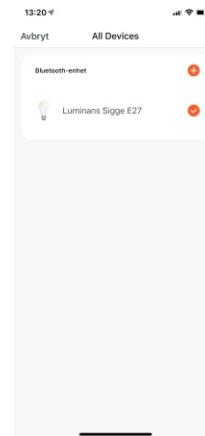

  8. Confirm Wi-Fi network and password.

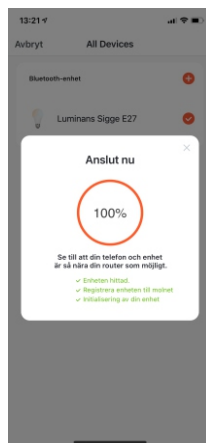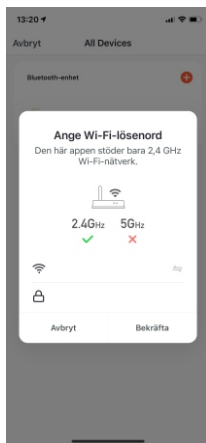

 9. Name the unit, please observe that this will be the same name used when addressing the device from your voice assistants.

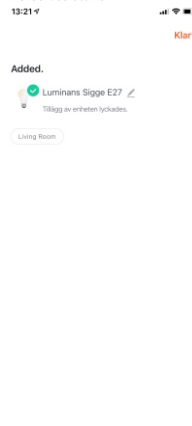

NOTE



 
Do not use Sigge together with an external dimmer, Sigge can only be dimmed via App in a mobile or a tablet.




Only use Sigge in dry environments.

Use with Voice Assistants


1. Select a device to connect to voice assistant.

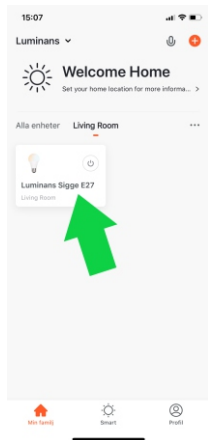

 
2. Click the pen to see device information.

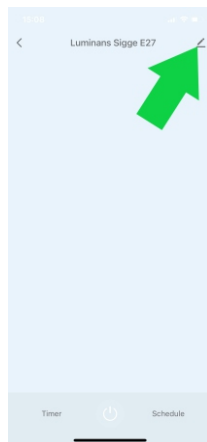

 3. Select the voice assistant (s) you want to connect.

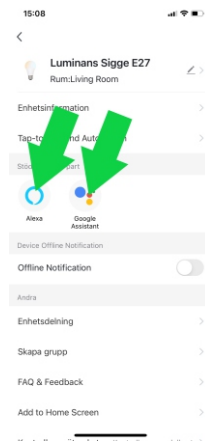

 4. Connect the lighting to your voice assistant by logging in to the associated account.

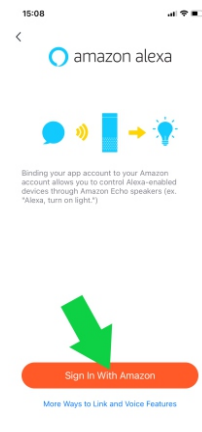

- To reduce the risk of electric shock this product should only be opened by a authorized person.

- Unplug the power cord from the wall outlet, if any problems arise.

- Read the operating instructions carefully before use. Keep the instructions for use for future needs.

- Use the device only for its intended purpose.

- Do not use the device if any part is damaged or incorrect. If the device is damaged or incorrectly, it must be replaced immediately.

- The device is for indoor use only. Do not use the device outdoors.

- Do not expose the product to water or moisture.

- Do not touch the device with wet hands.

- Make sure the base of the bulb matches the lamp holder.

Technical Specification

Model Name	JP-G95FWB
Power / Lumen Output	7W / 800 lm
Color Temperature	2700K - 6500K
Mains	220-240 VAC / 50Hz
Radio Wi-Fi/BLE	2.405 - 2.483GHz <20dBm
Operating temperature	-10°C till +40°C
Radio range (max)	100m outdoor, 20m indoor
IP rating	IP20
Guarantee	1year

Radio Standard
ETSI EN 300 328 V2.2.2 (2019-07)

EMC Standard
EN 301489-1 V2.1.1 (2017-02),
EN 301489-17 V3.1.1 (2017-02),
EN 55015:2013 +A1:2015,
EN 61547:2009

Safety Standard (LVD)
IEC 60669-2-1:2002/AMD1:2008/AMD2:2015,
IEC 60669-1:1998/AMD1:1999/AMD2:2006
EN 60669-2-1:2004 +A1:2009 +A12:2010,
EN 60669-1:2018, EN 62311:2008

RoHS Standard
2011/65/EU, (EU) 2015/863

Radio Equipment (RED)
Complies with 2014/53/EU Directive

FAQ

Q1: What do you do if Sigge does not connect to your Wi-Fi?

- a. Check that Sigge is properly connected and has power.
- b. Make sure Bluetooth is enabled on your mobile / tablet.
- c. Make sure that Sigge and mobile / tablet are connected to the same network.
- d. Are the devices connected to the internet.
- e. Check that the password for your Wi-Fi is entered correctly.
- f. Check that any firewall is not blocking traffic.

Q2: What happens if my Wi-Fi connection is lost?

Sigge must be connected to Wi-Fi to be controlled via the App.

Q3: How to change Wi-Fi network or password for Wi-Fi?

Repeat the pairing process from step 5.

Q4: How do you reset Sigge?

Switch the power to the luminaire on / off 3 times in quick succession (OFF-ON-OFF-ON-OFF-ON), then wait 1-3 seconds until Miguel starts flashing.

Luminans

RoHS

CE



Product information and manufacturer's declaration are available at:
www.luminans.com