



Setting up the trolley for your engine


Step 1. Lower the trolley bracket to lowest position

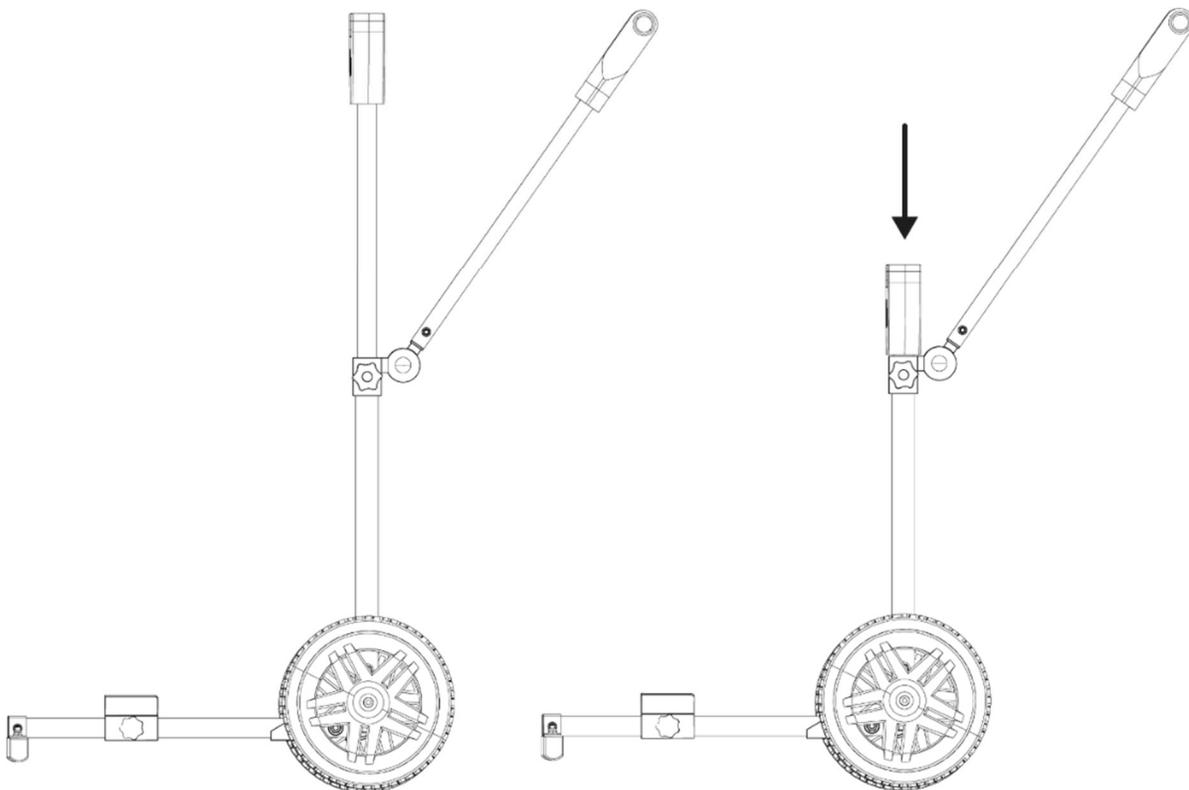

Step 2. Lock the engine in straight position

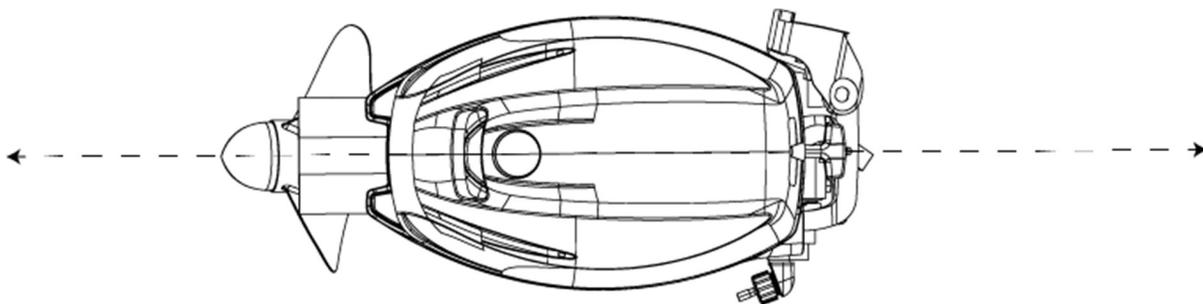


Step 3. Position the engine on the ground next to the trolley, with the back of the engine clamp parallel to the front of the trolley bracket.

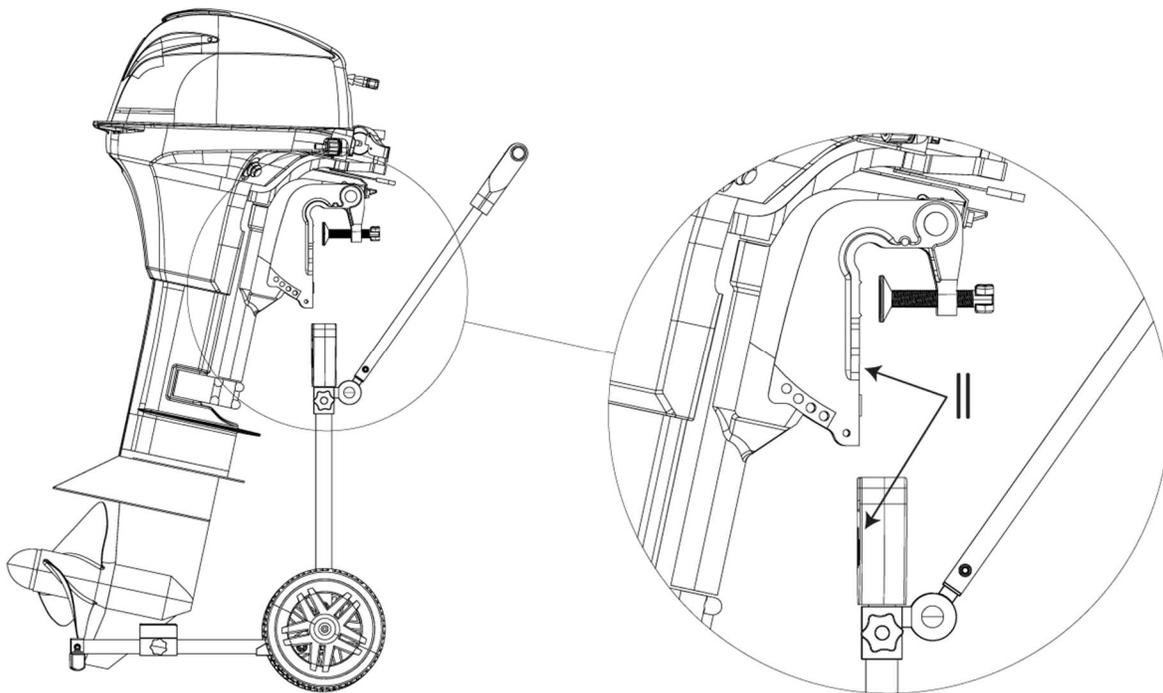

Step 4. Measure the horizontal distance between the bracket and the end of the engine tail.

Step 5. Slide the tail support to the previously measured position on the tube and tighten the knob.

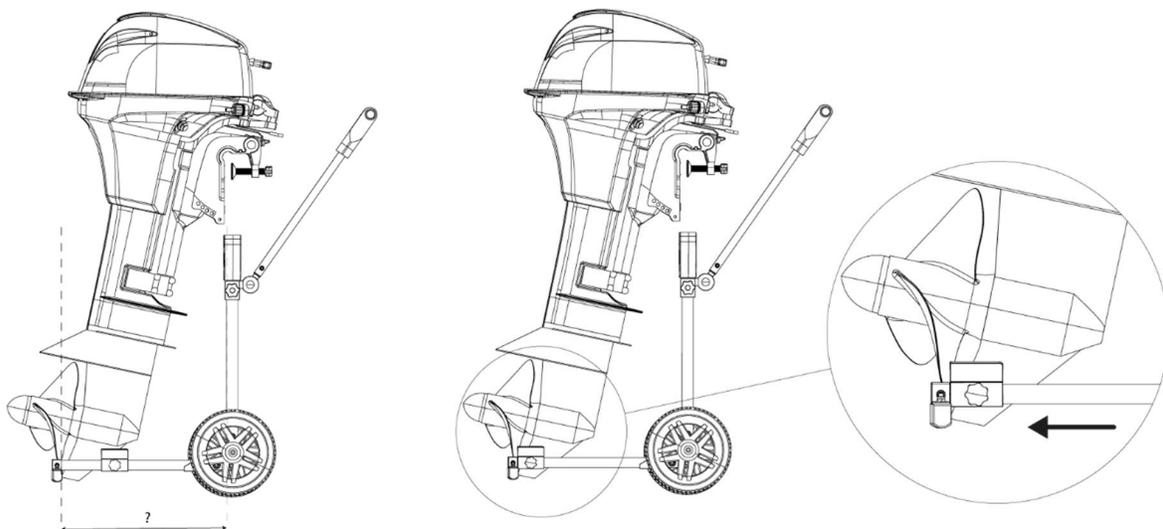

Now the trolley is set up for your engine. This does not need to be changed when you only use this specific engine on the trolley.