











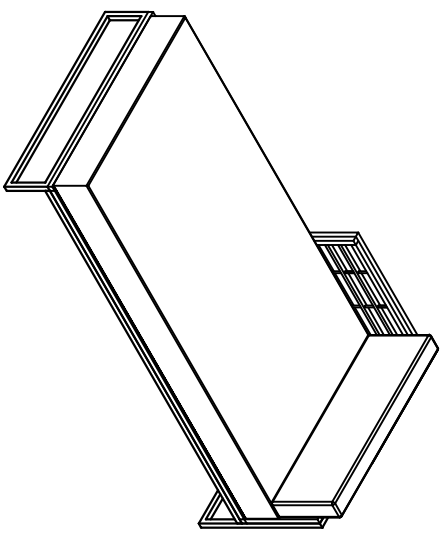


ASSEMBLY INSTRUCTION




No.		Qty.
A	 6x40x13mm	10
B	 6x70x13mm	2
C	 Ø6/16x1mm	10
D	 6x30x13mm	2
E		2
F		1



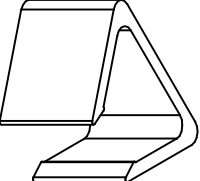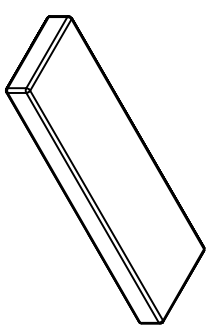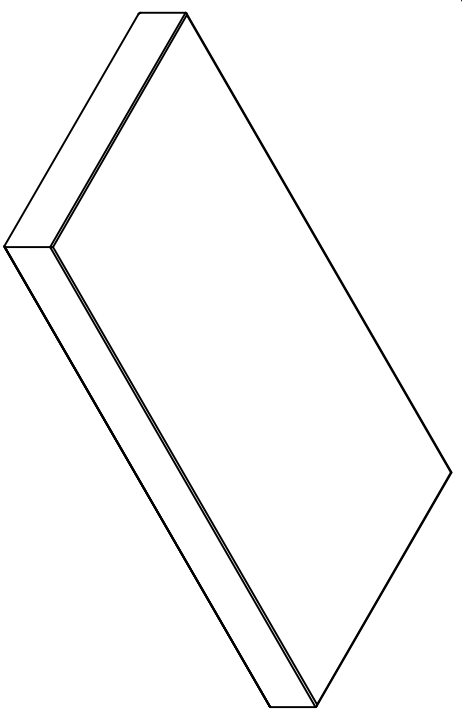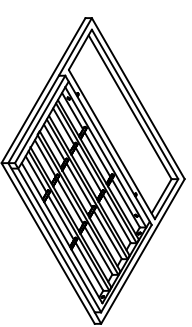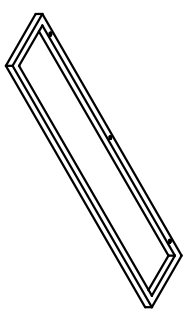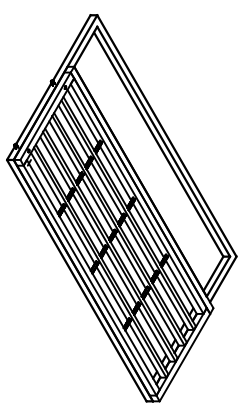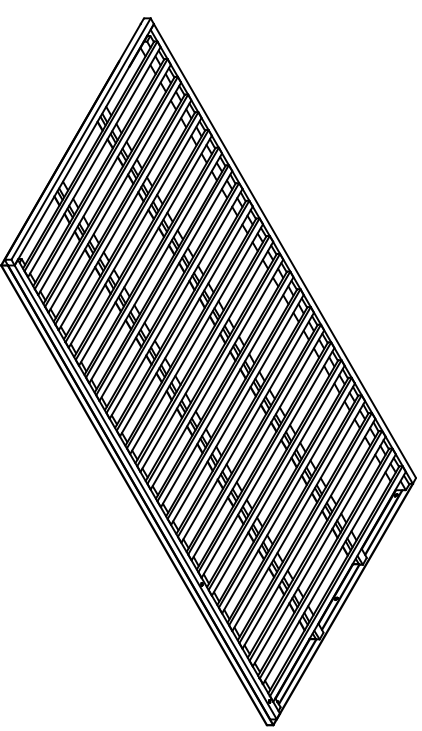
ASSEMBLY INSTRUCTION

Step 1

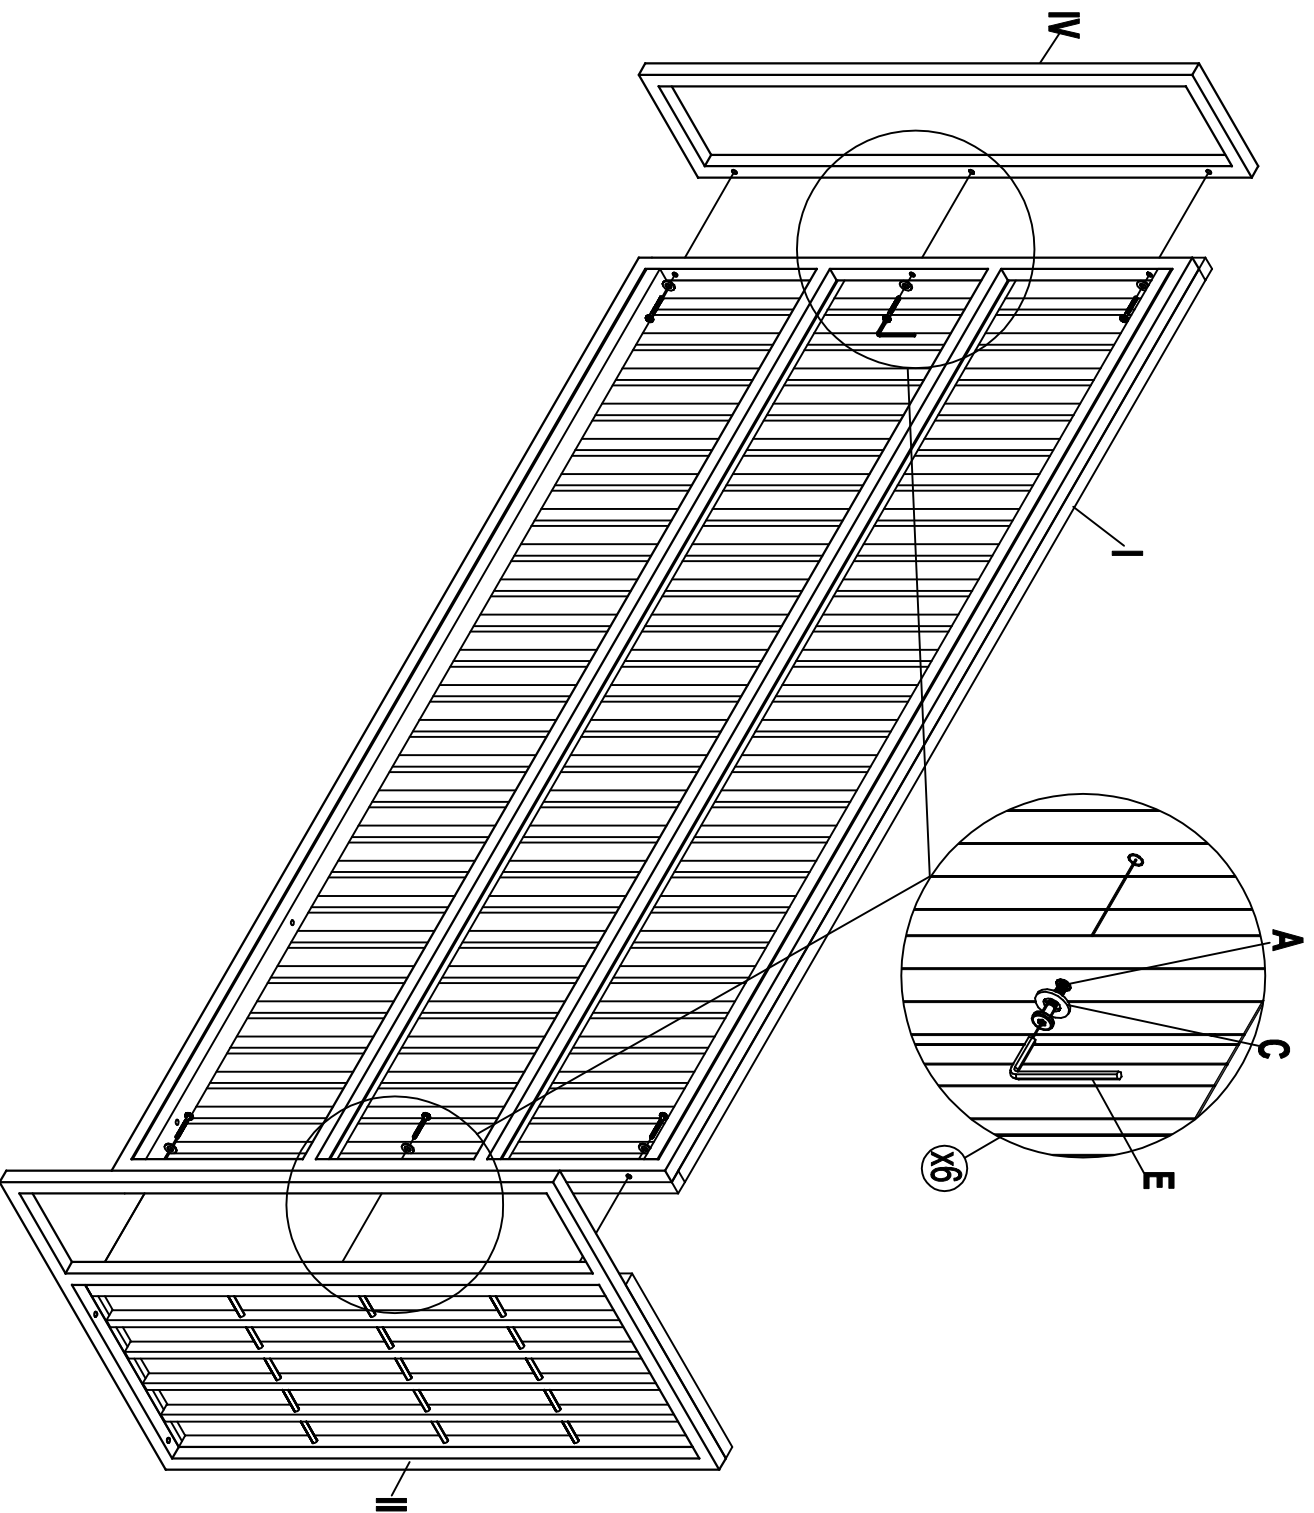


ASSEMBLY INSTRUCTION

Step 2

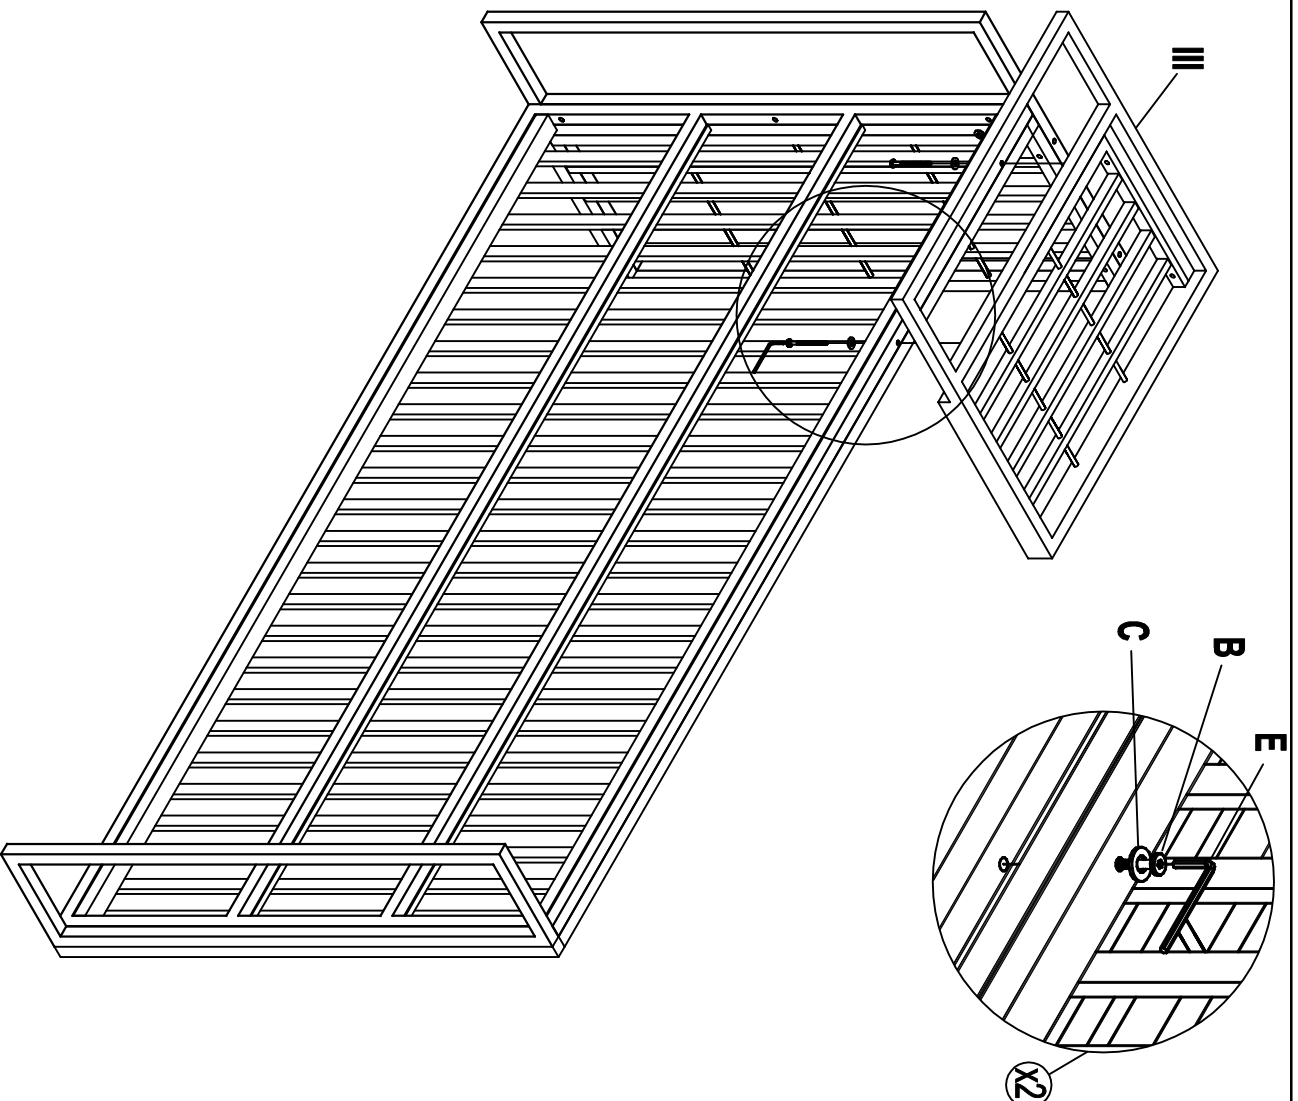


ASSEMBLY INSTRUCTION

Step 3

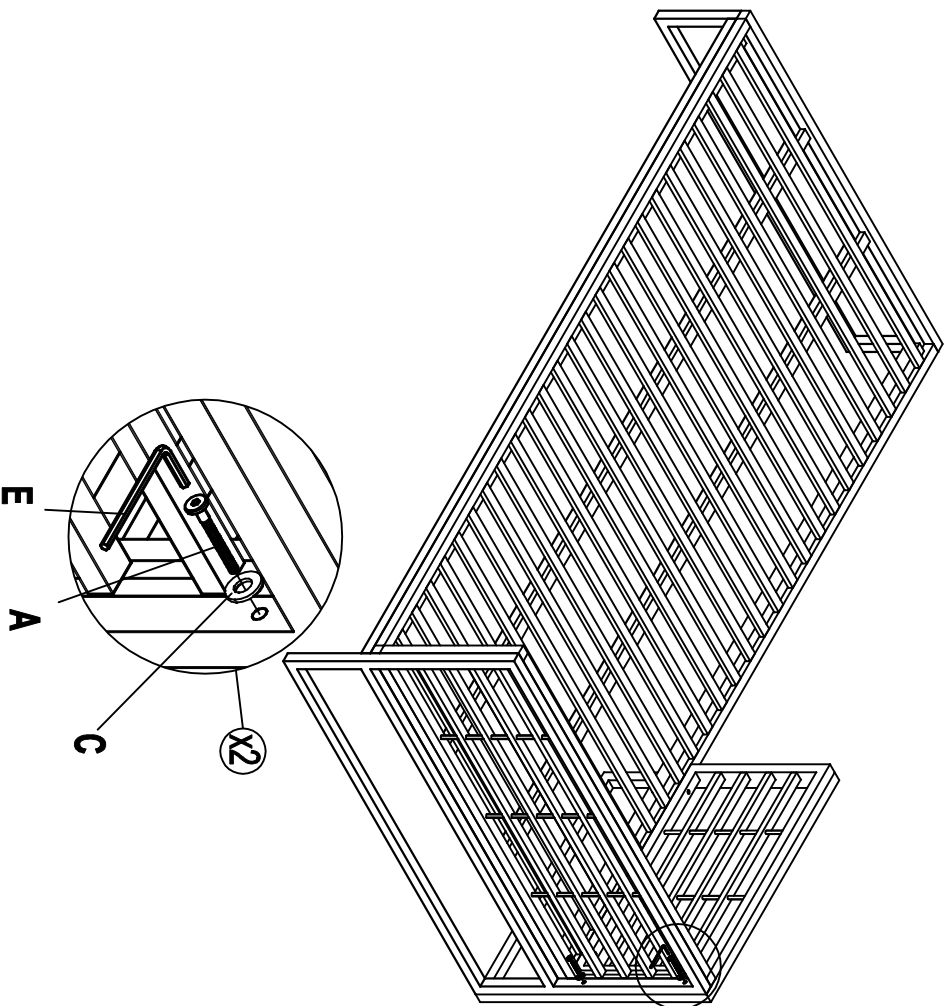


Step 4

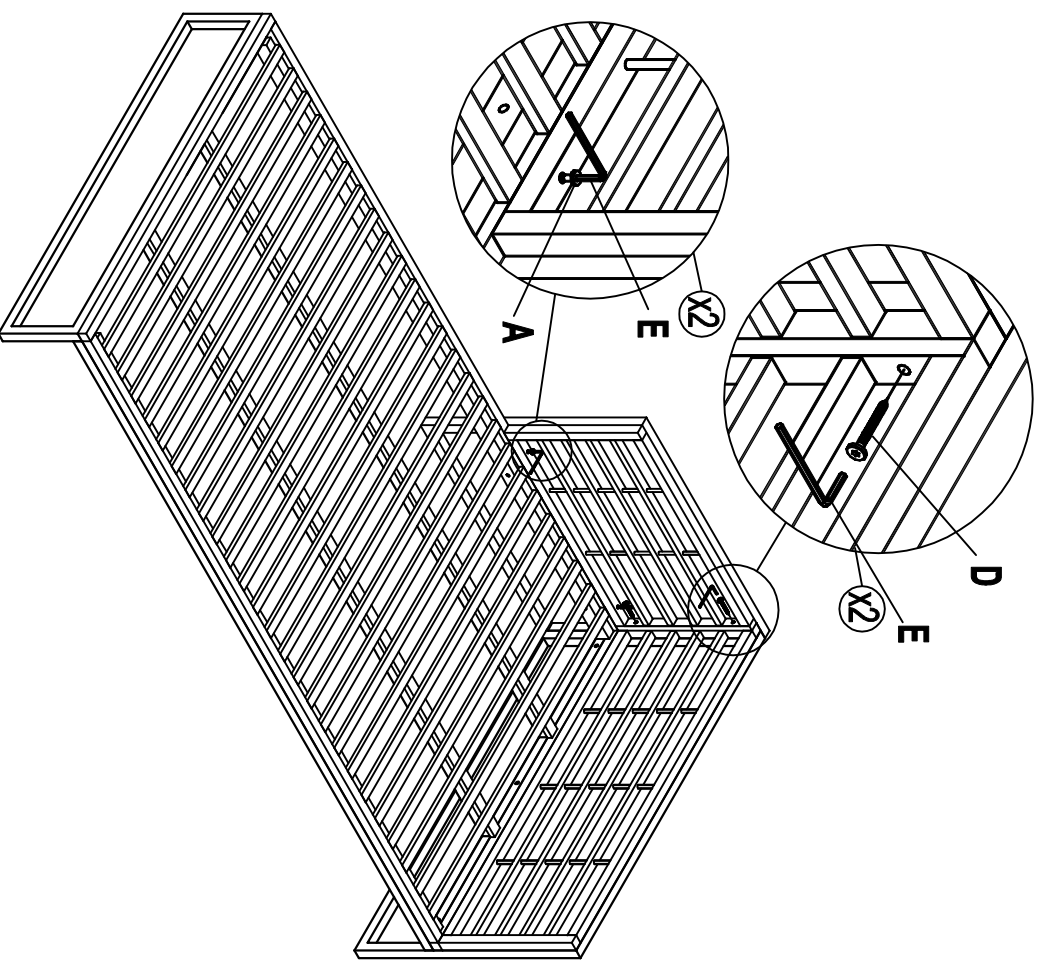


ASSEMBLY INSTRUCTION

Step 5

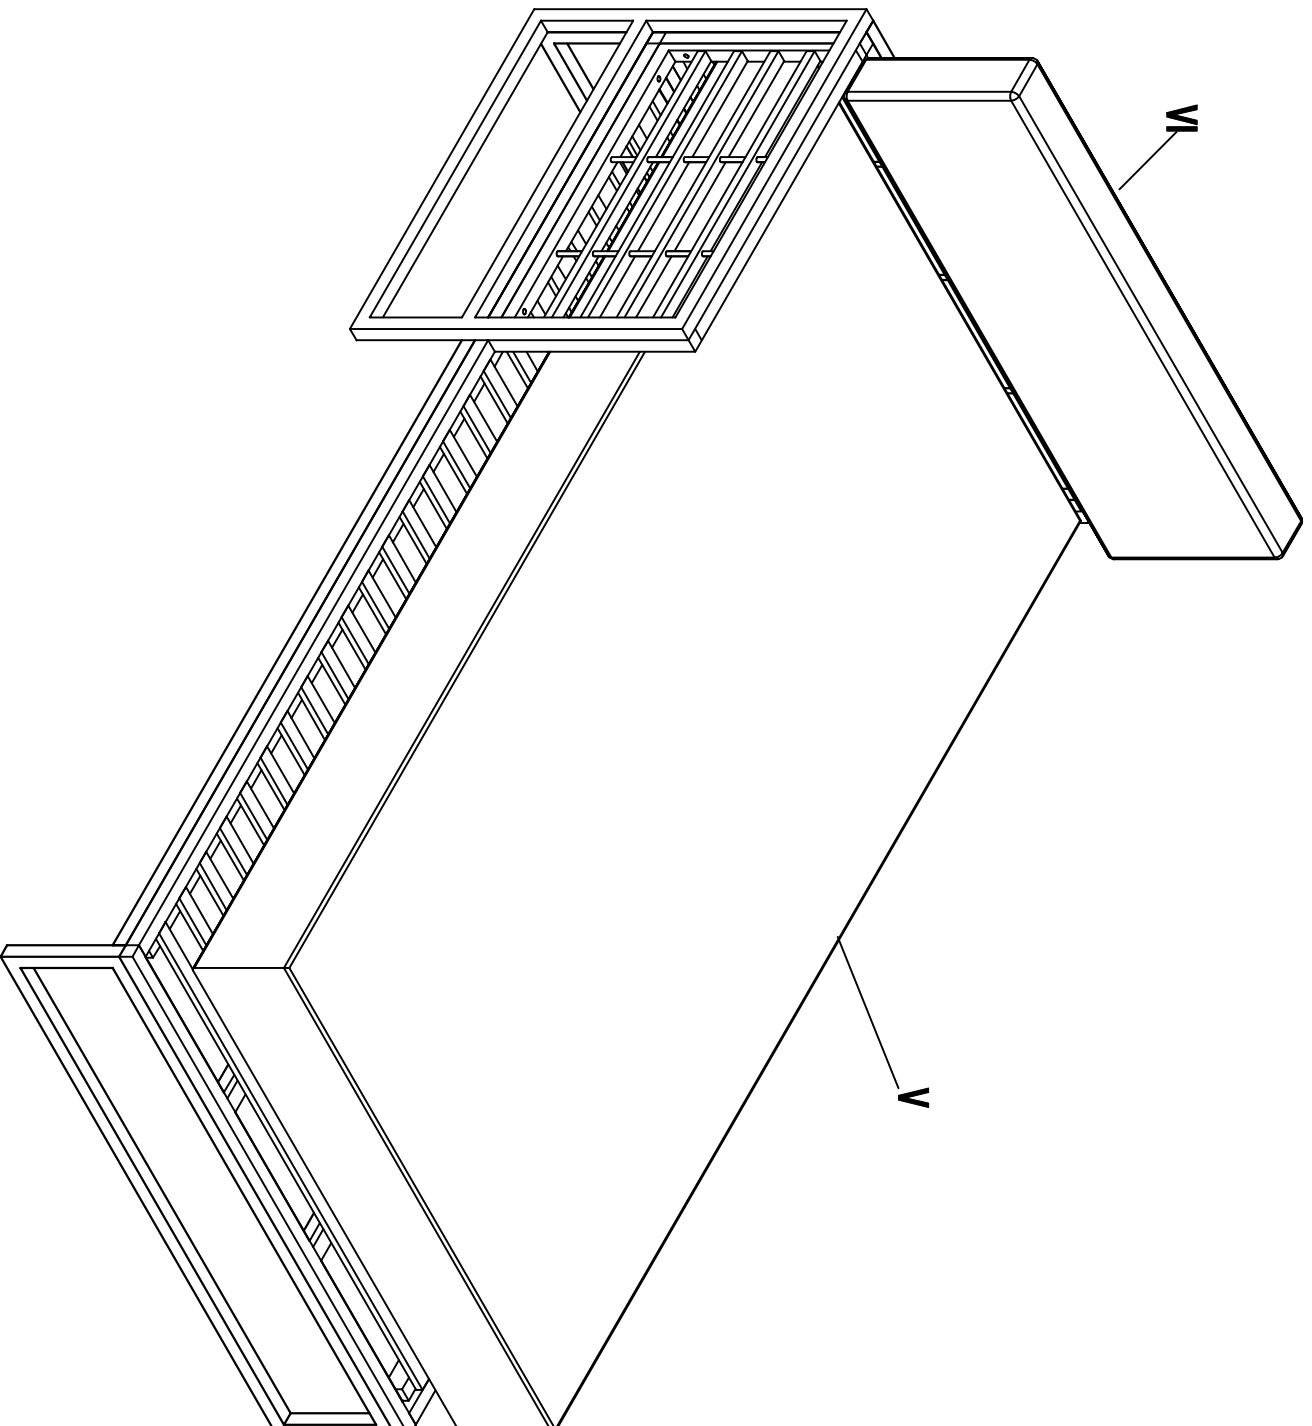

ASSEMBLY INSTRUCTION

Step 6

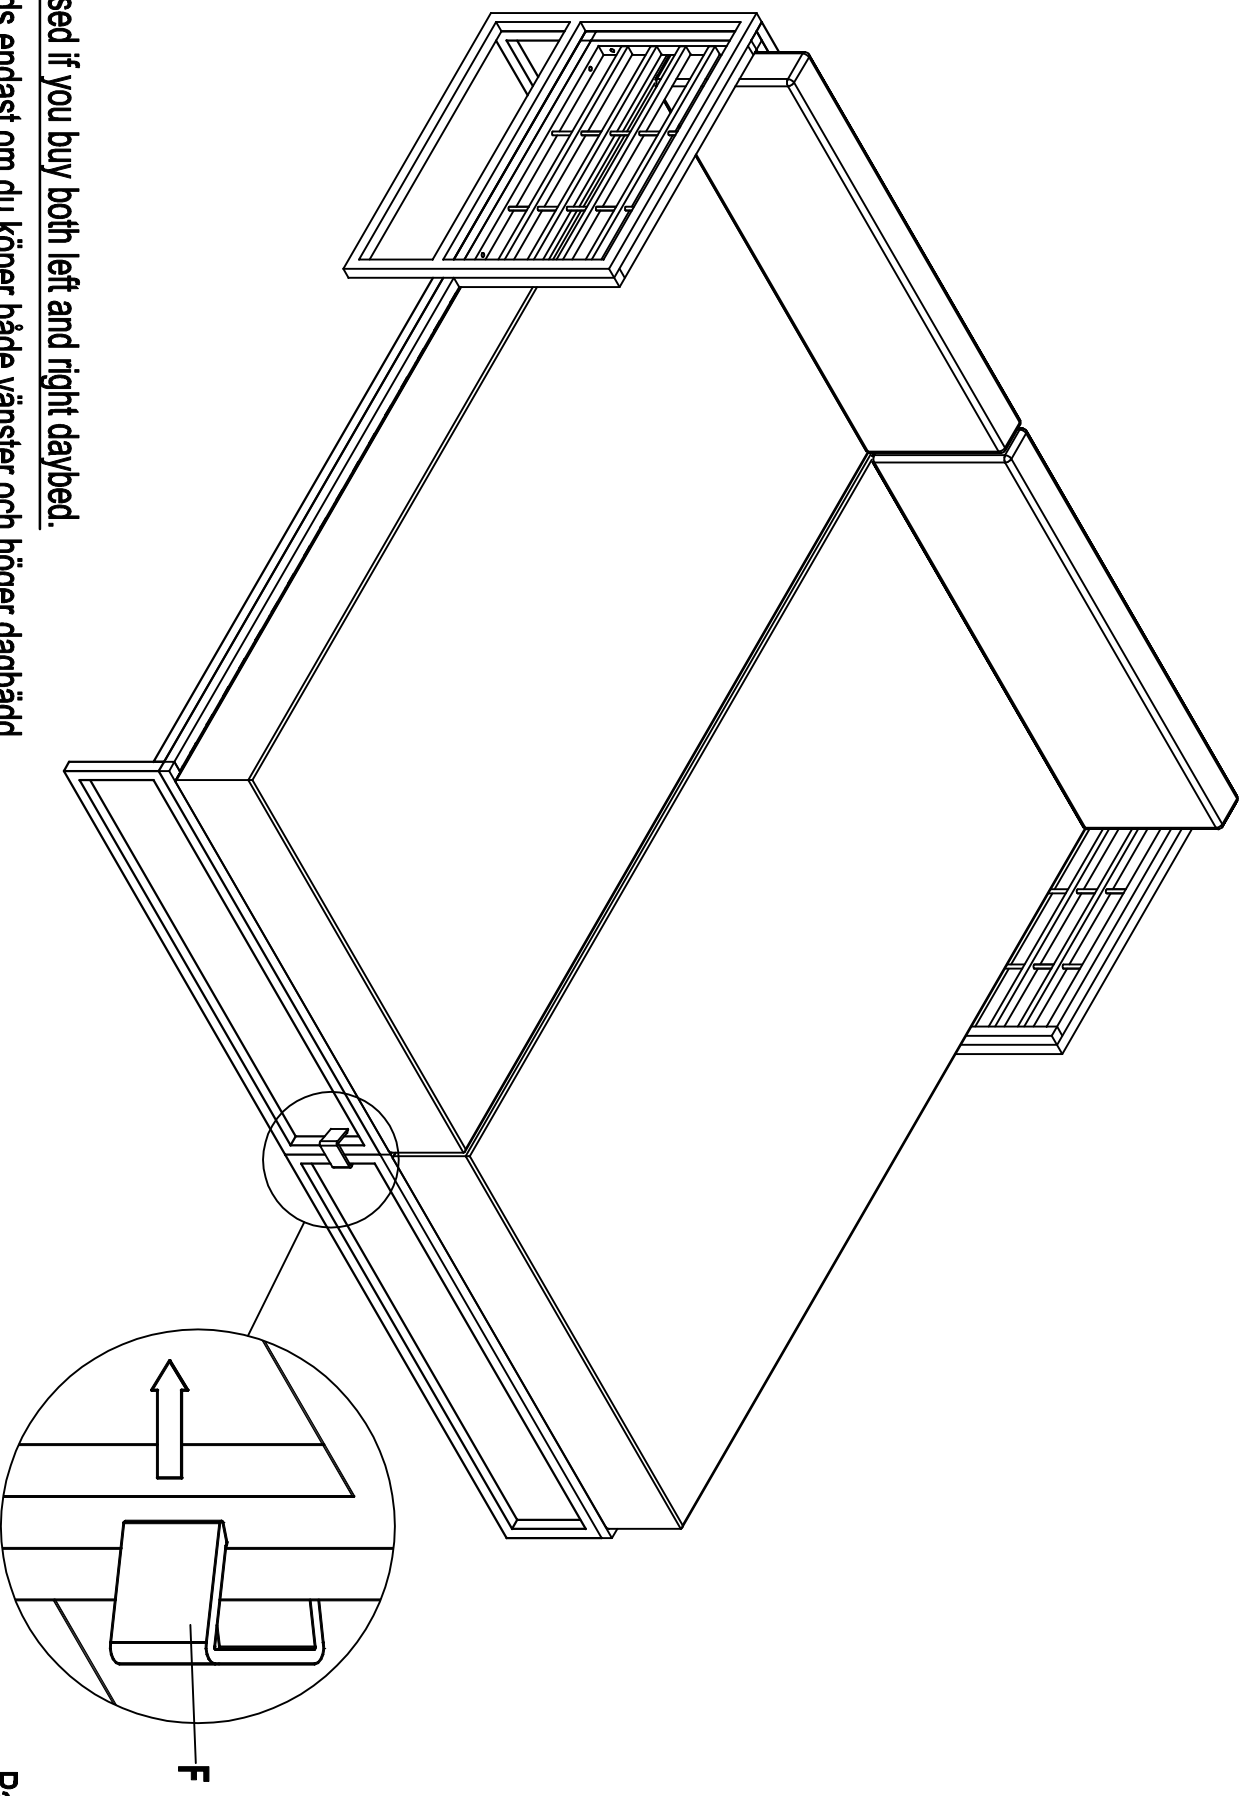


Connector only used if you buy both left and right daybed.

Connector används endast om du köper både vänster och höger dagbädd.

ASSEMBLY INSTRUCTION

Step 7

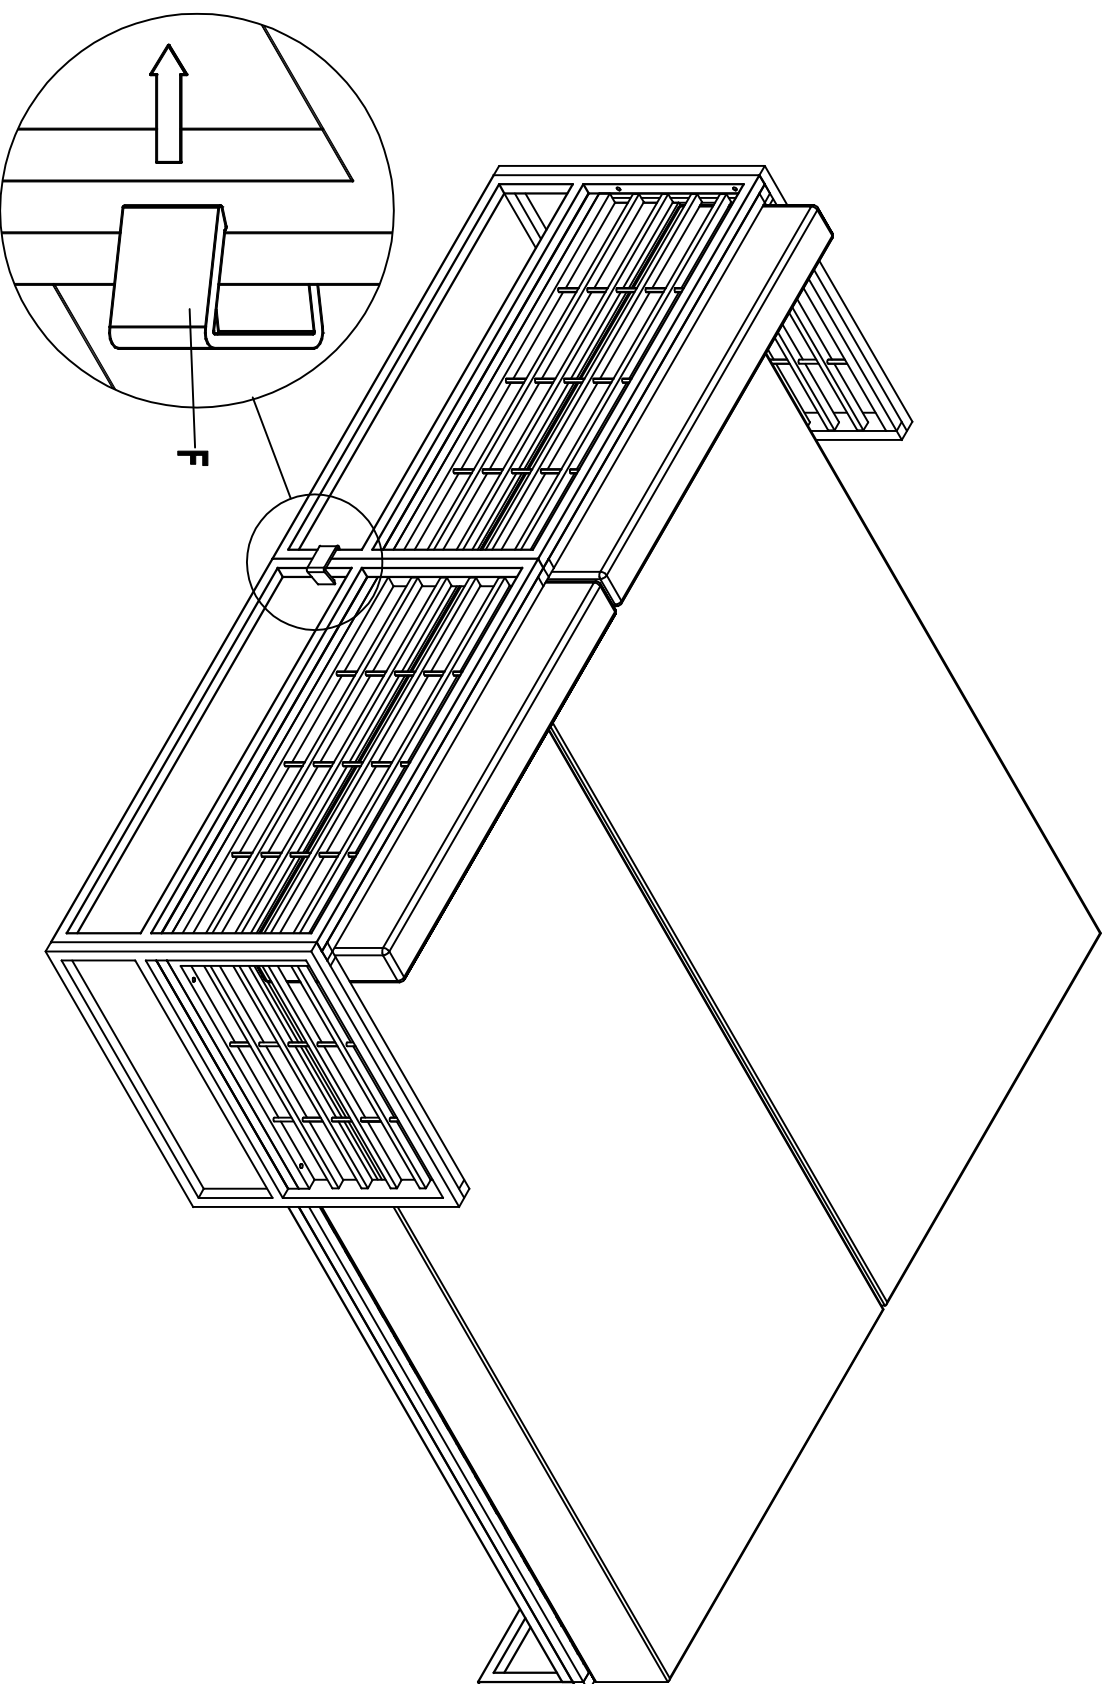

Connector only used if you buy both left and right daybed.

Connector används endast om du köper både vänster och höger dagbädd.