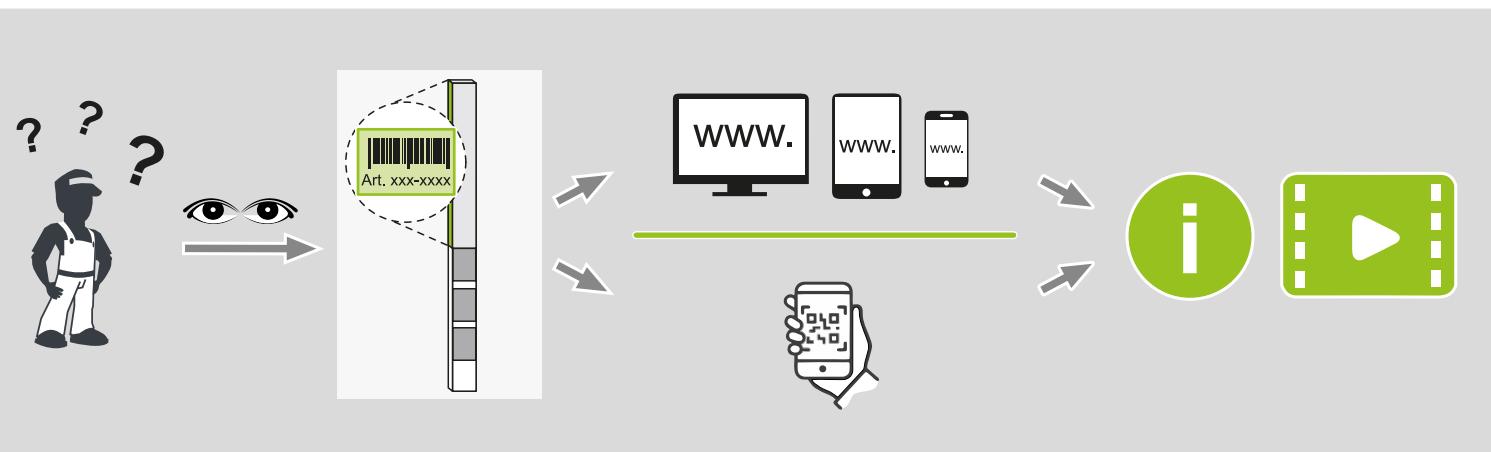





i




i

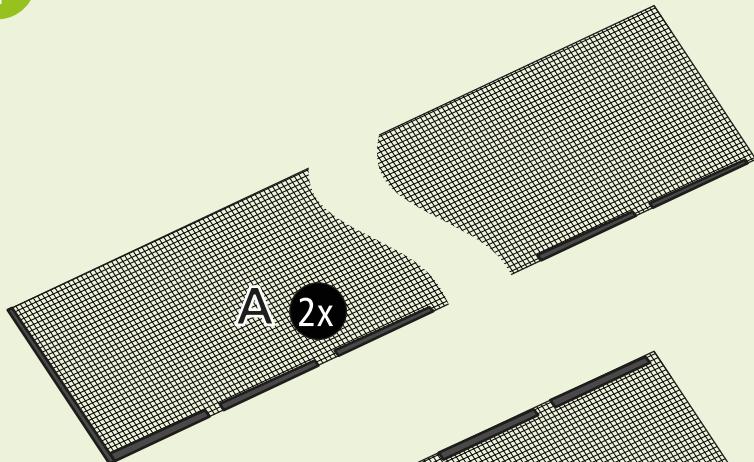
(2)




ET1352-A

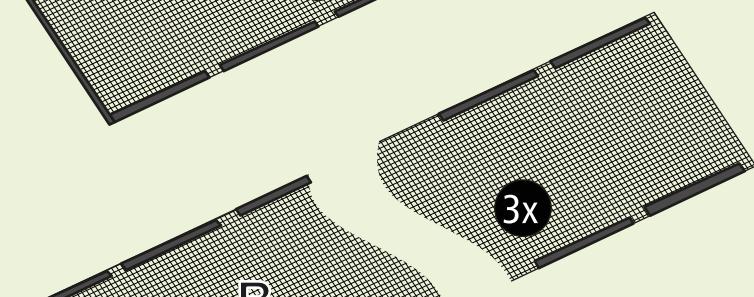


ET1352-B



ET1352-C

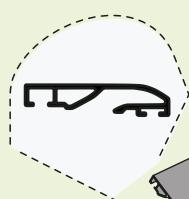

C 1x




ET1352-D




D 1x



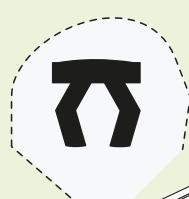ET1352-E




E 1x

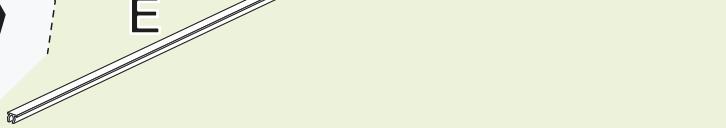


G

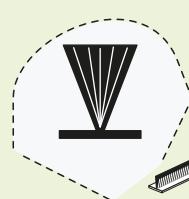
ET1352-G



F 1x

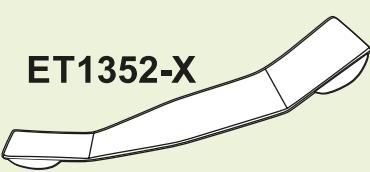

ET1352-F


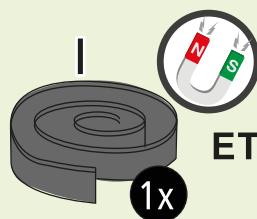



ET1352-I

1x






**i**

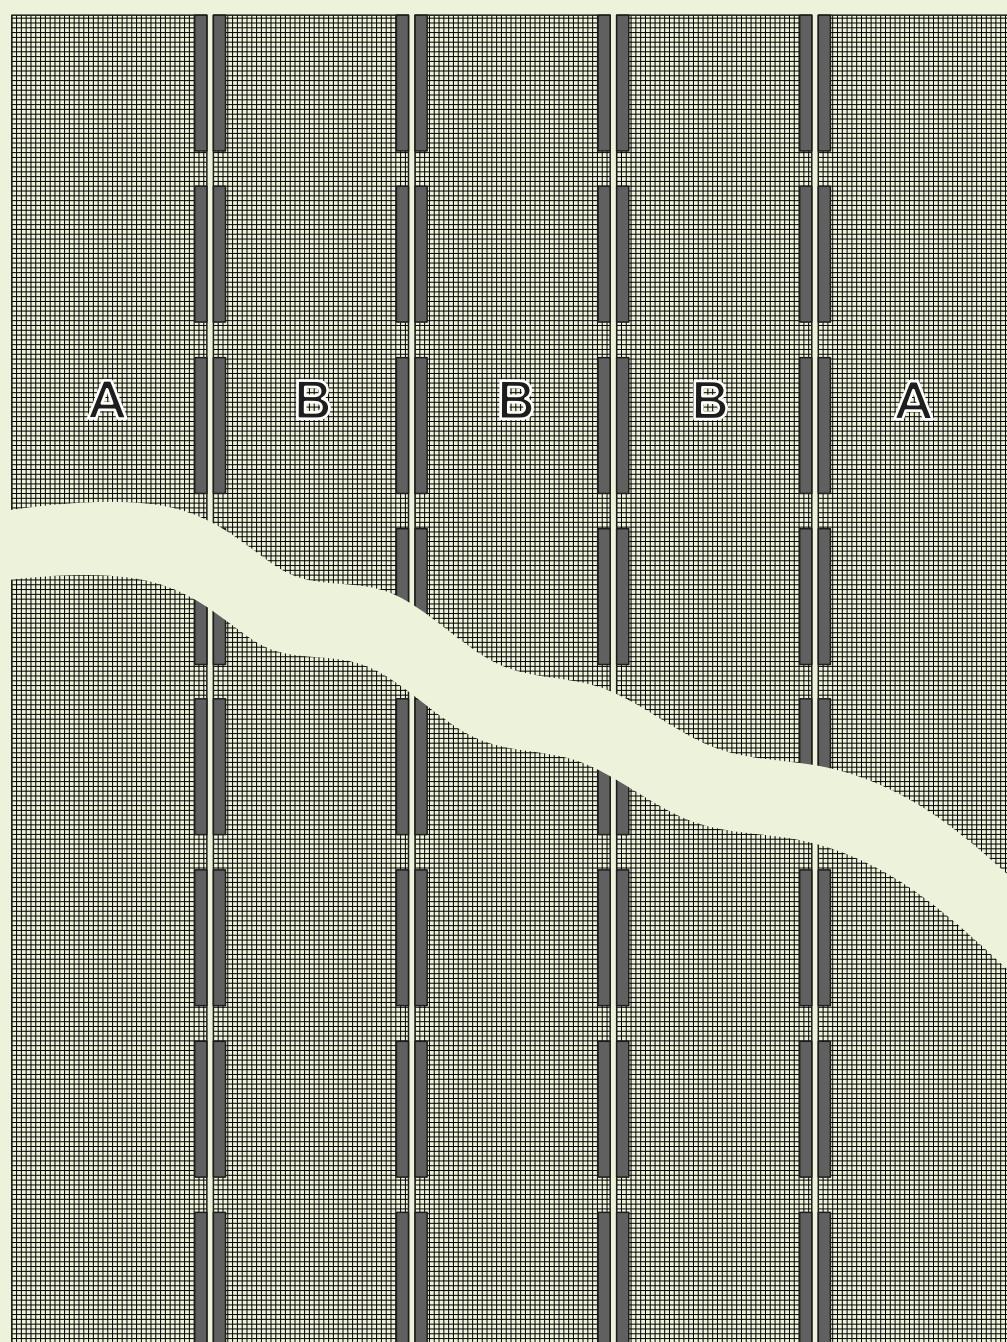
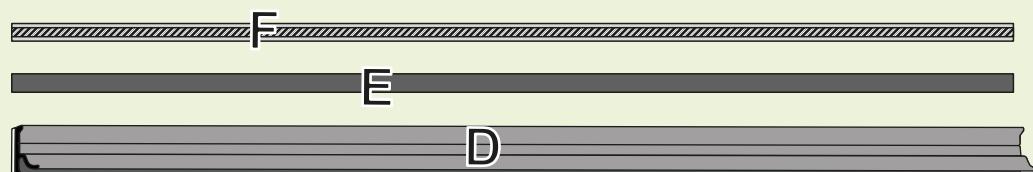
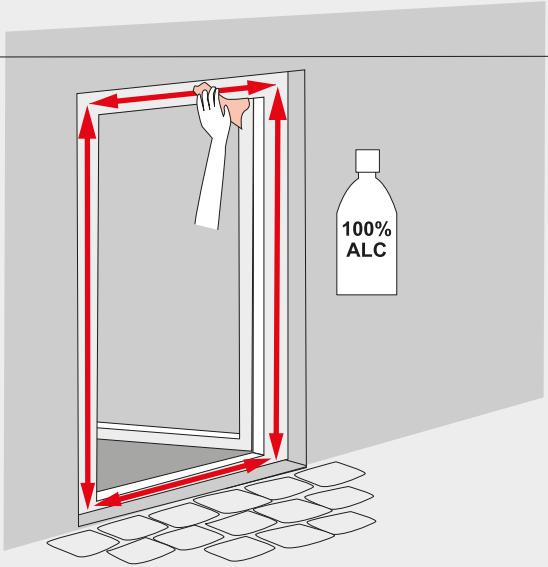
(3)




**1**100%  
ALC

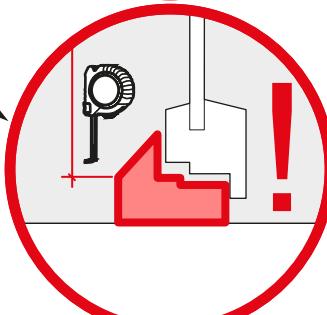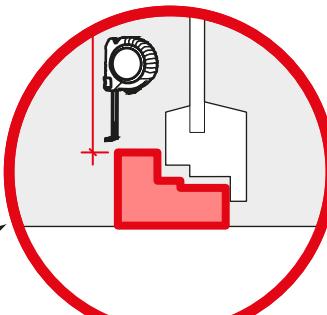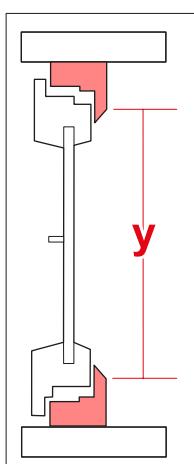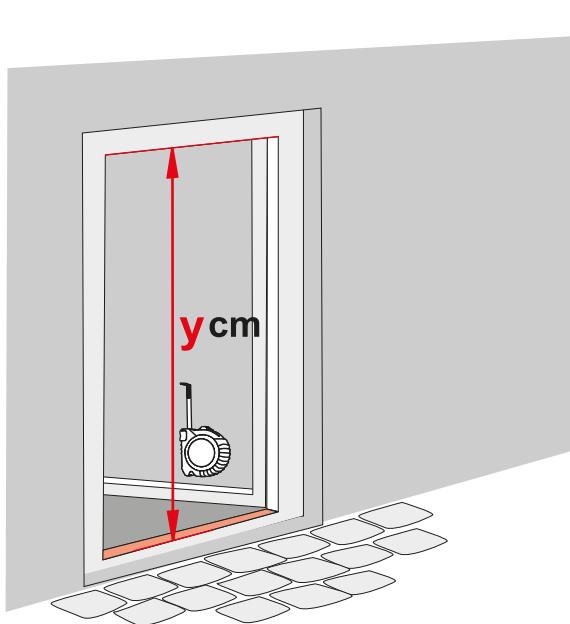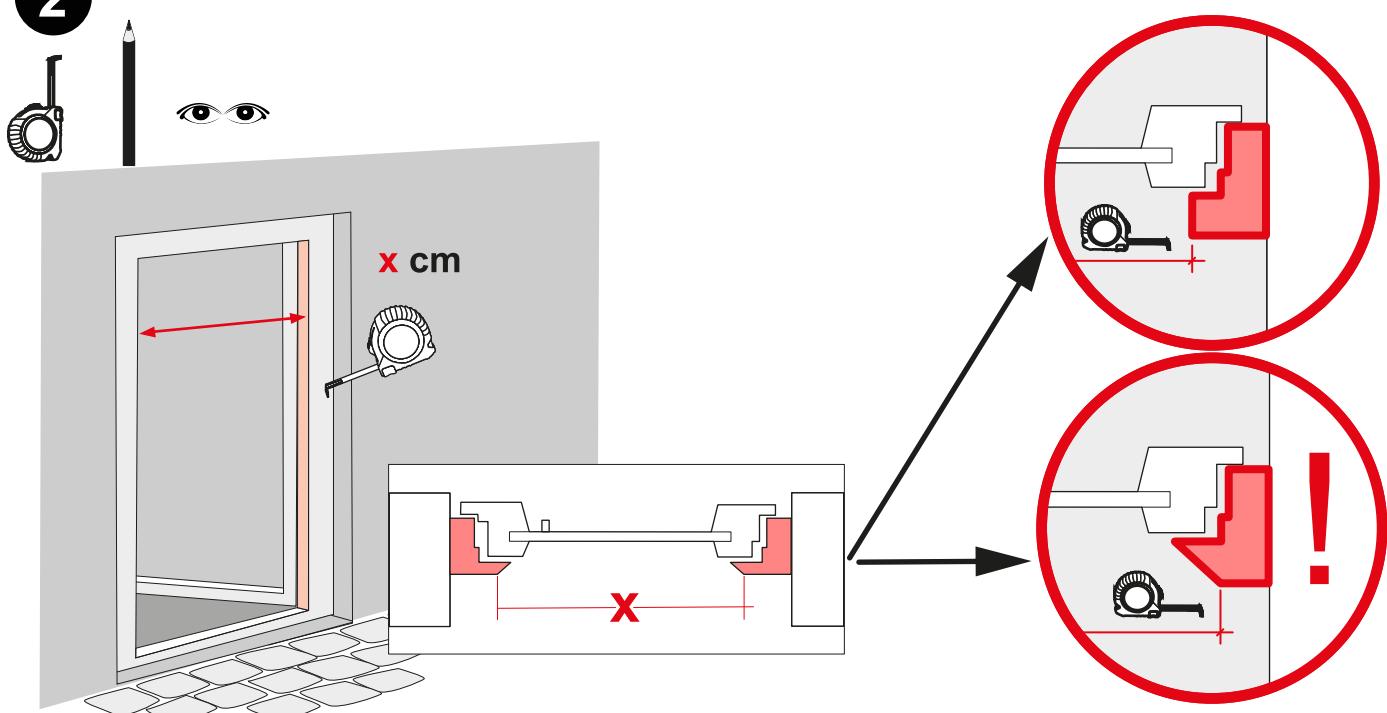4

**2**

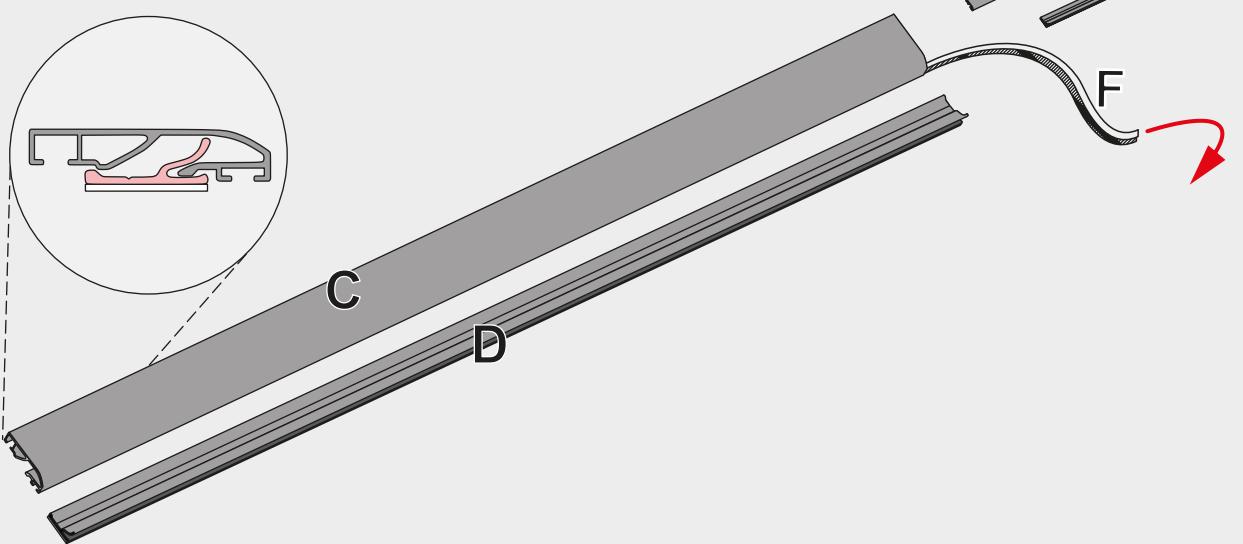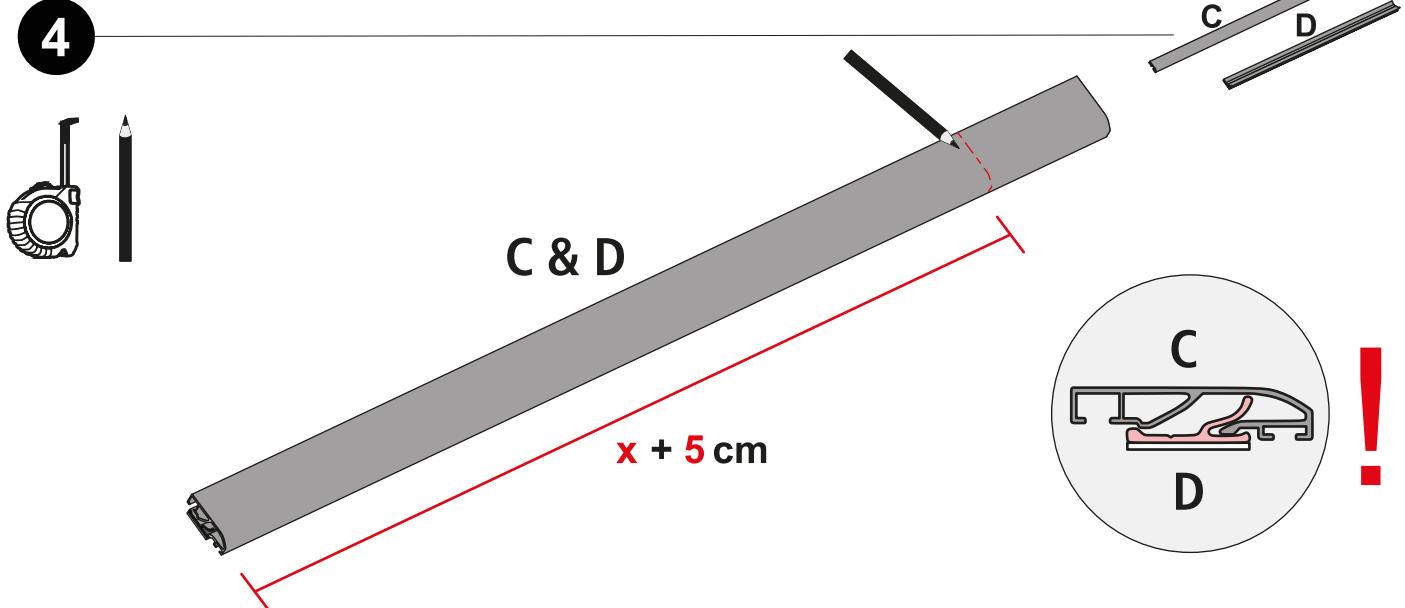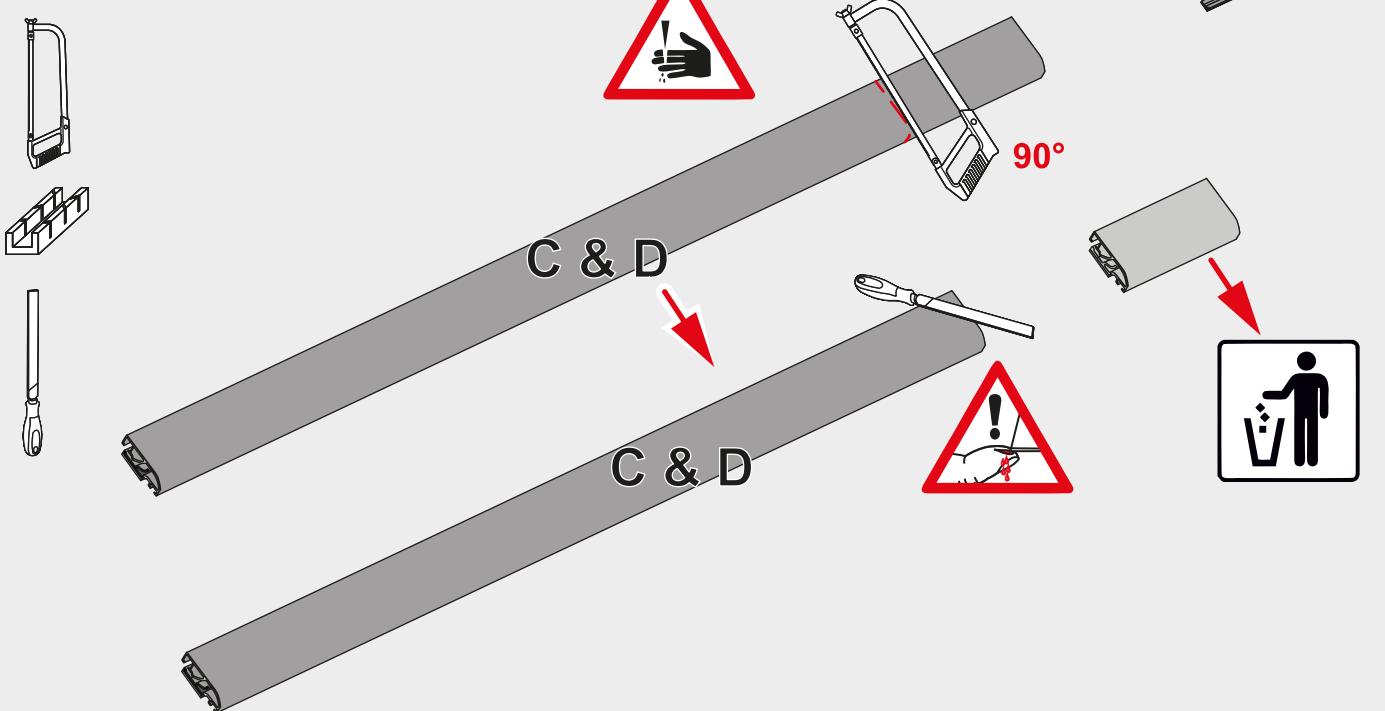
**3****4****5**

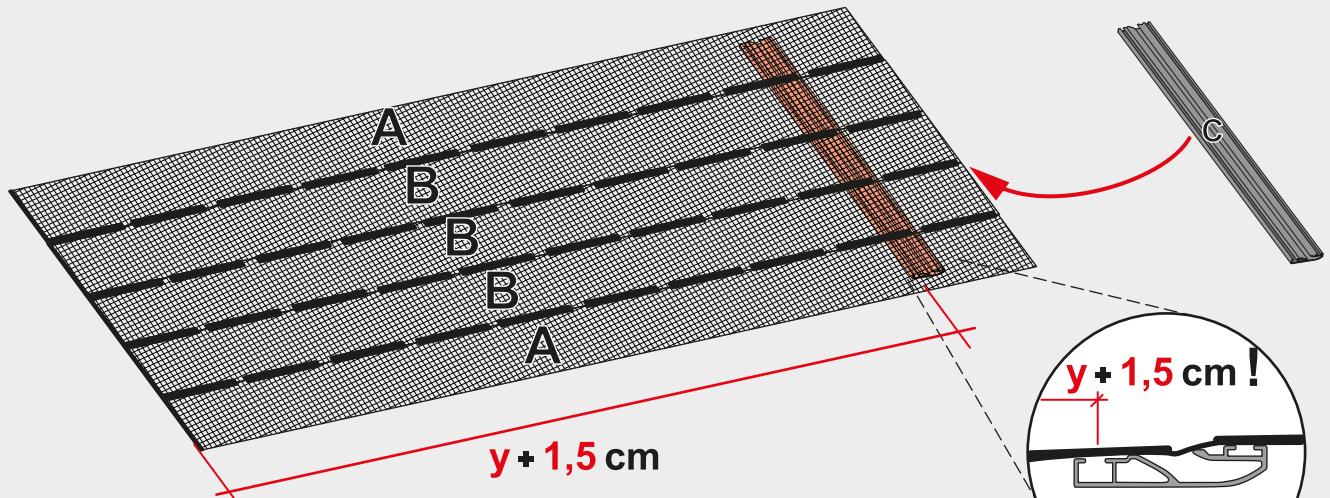6




6

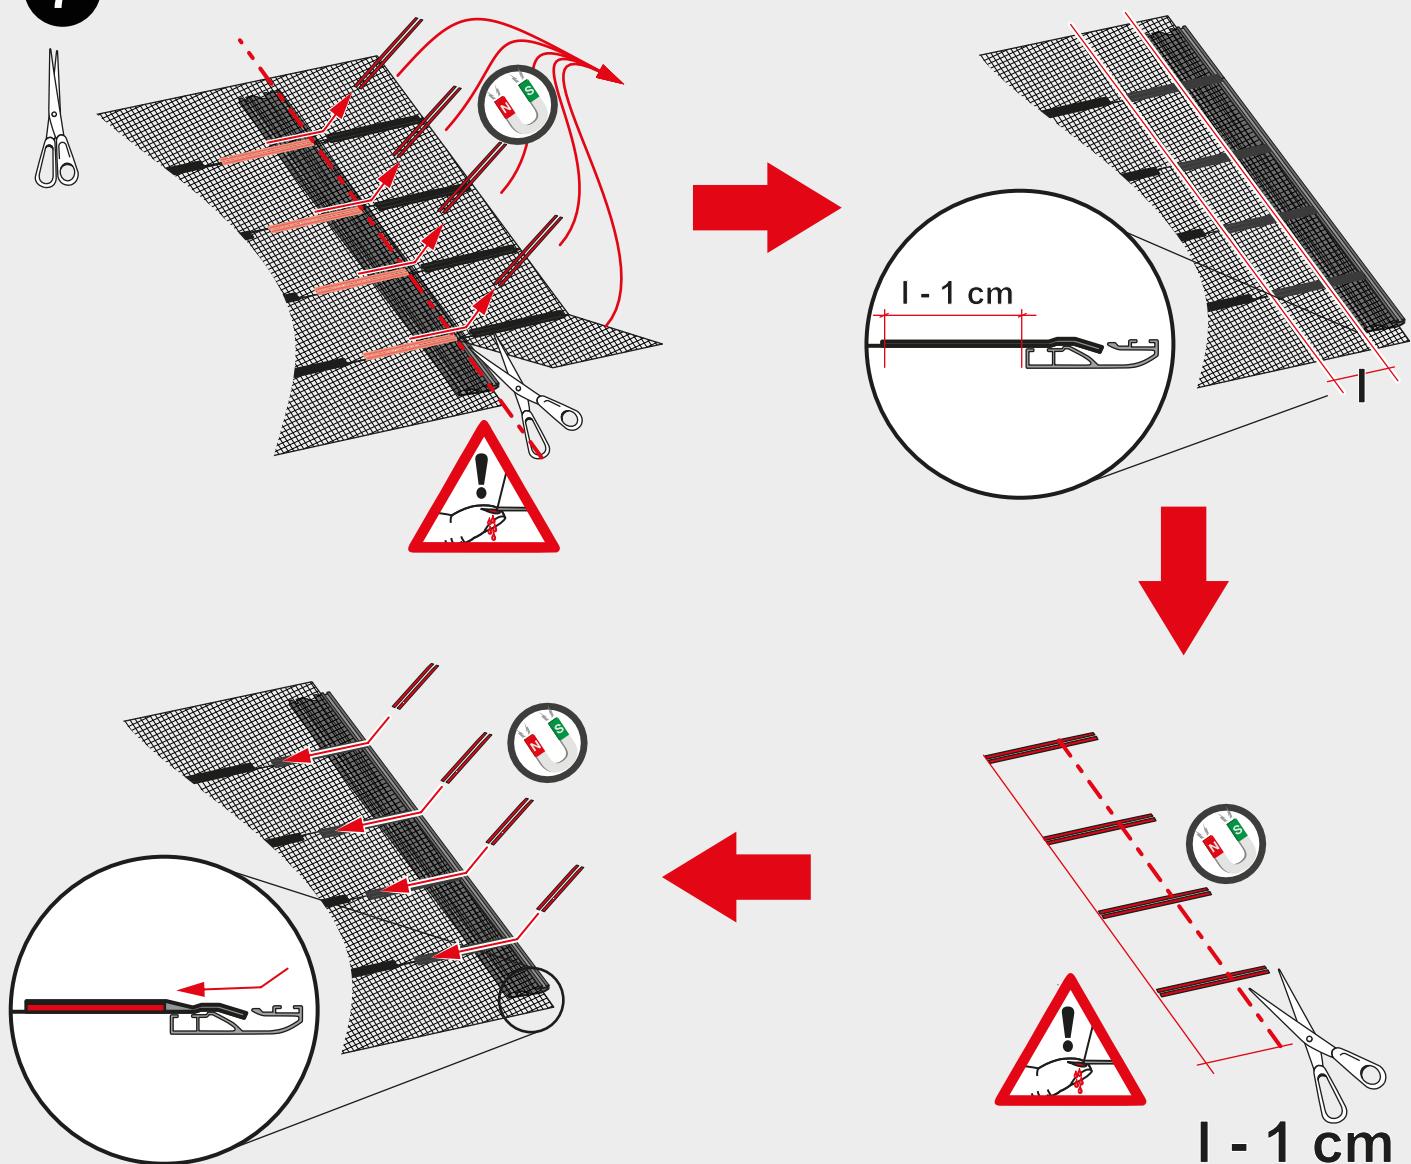7







$l - 1 \text{ cm}$


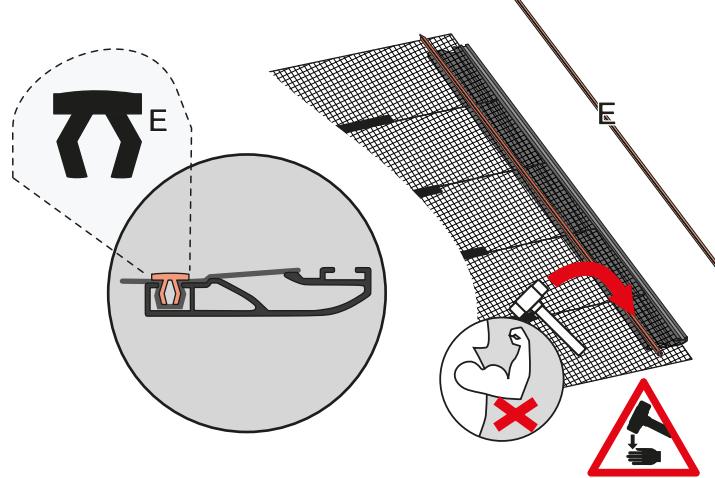
TP1352-01



**8**



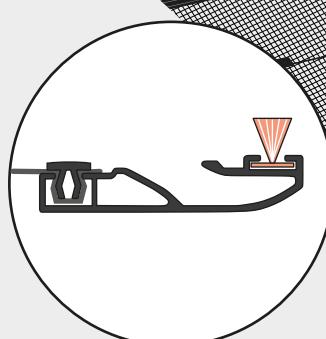

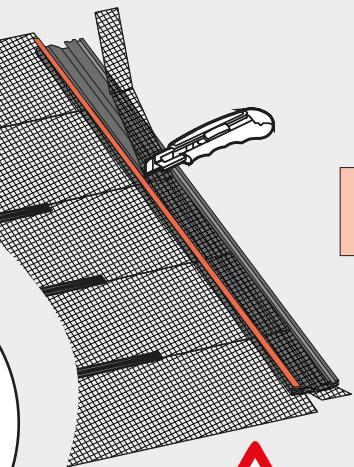
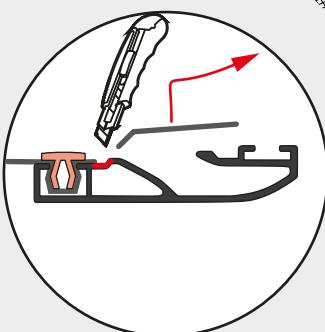
(7)

**9**

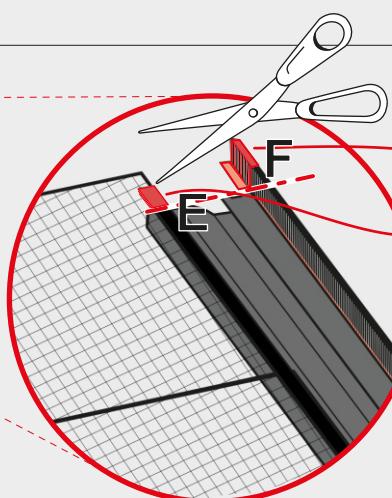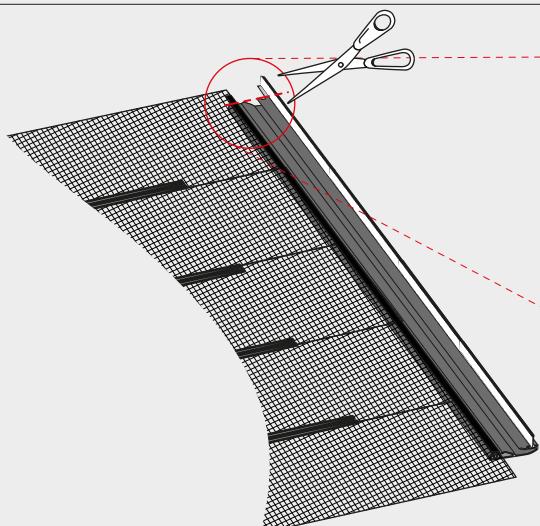F



**10**

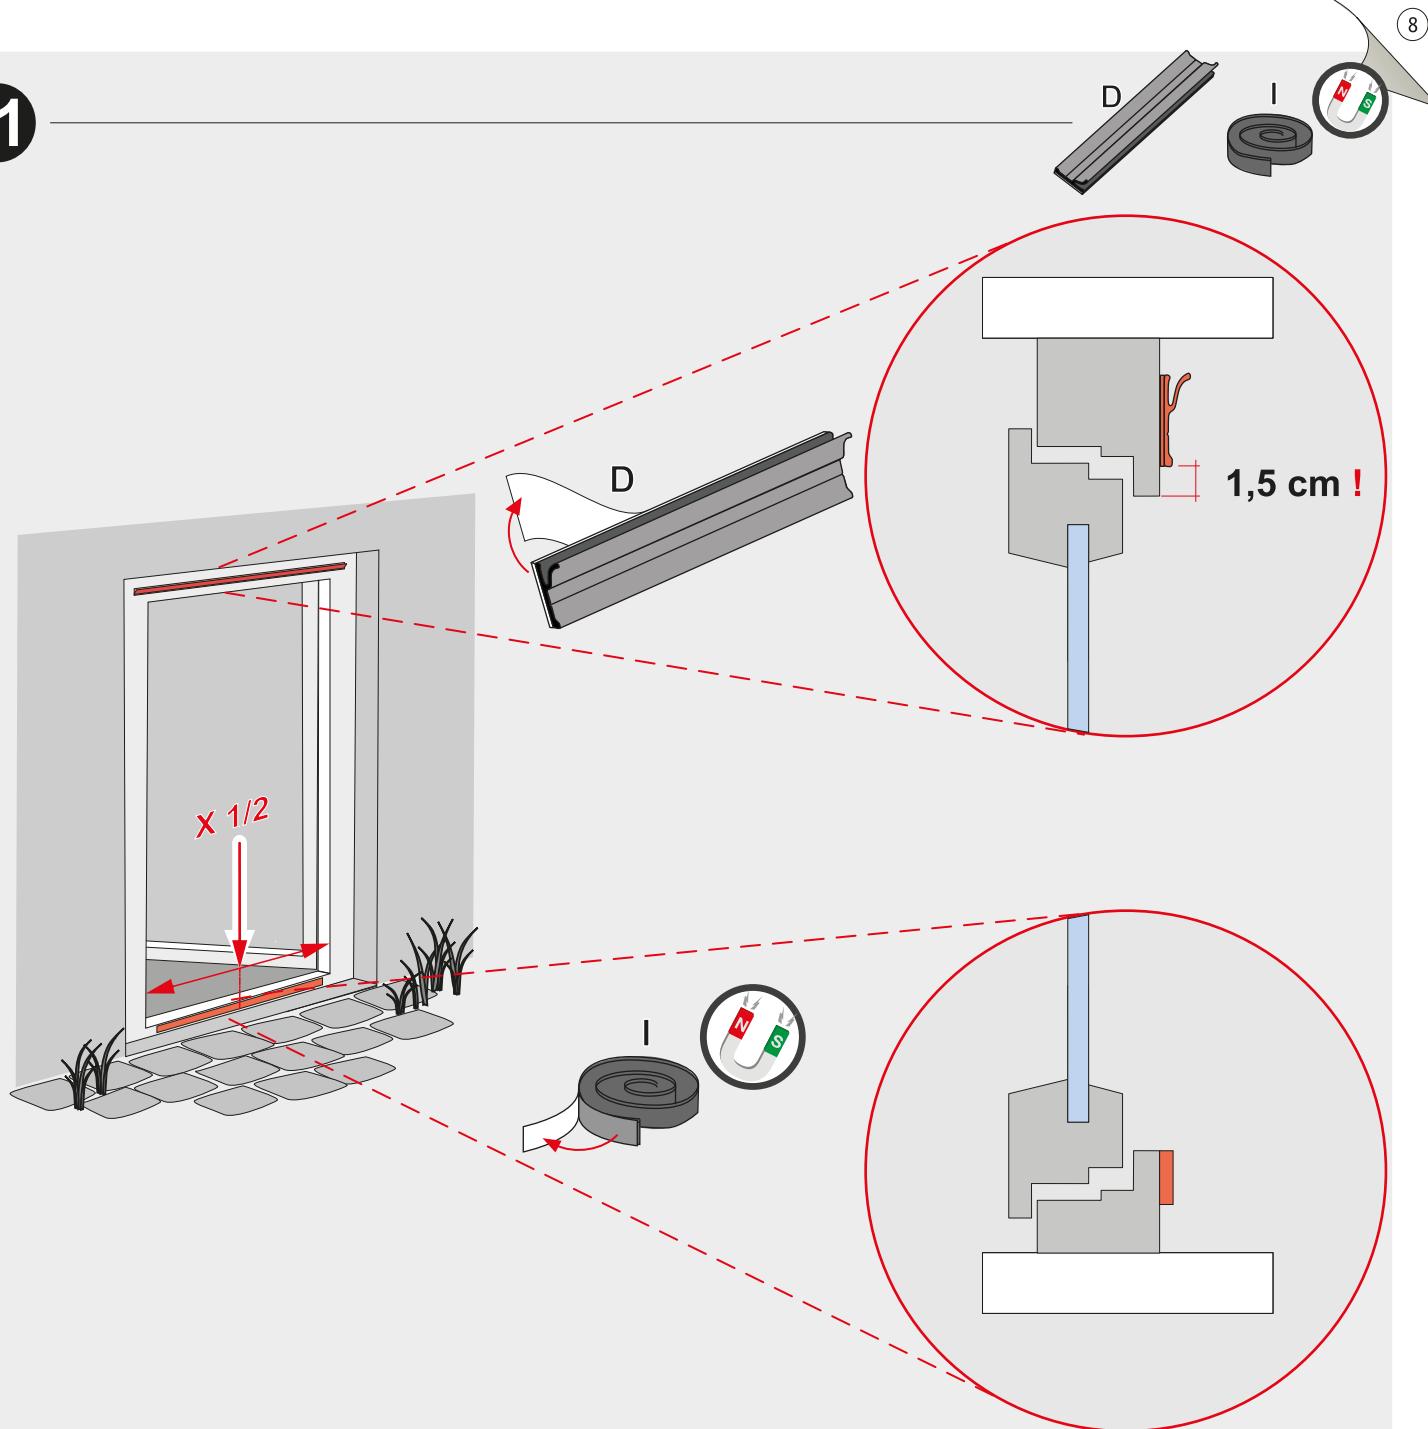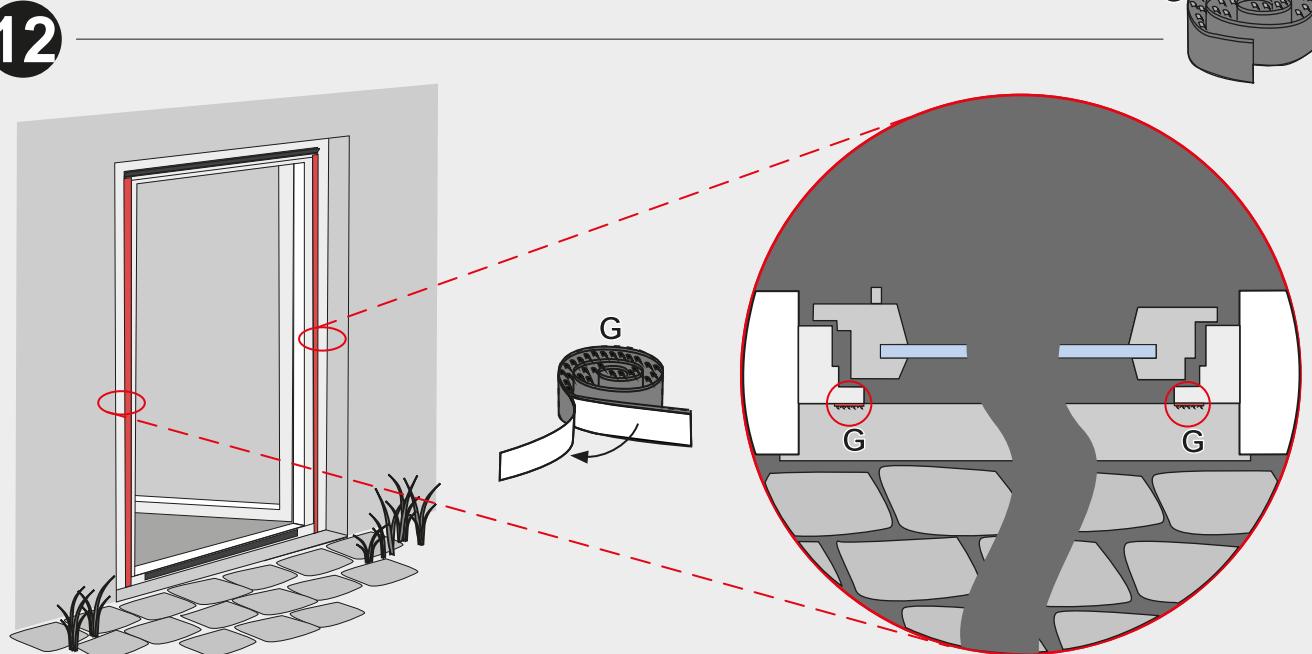**11****12**

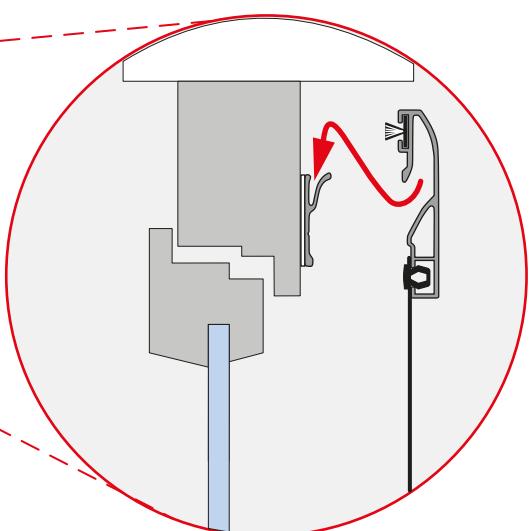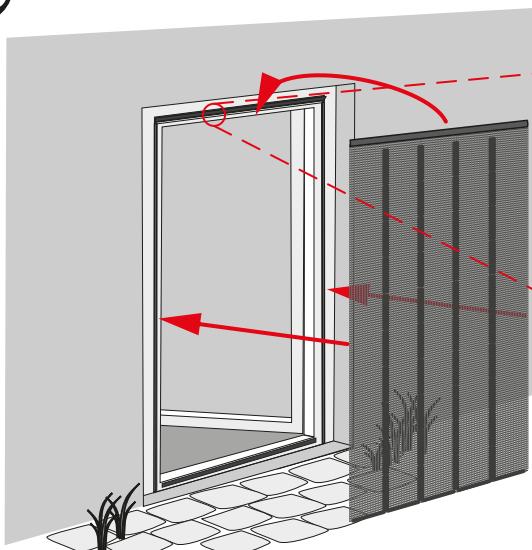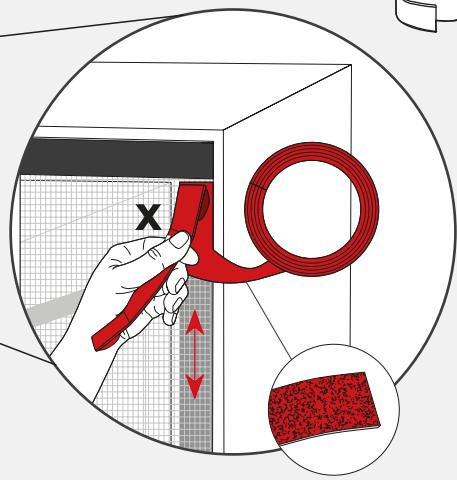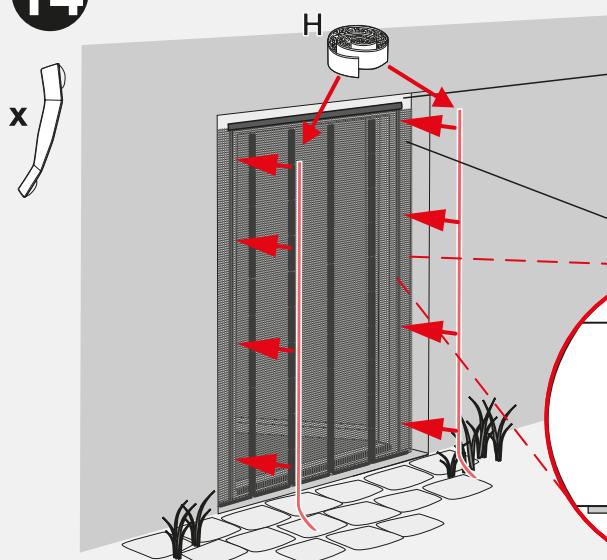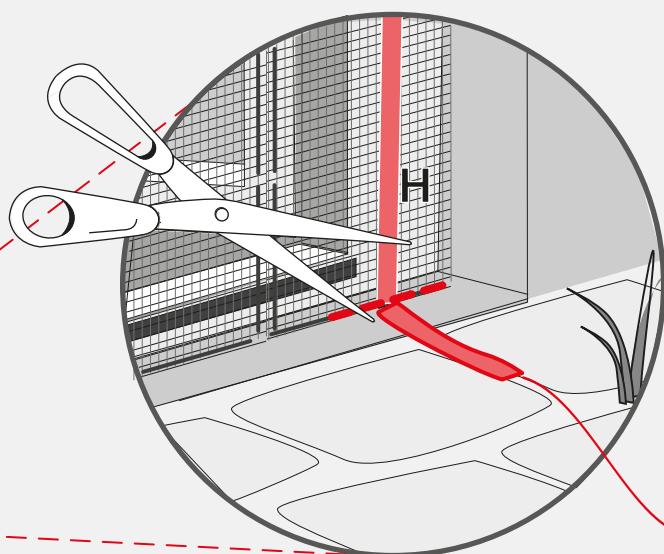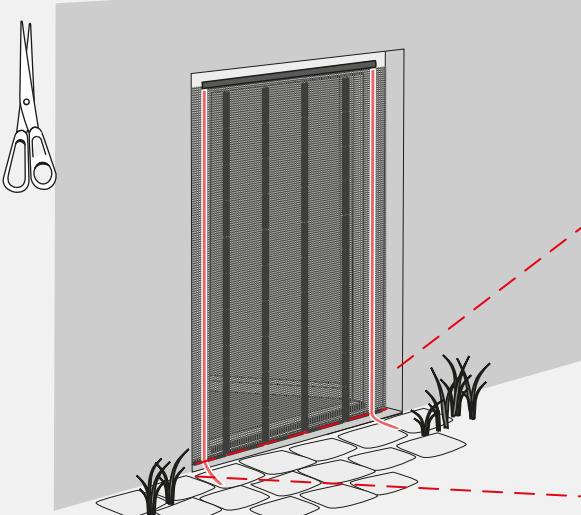**13****14****15**

16

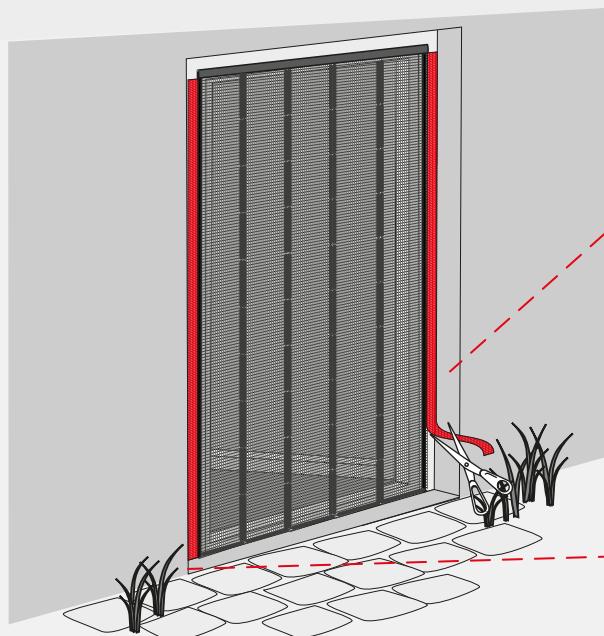10



FR Si vous imprimez ce document, pensez à le trier !



LE TRI  
+ FACILE

