





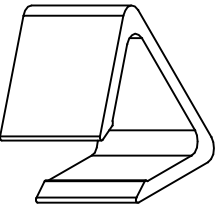
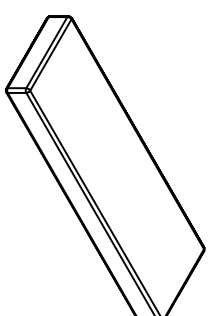
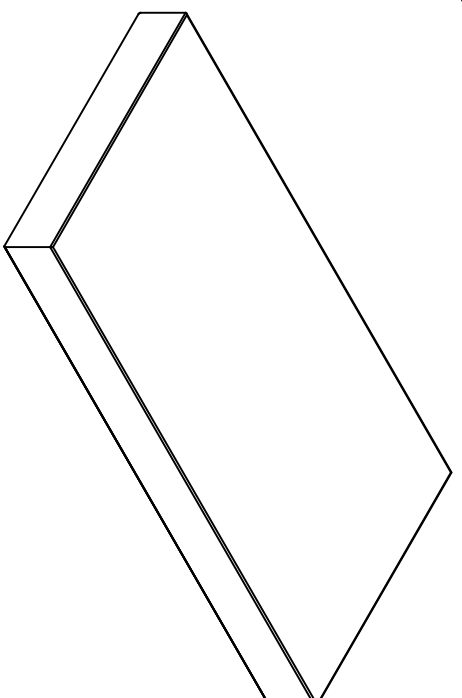
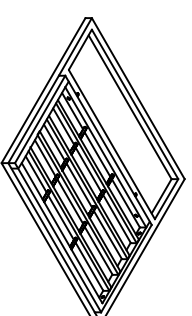
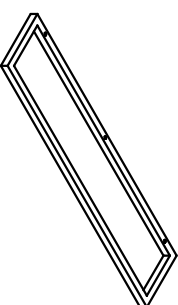
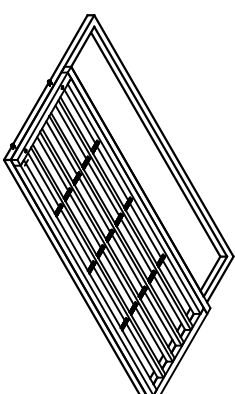
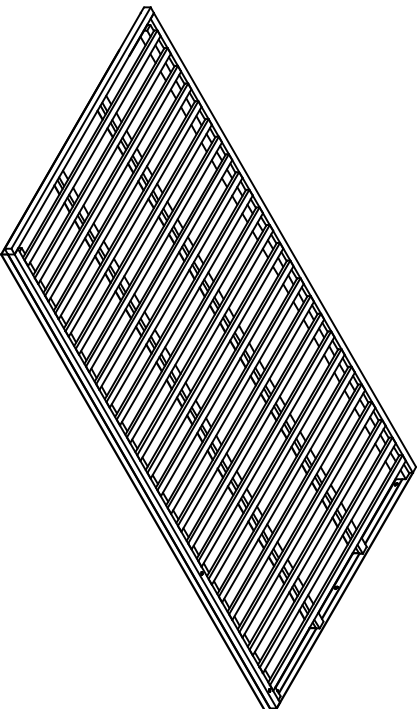


# ASSEMBLY INSTRUCTION

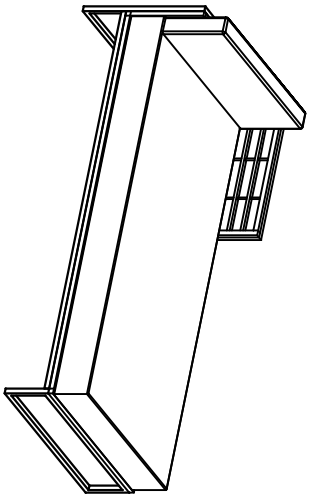


No.		Qty.
A	 6x40x13mm	10
B	 6x70x13mm	2
C	 Ø6/16x1mm	10
D	 6x30x13mm	2
E		2
F		1




# ASSEMBLY INSTRUCTION

Step 1

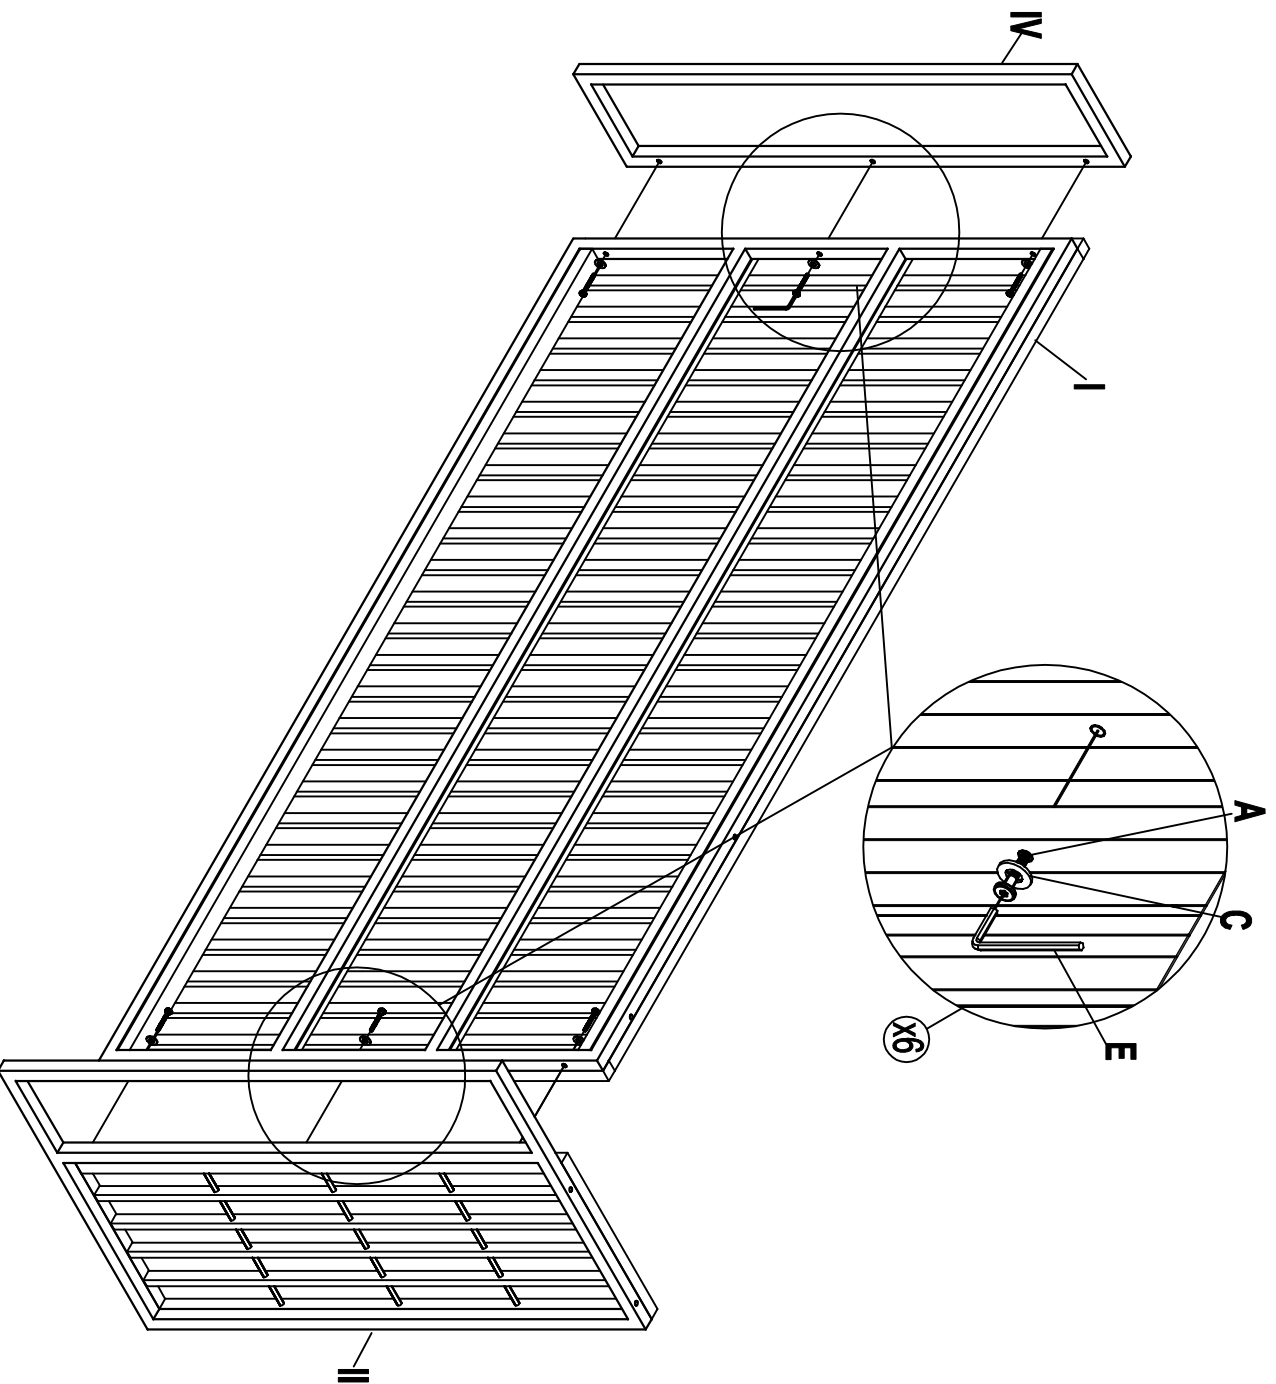


# ASSEMBLY INSTRUCTION

**Step 2**

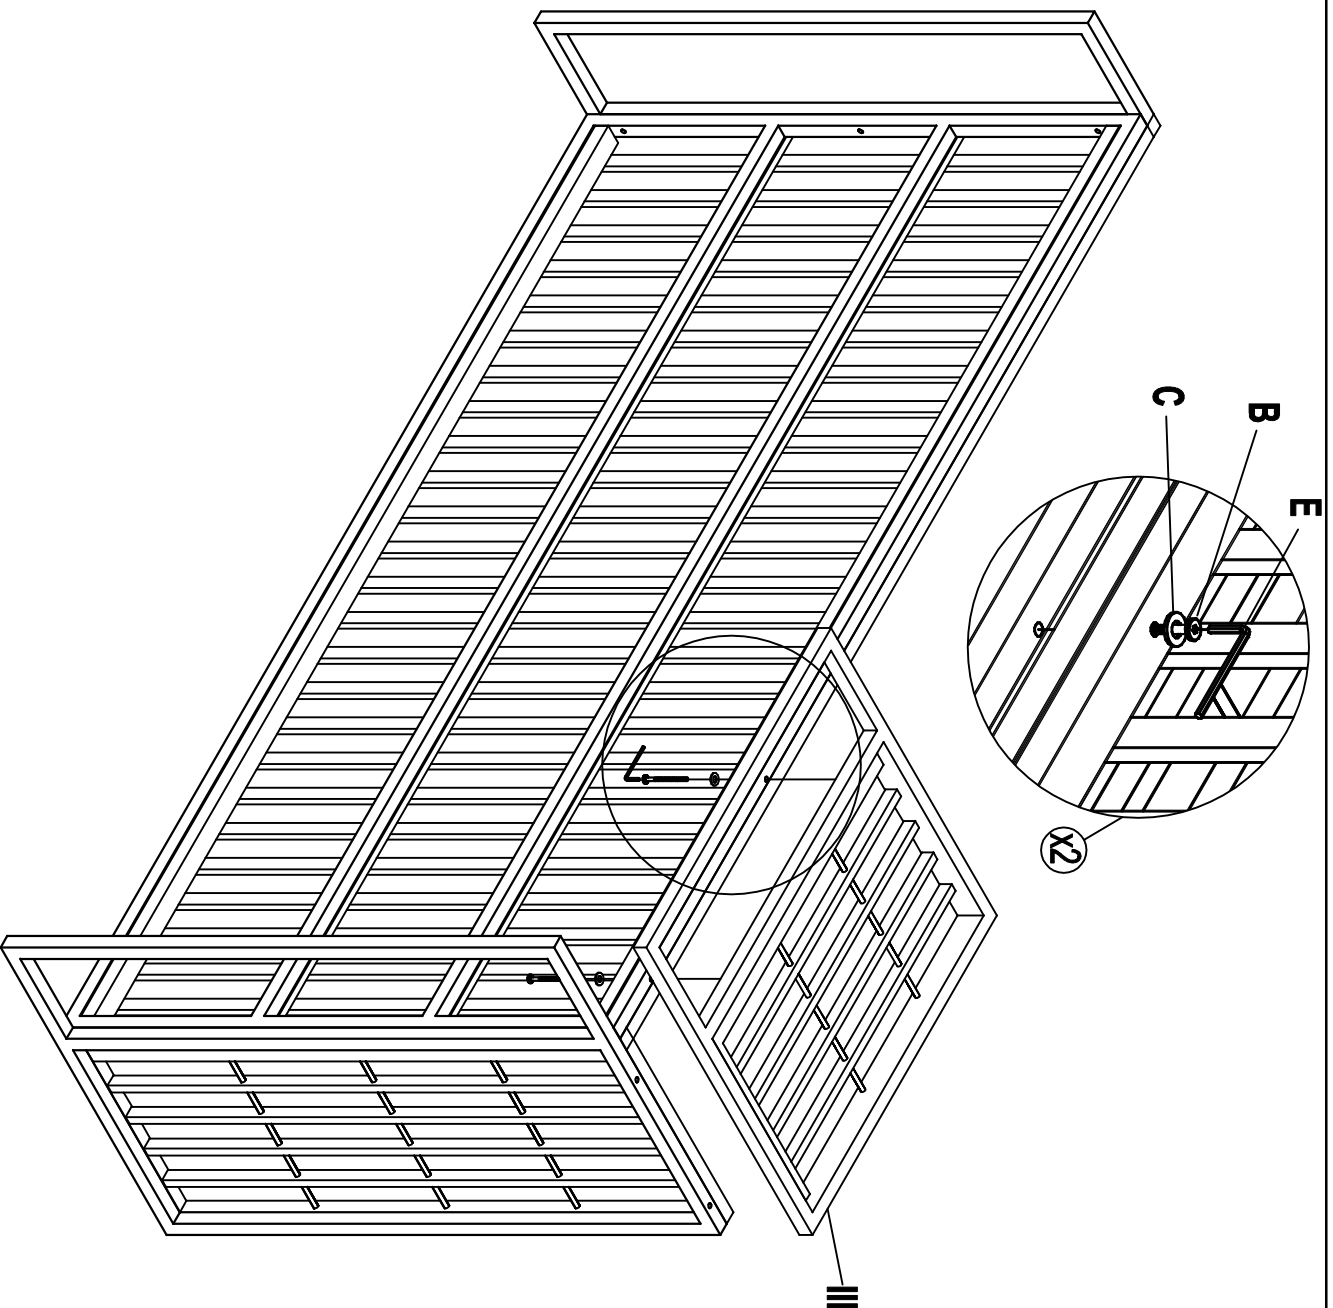


# ASSEMBLY INSTRUCTION

**Step 3**

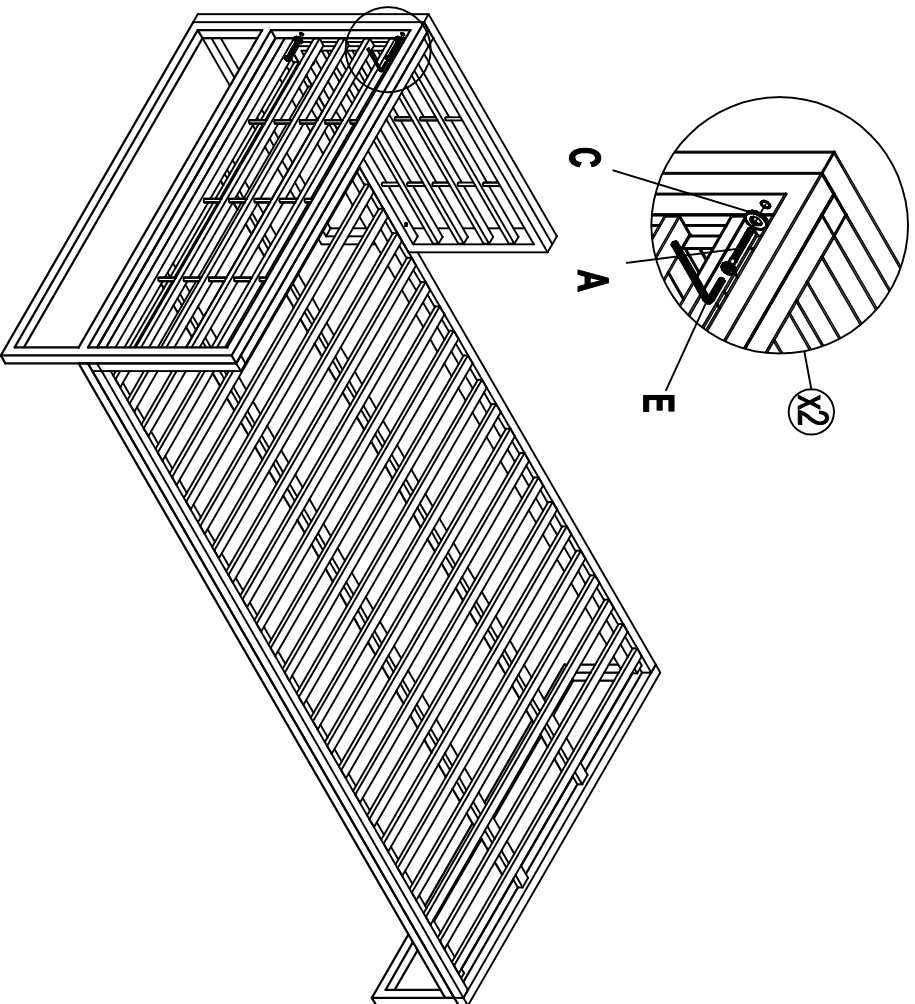


**Step 4**

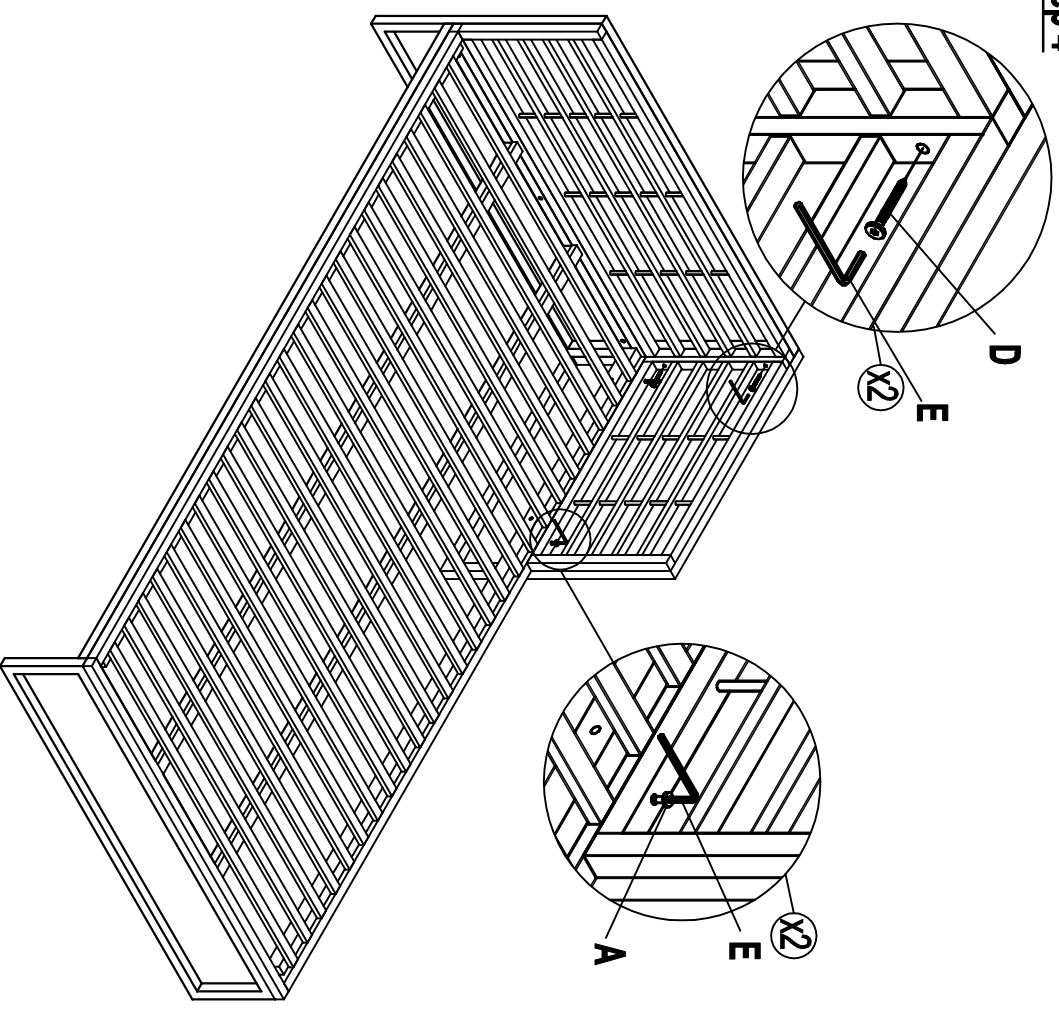


# ASSEMBLY INSTRUCTION

**Step 5**

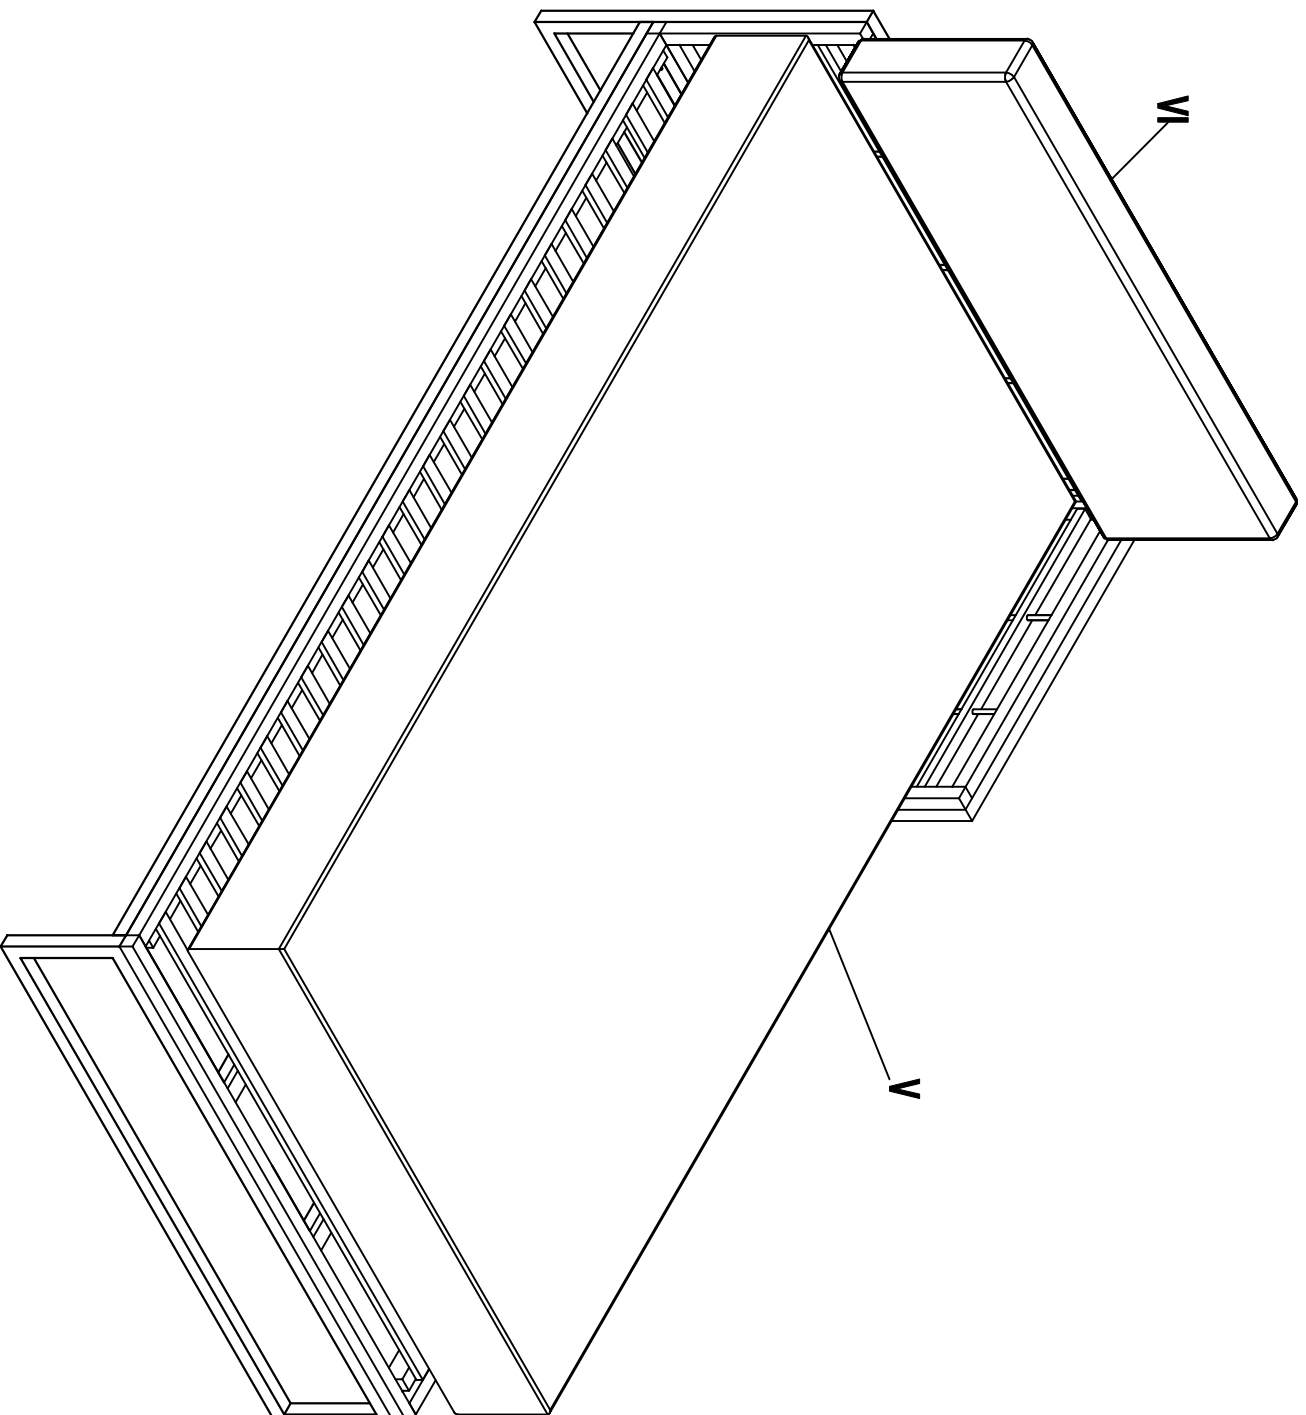

# ASSEMBLY INSTRUCTION

## Step 6

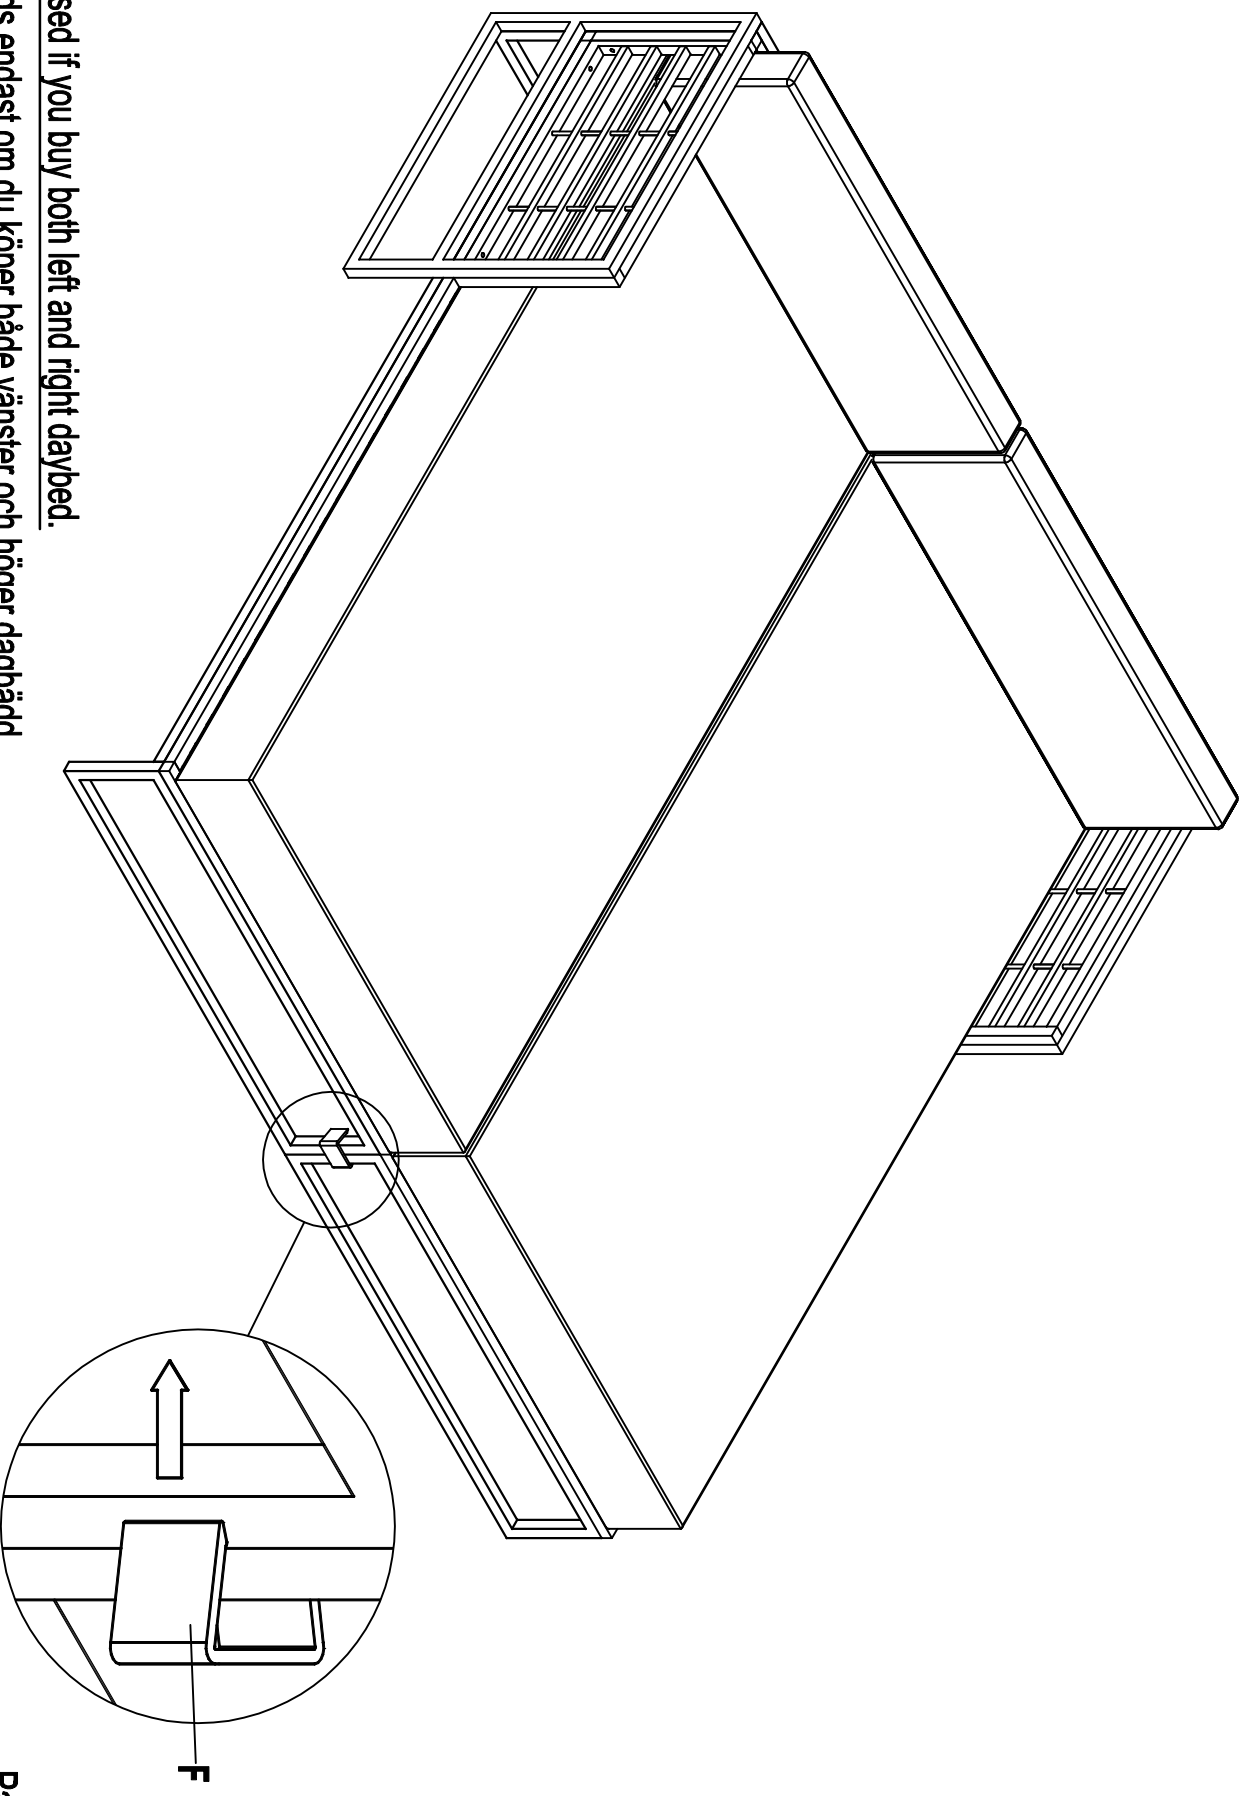


**Connector only used if you buy both left and right daybed.**

**Connector används endast om du köper både vänster och höger dagbädd.**

# ASSEMBLY INSTRUCTION

## Step 7

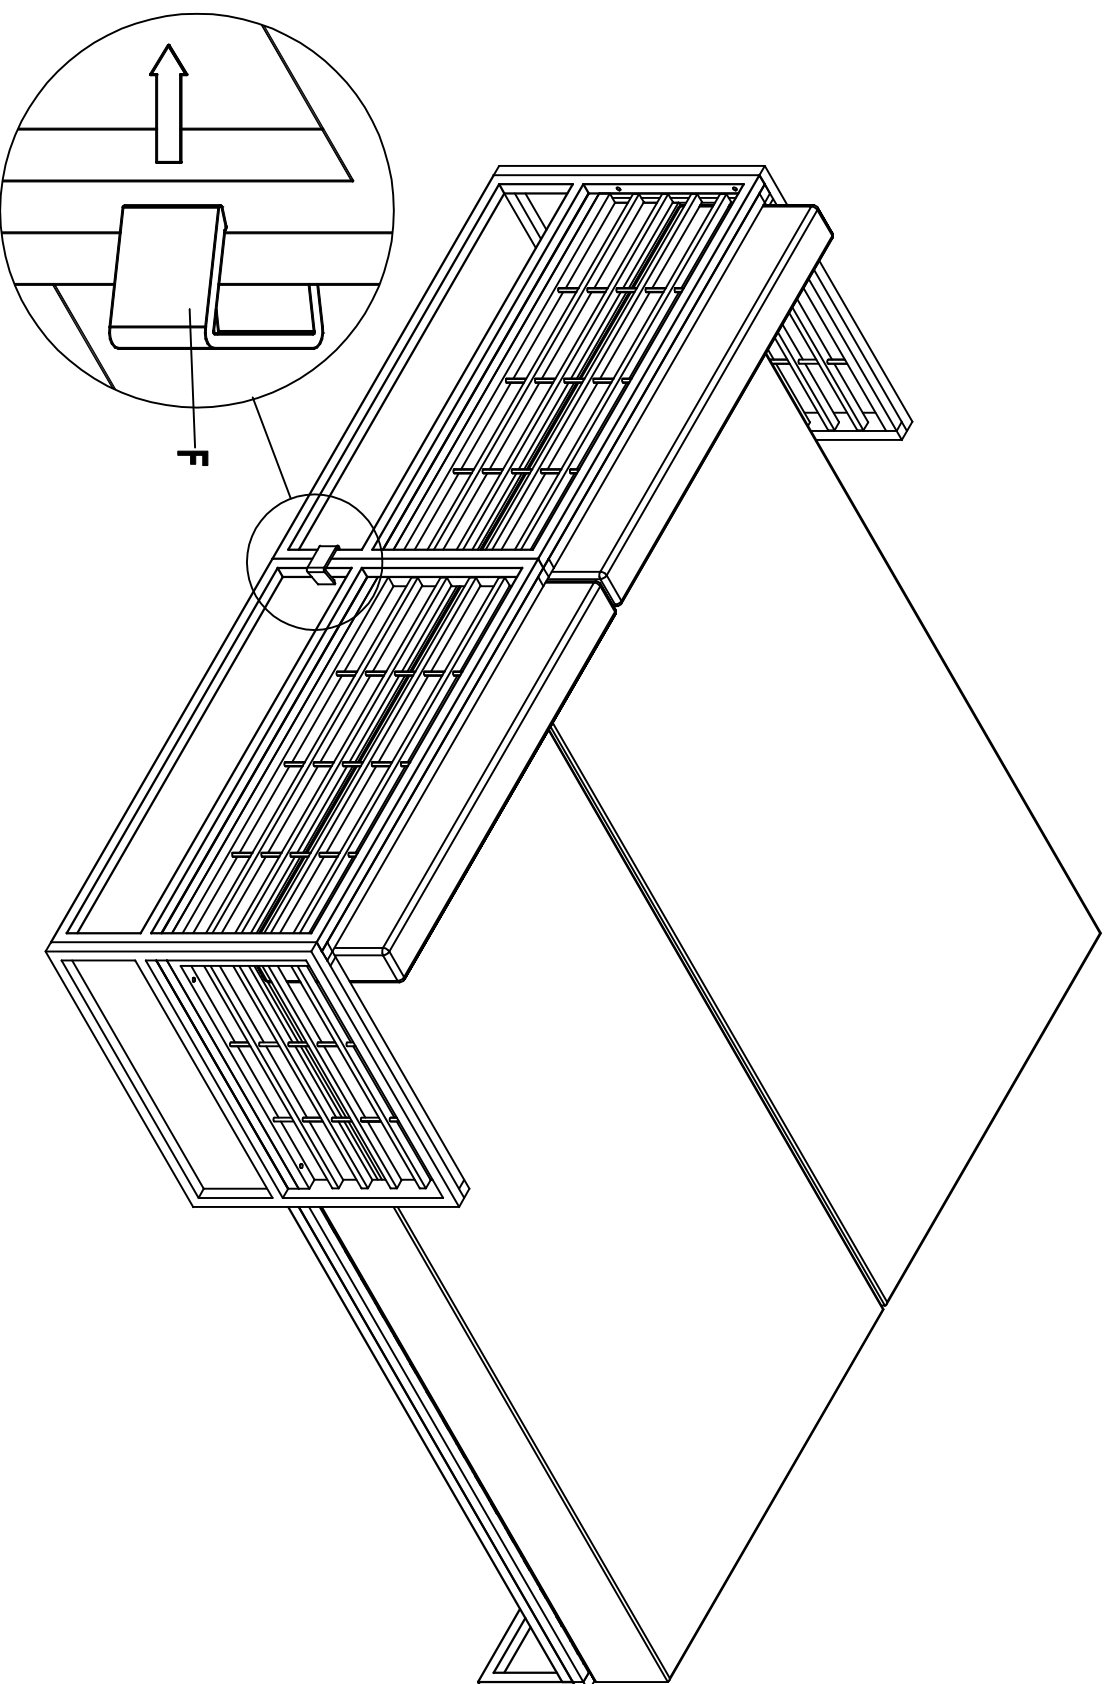

Connector only used if you buy both left and right daybed.

Connector används endast om du köper både vänster och höger dagbädd.