


# ASSEMBLY INSTRUCTION

Art No.: 9560 - 068

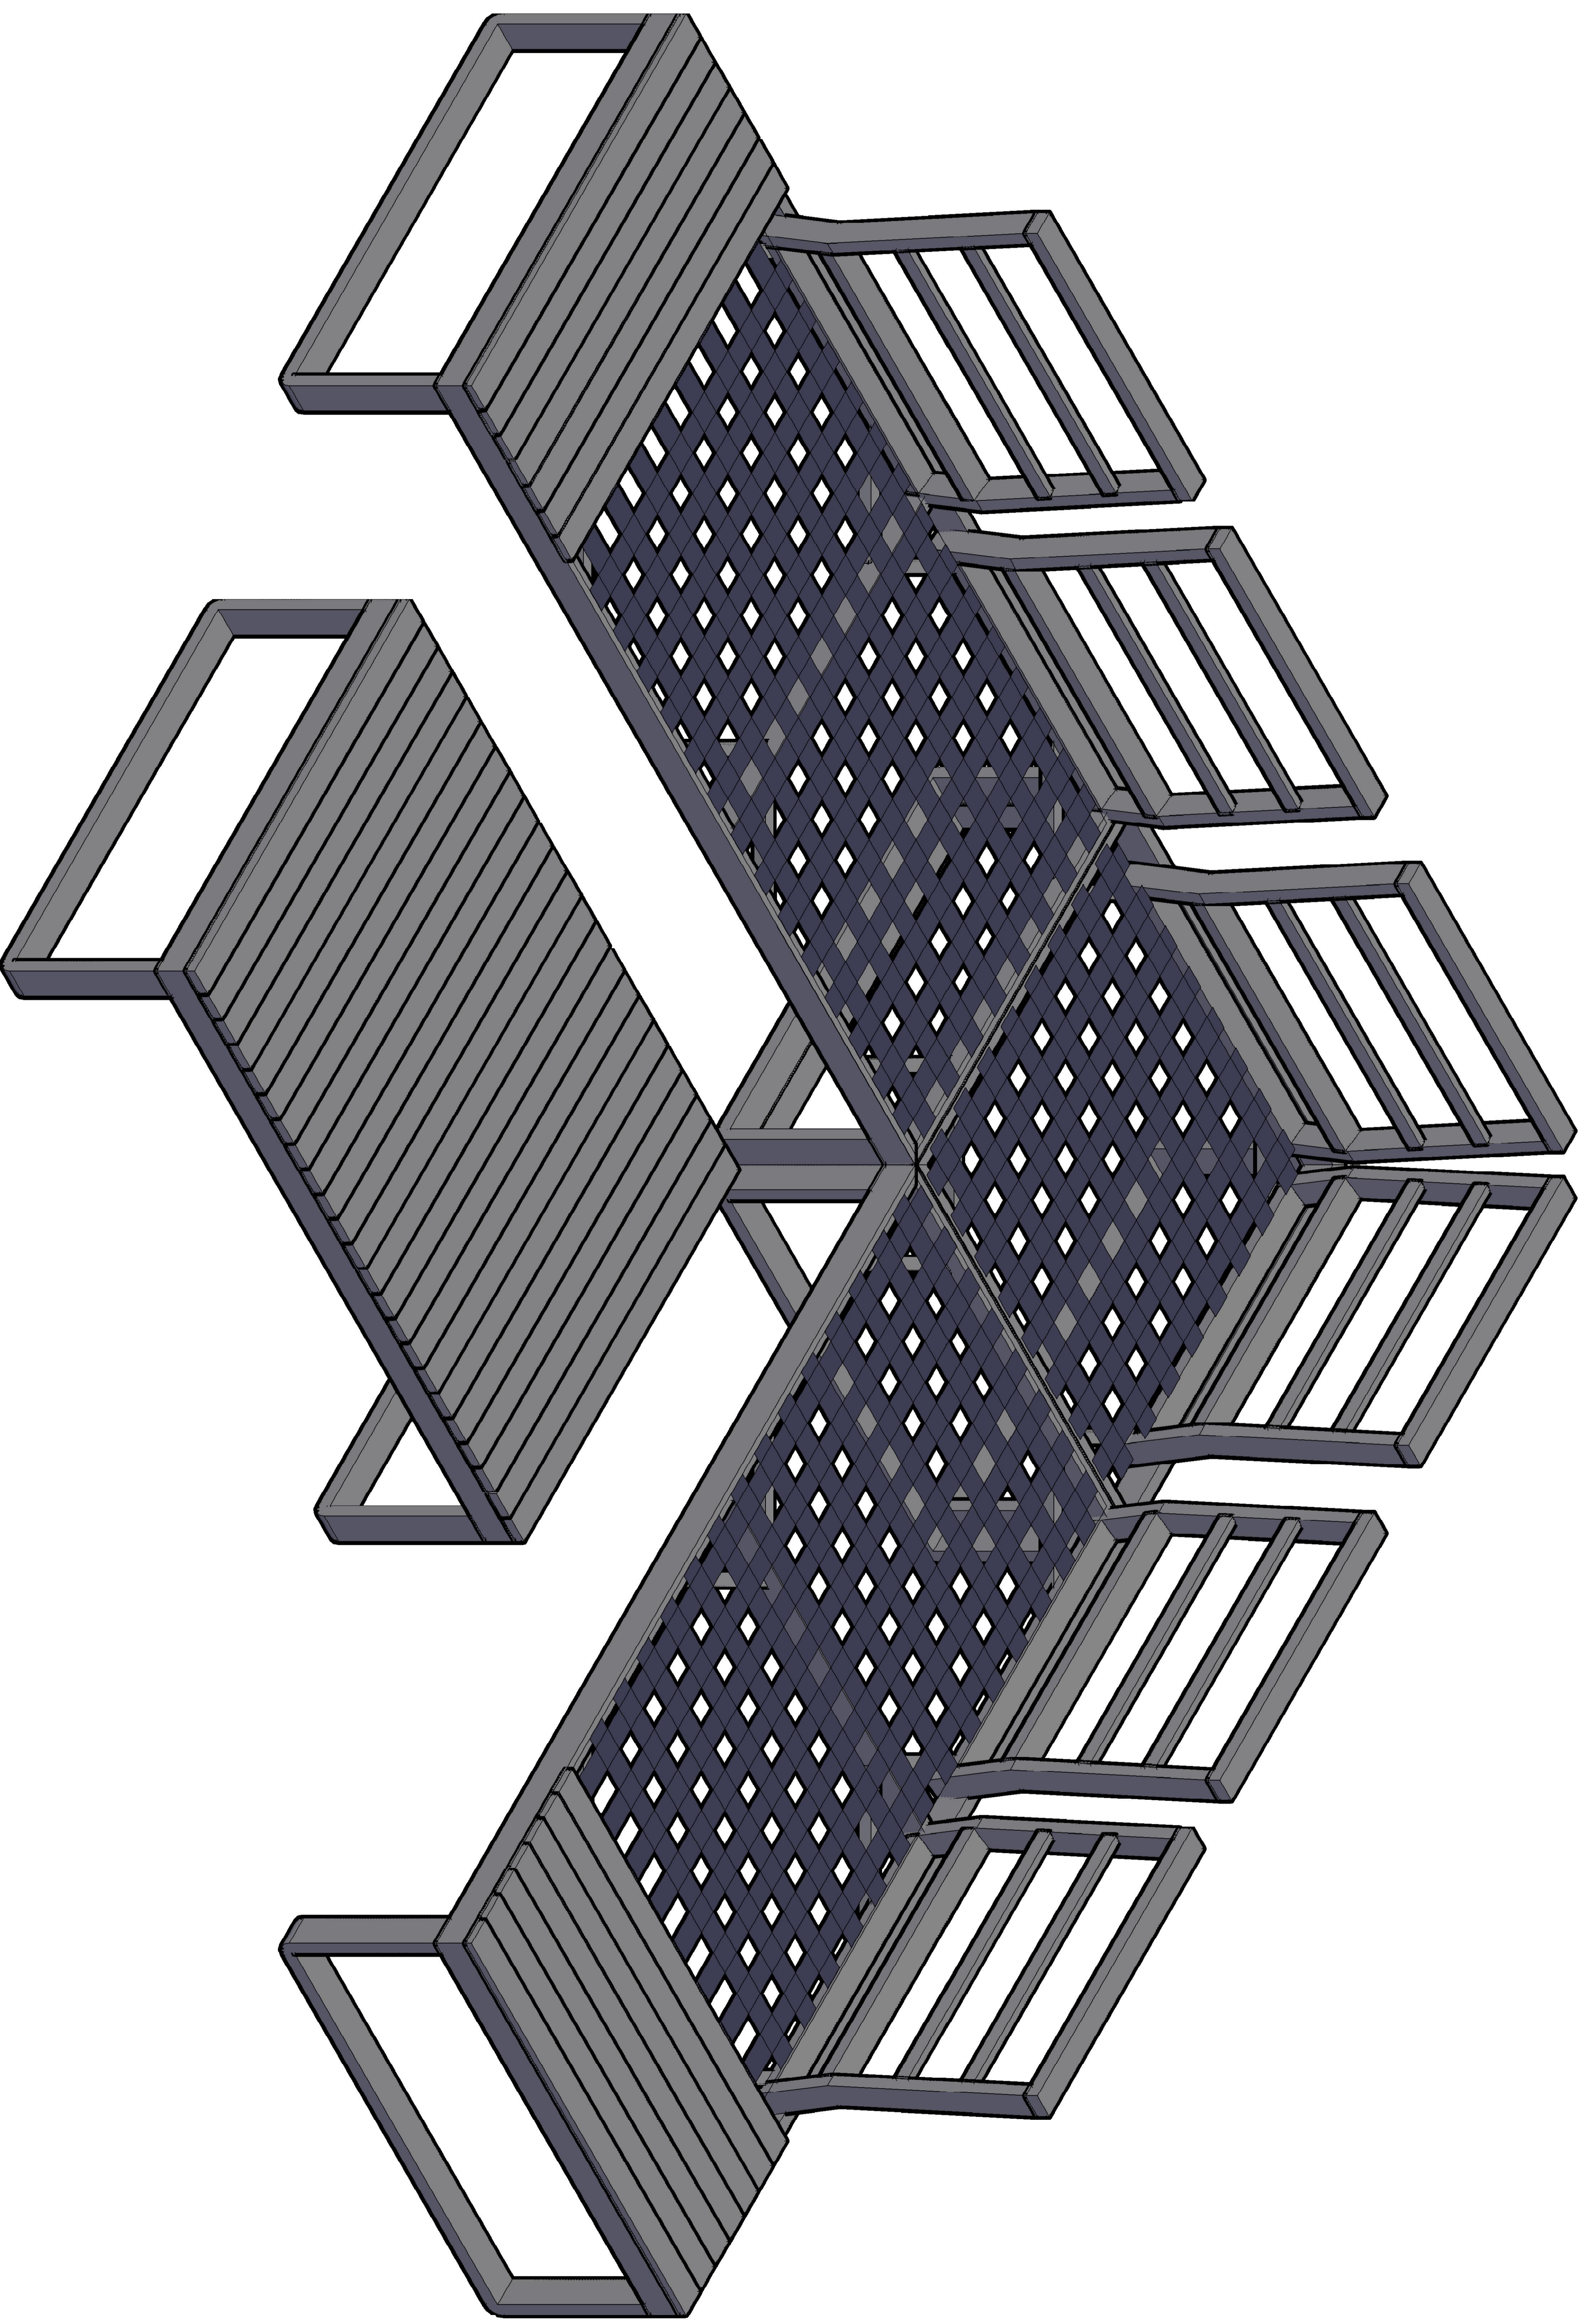





# ASSEMBLY INSTRUCTION

## Art No.: 9560 - 068


(1) Right bench

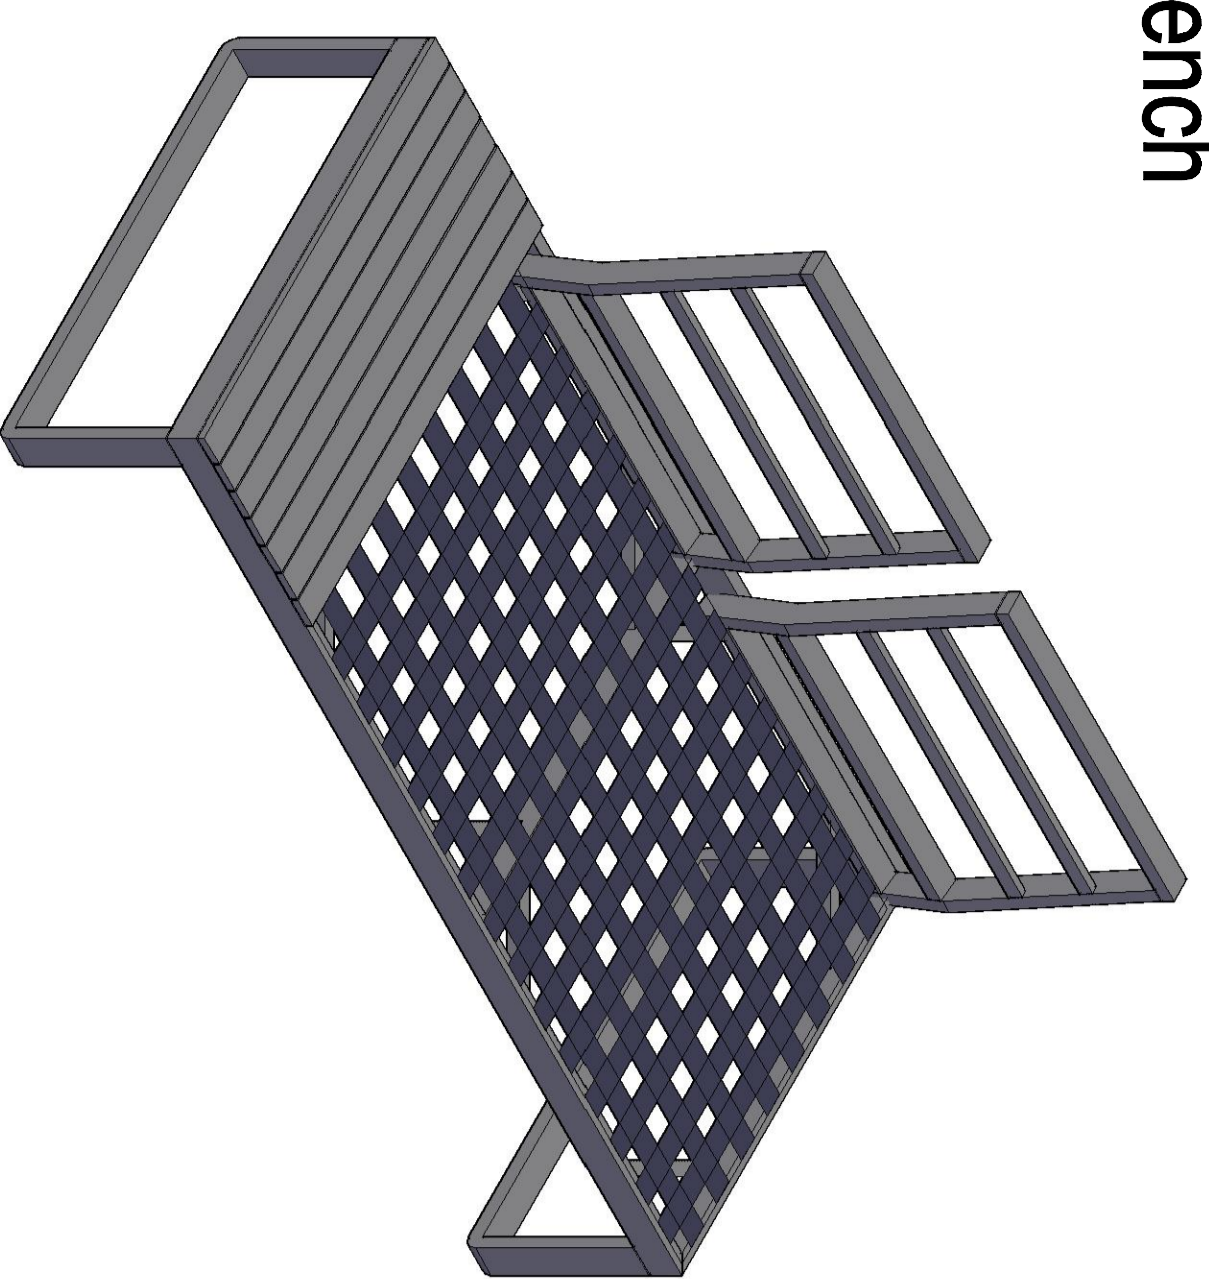



(2) Left bench

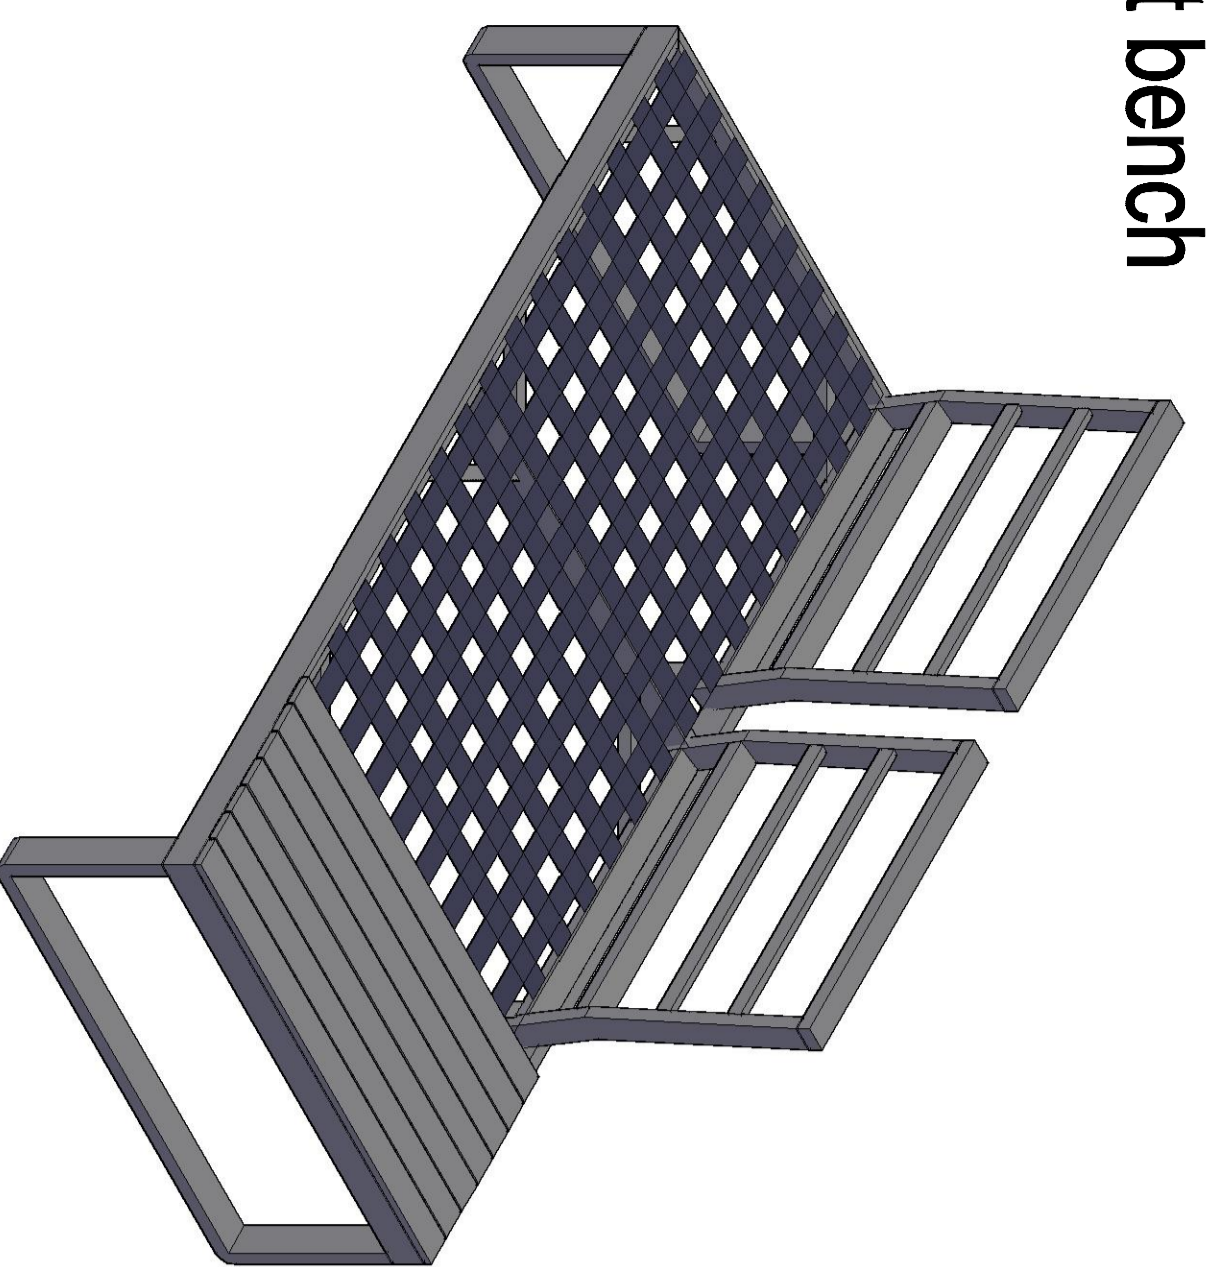

(3) Corner

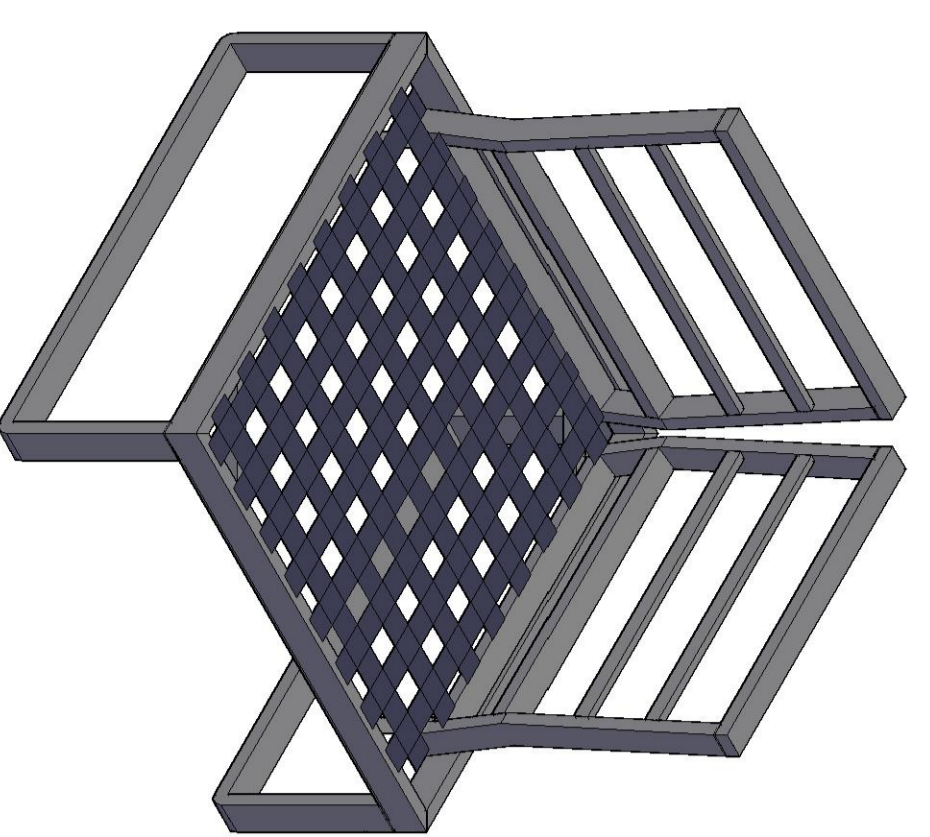

(4) = 2

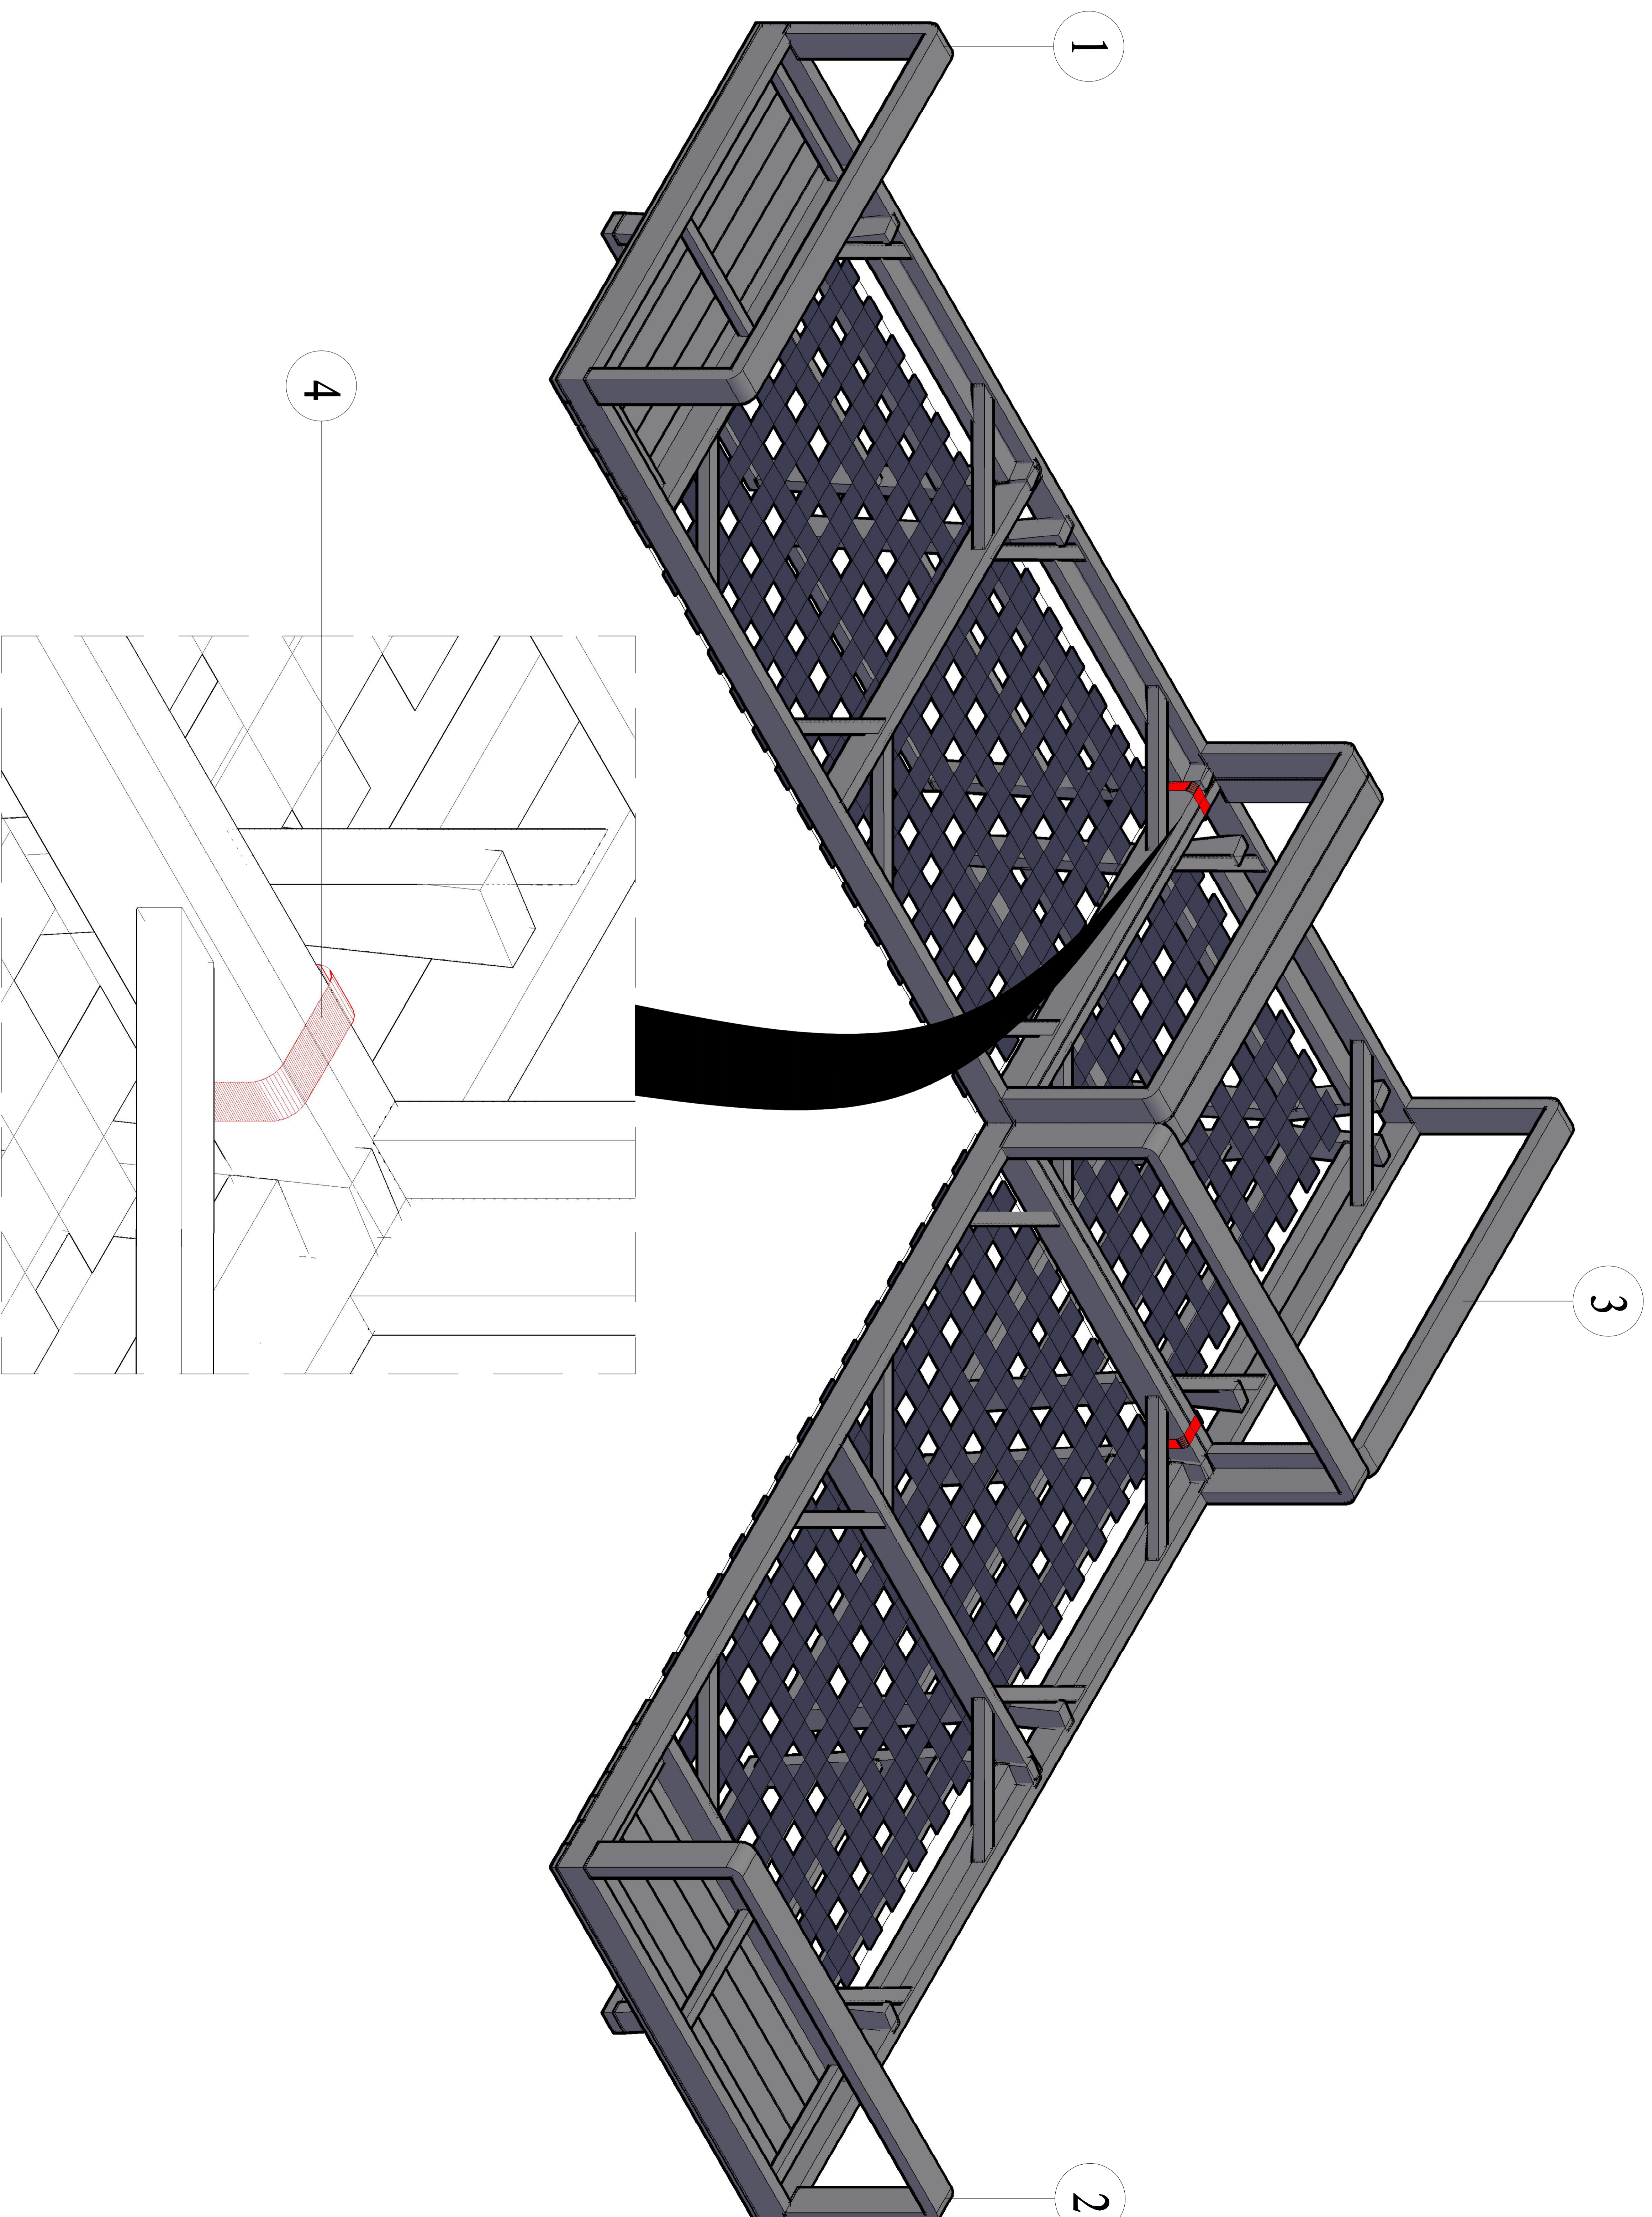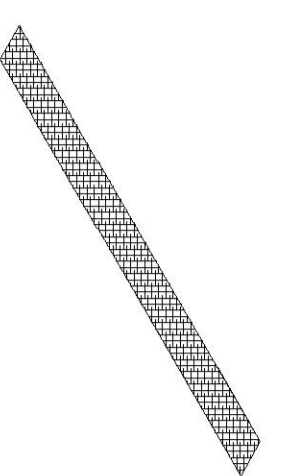





# ASSEMBLY INSTRUCTION

## Art No.: 9560 - 068


(1) Right bench

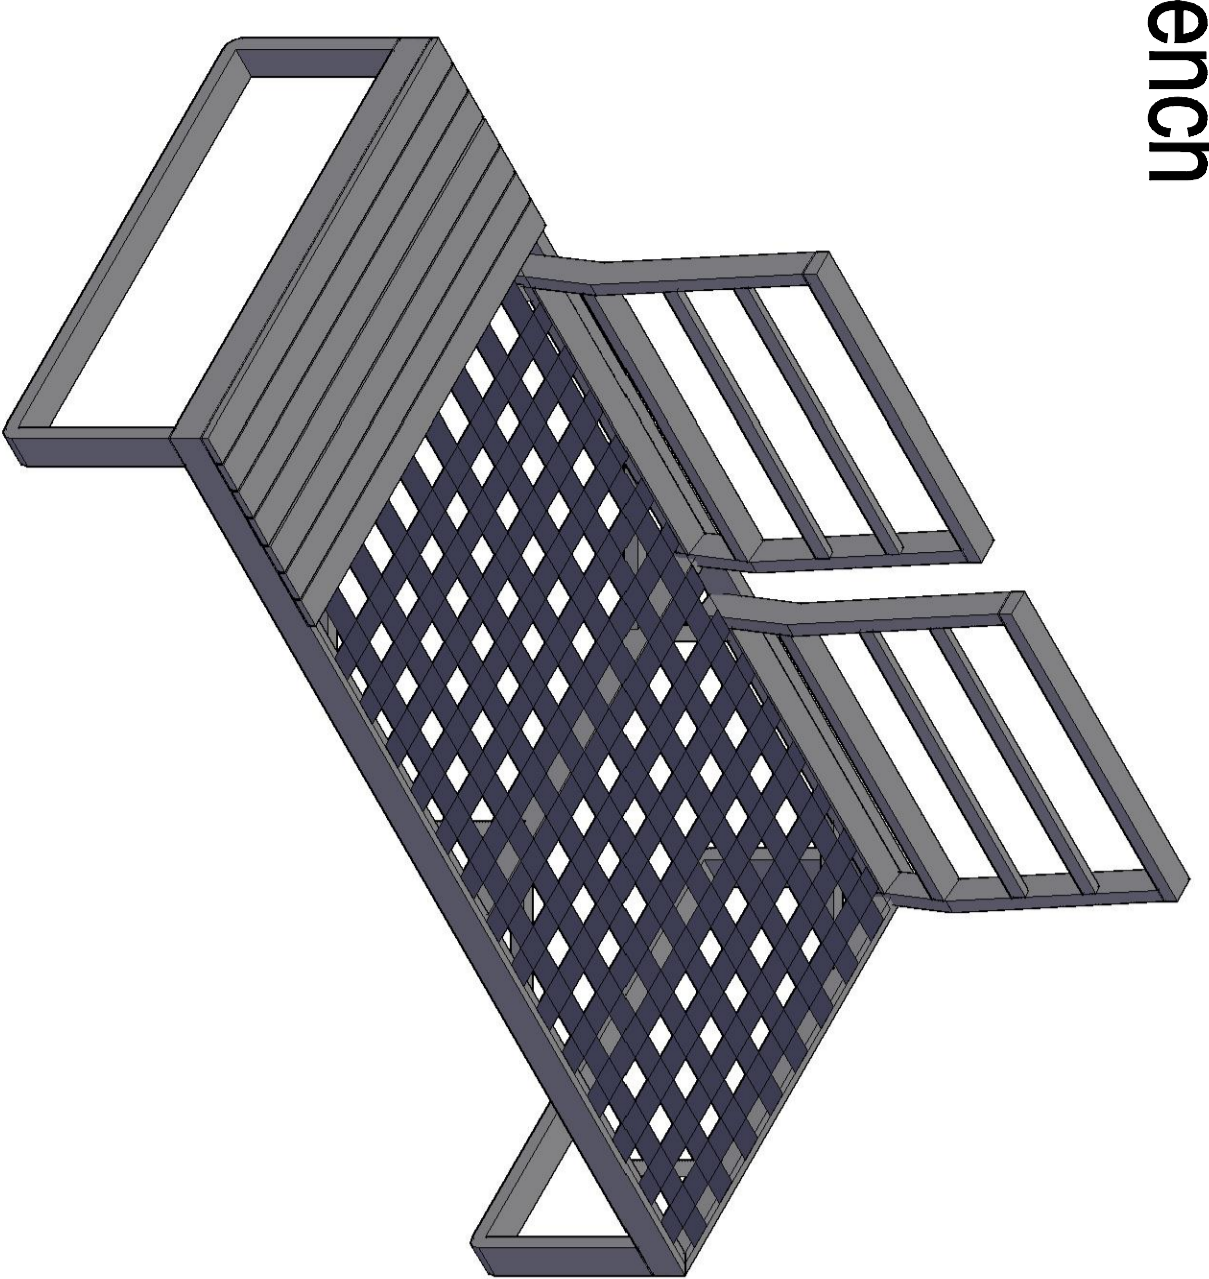


(2) Backrest

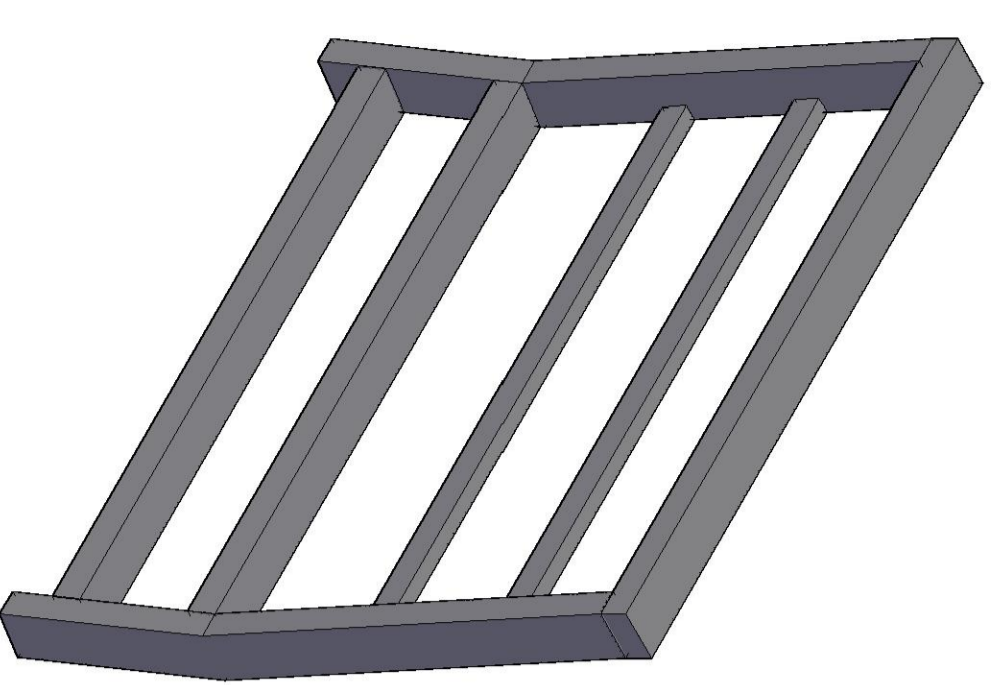



(3) = 1 Spanner

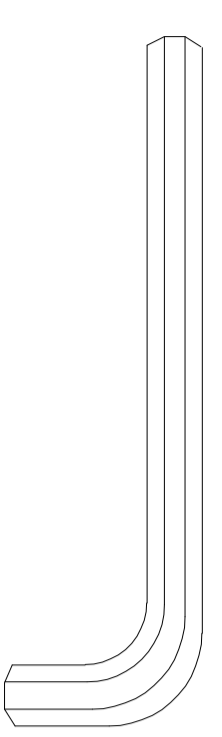

(4) = 24 Bulong (M8 \* 60)

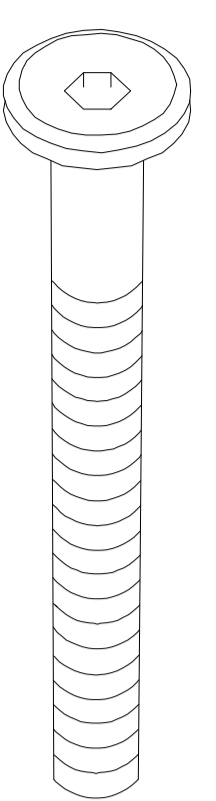

(5) = 24 Flat Washer

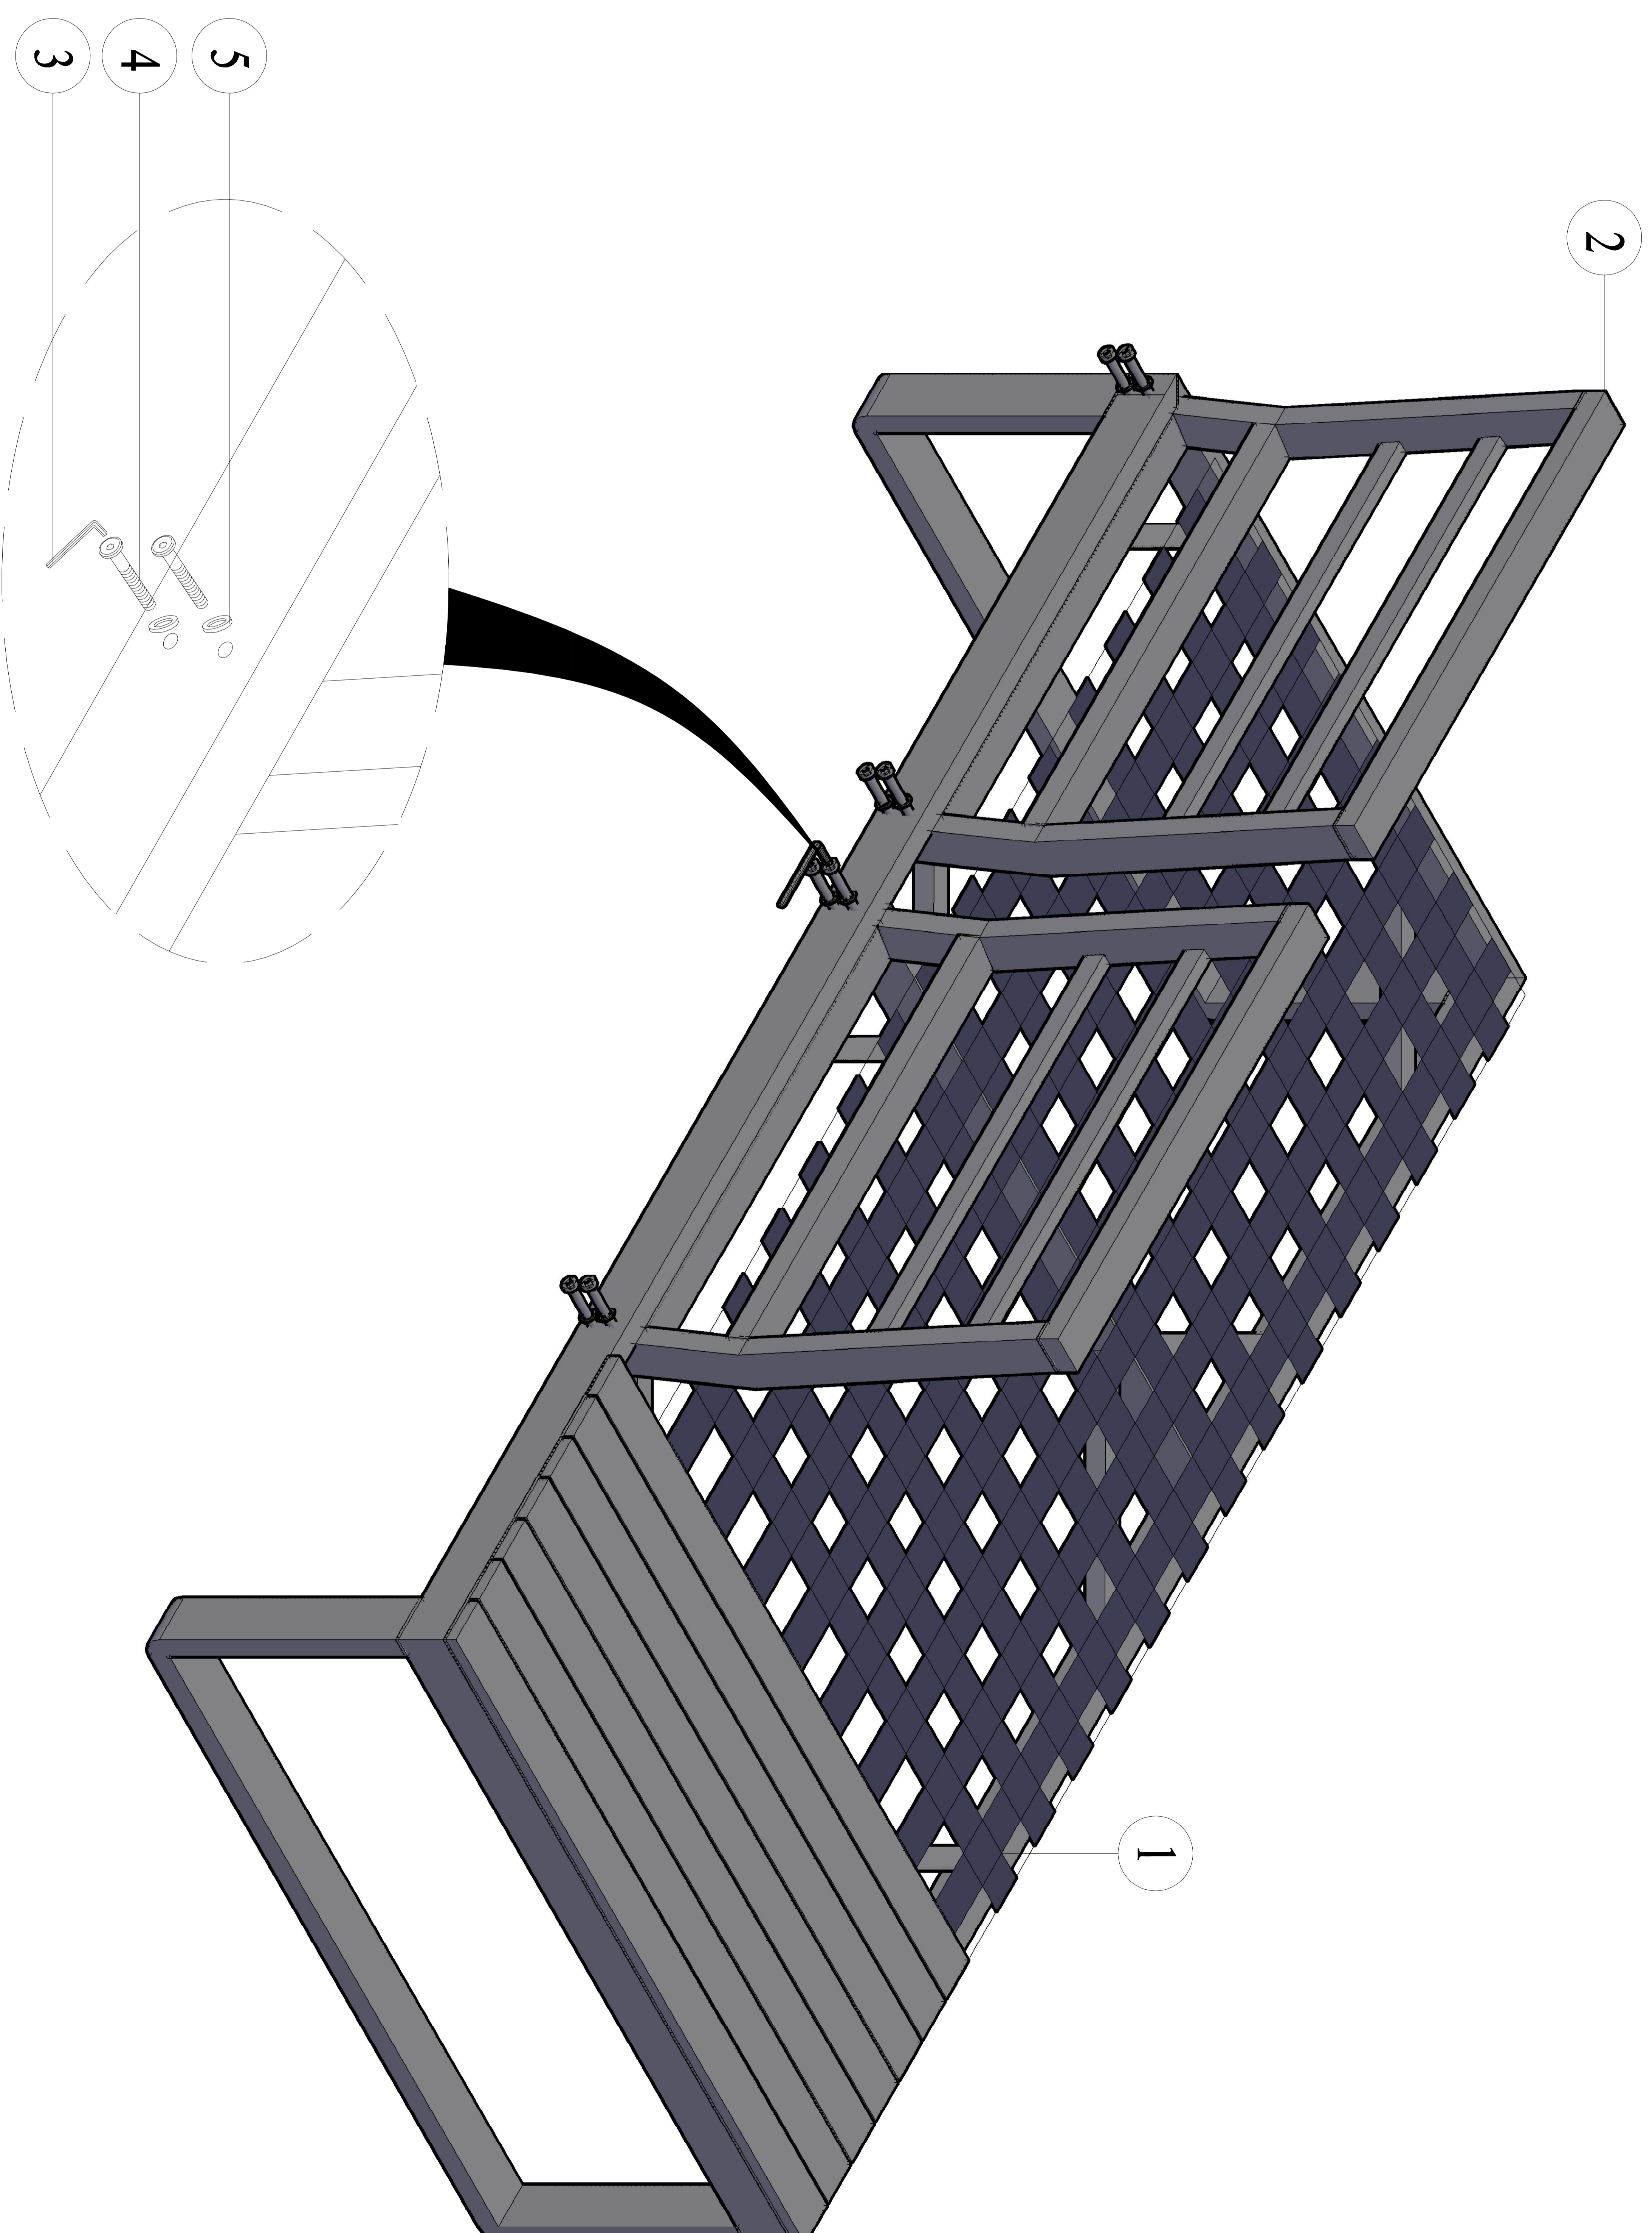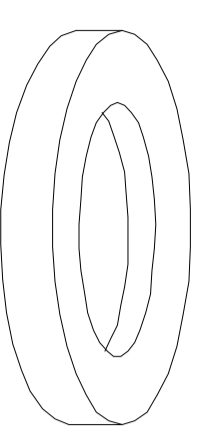





# ASSEMBLY INSTRUCTION

## Art No.: 9560 - 068


(1) Left bench

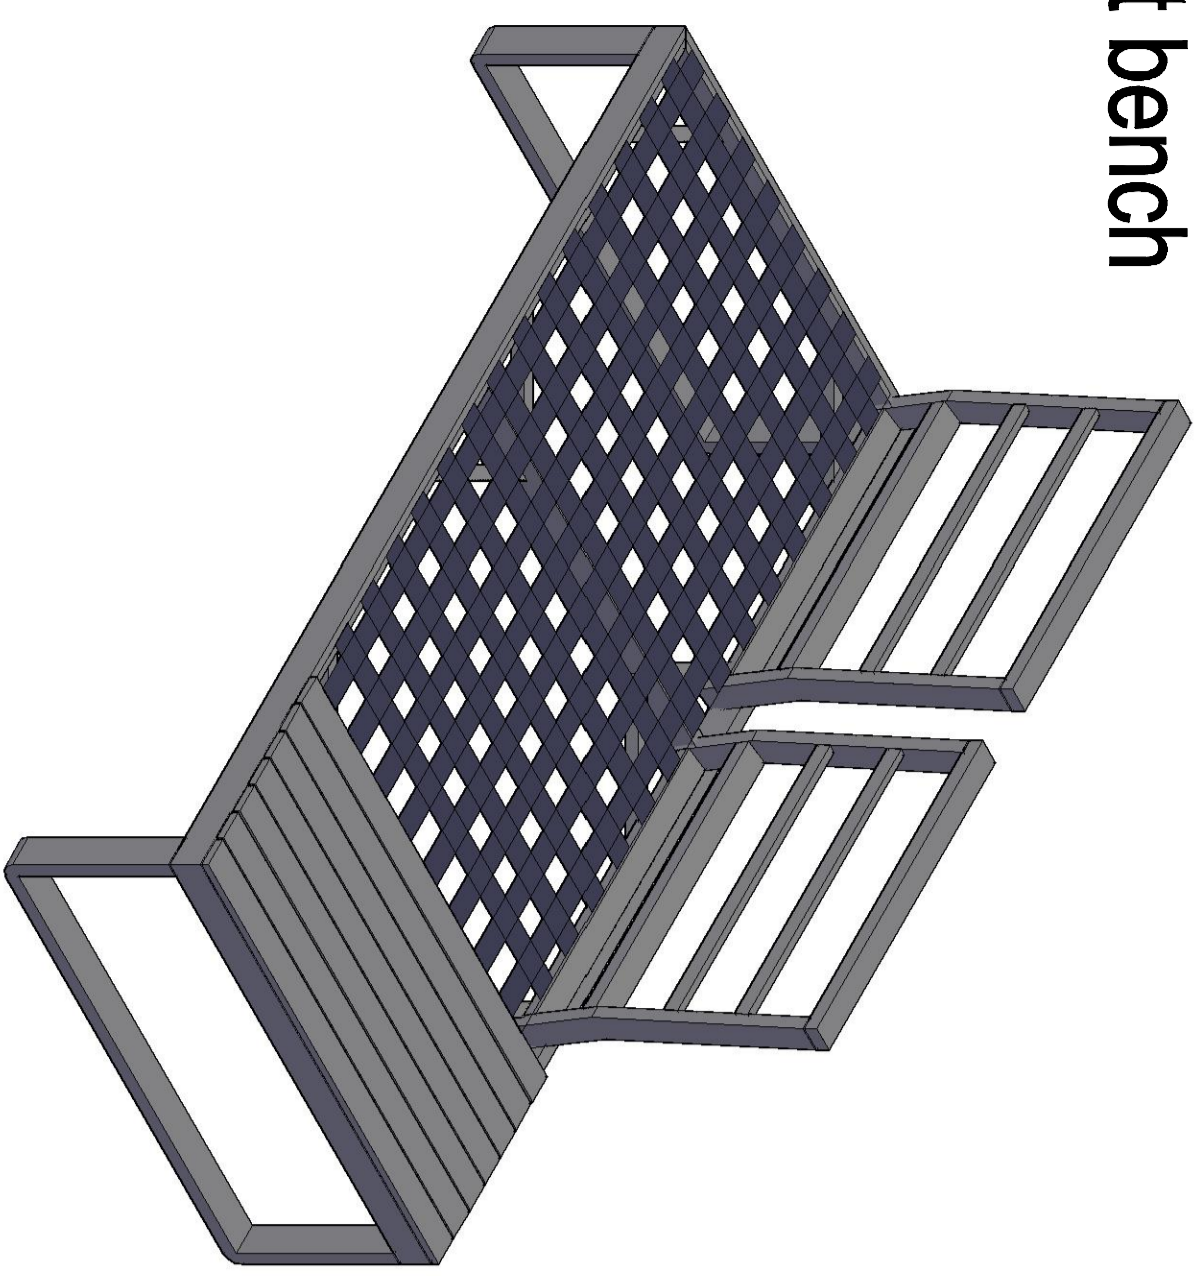


(2) Backrest

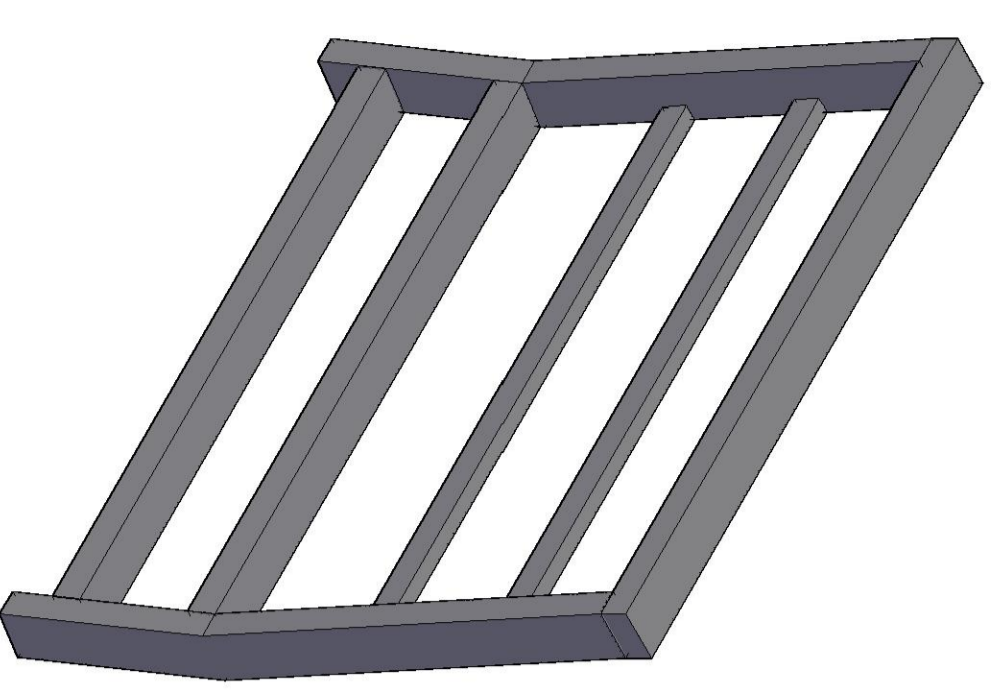



(3) Spanner

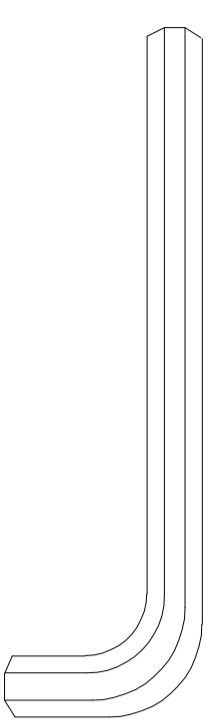

(4) Bolong (M8 \* 60)

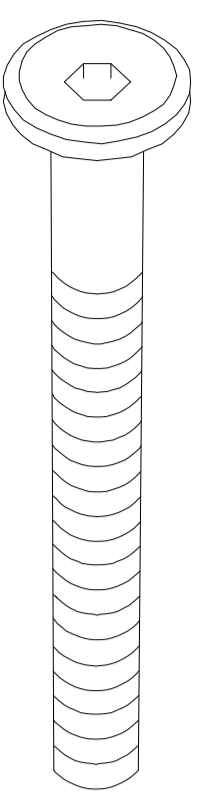

(5) Flat Washer

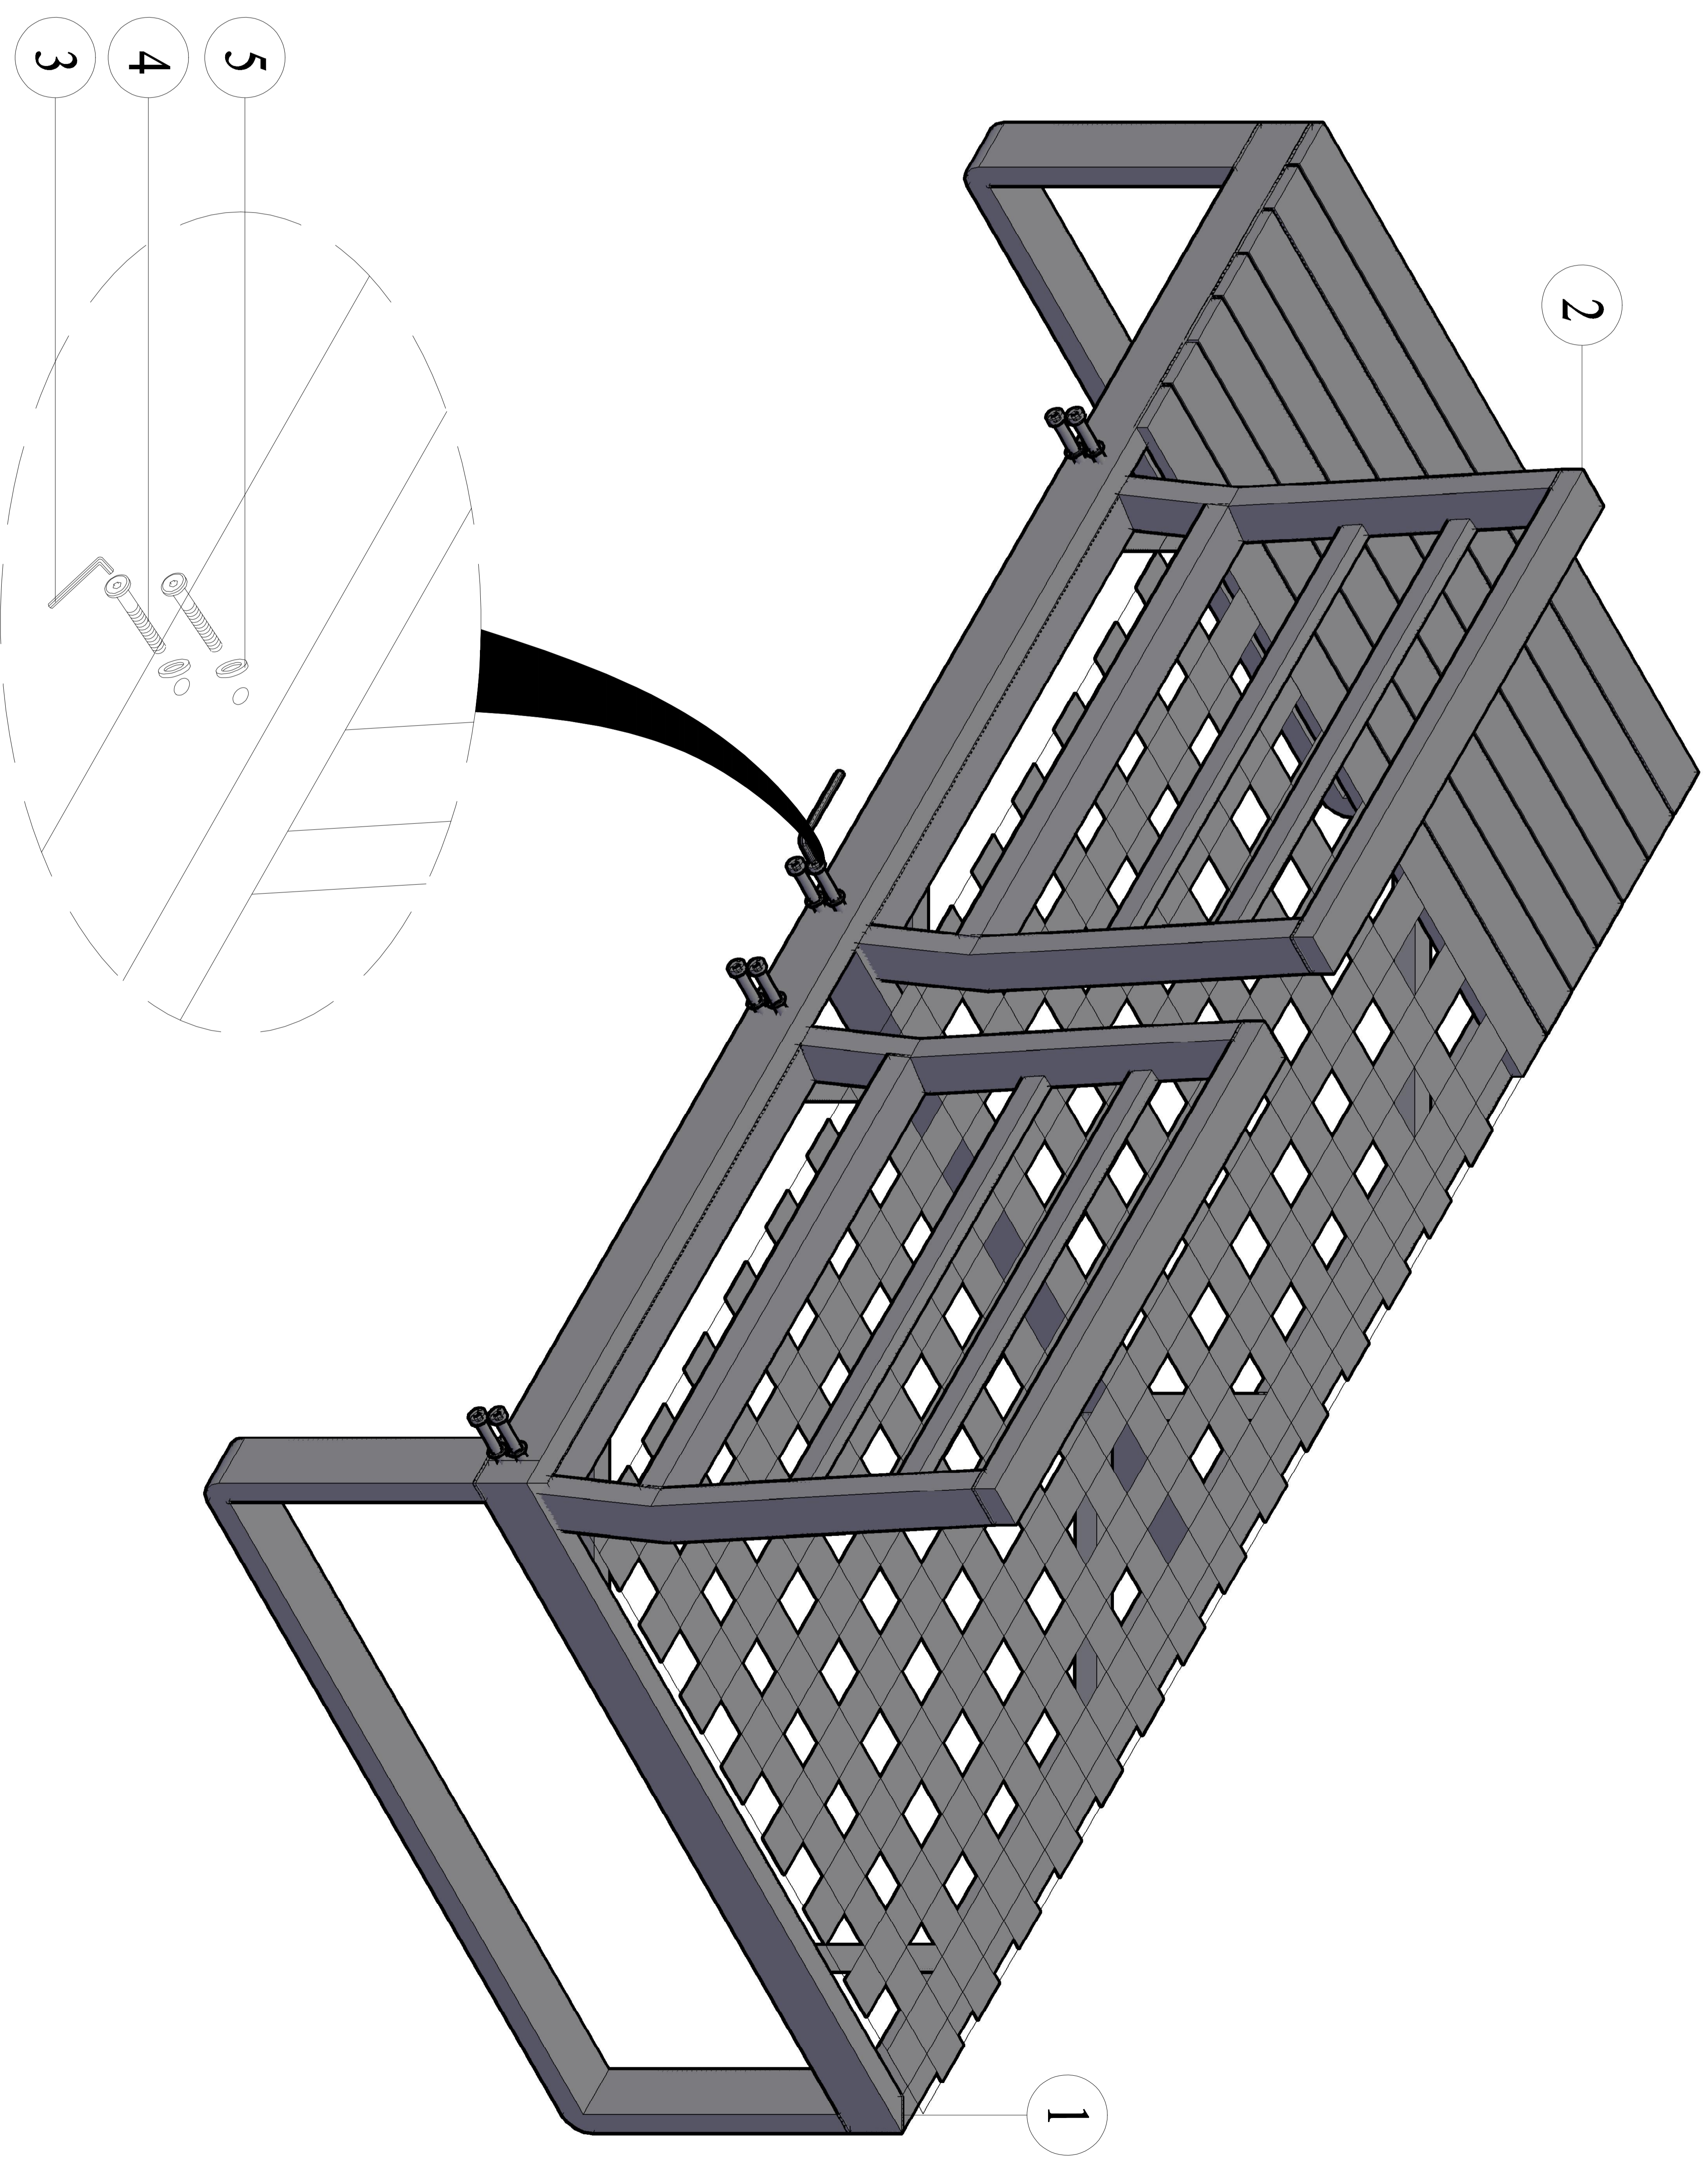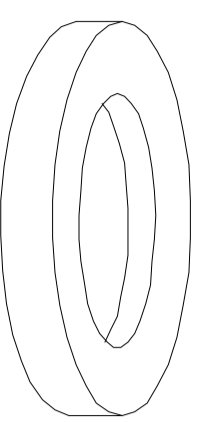





# ASSEMBLY INSTRUCTION

## Art No.: 9560 - 068


(1) Corner

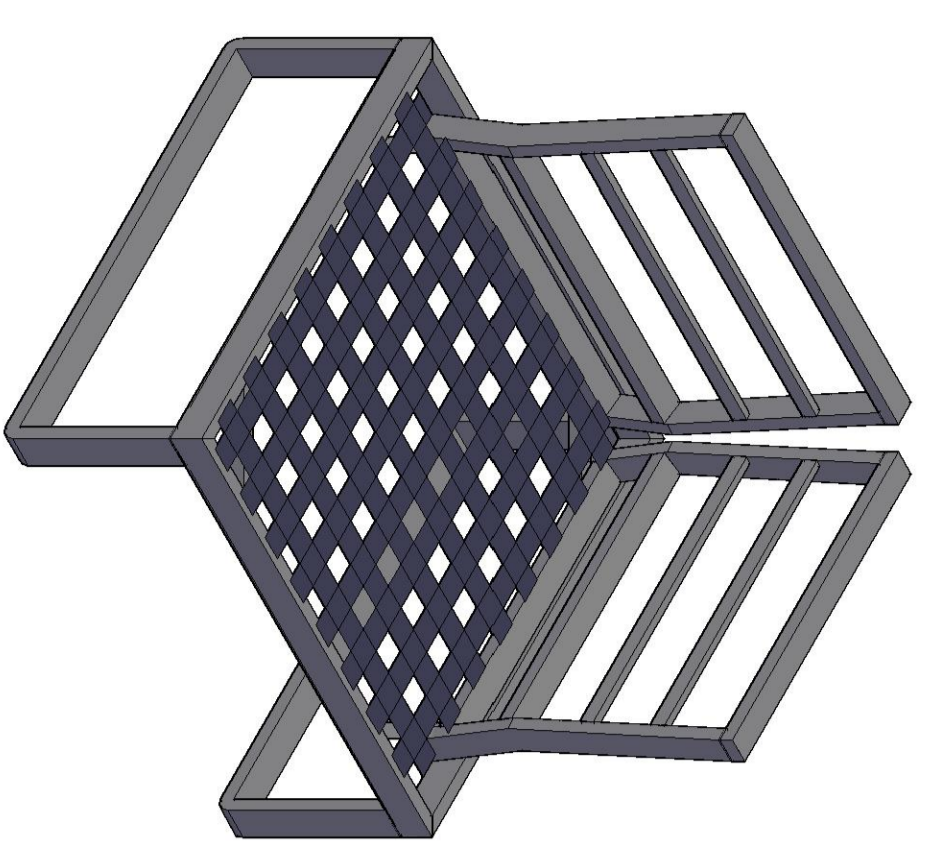


(2) Backrest

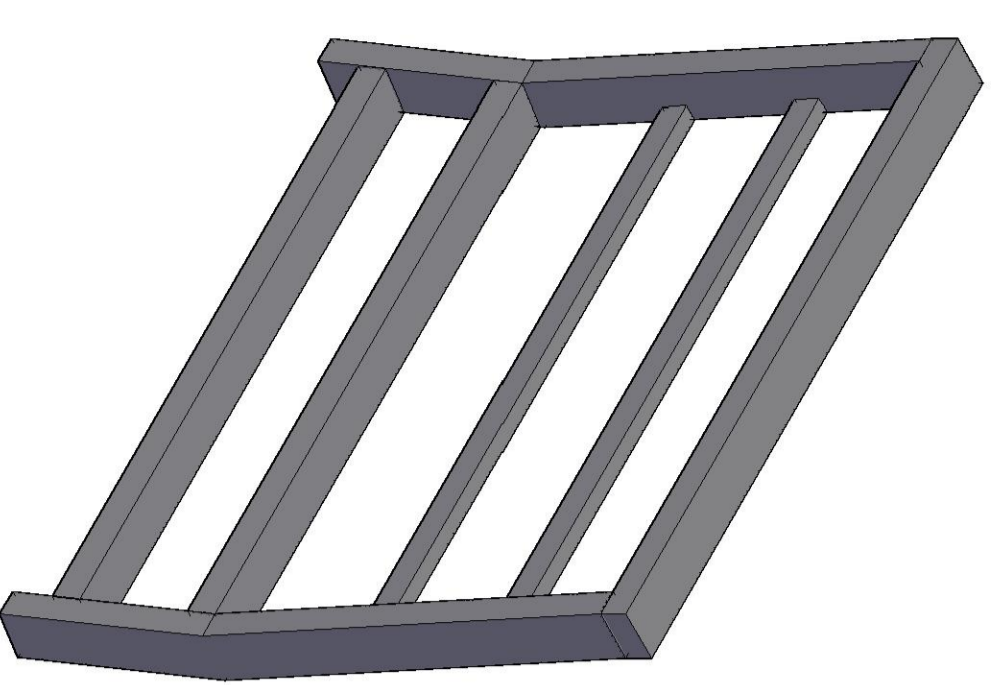

(3) Spanner

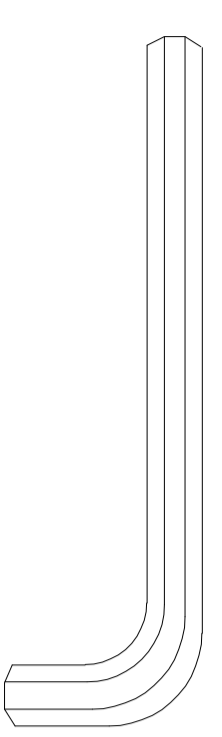

(4) Bulong (M8 \* 60)

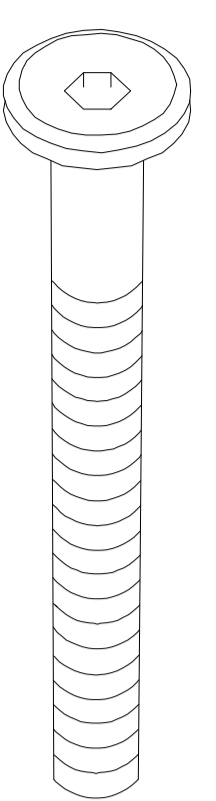

(5) Flat Washer

