

LANDING BANISTER

ATLANTA & DALLAS

**INSTRUCTION / MONTAGEANLEITUNG
INSTRUKTION / INSTRUCCION / INSTRUKCJA**

SOGEM®

PART OF DOLLE GROUP

Start kit / Corner kit
Anfangspaket / Eckenpaket

Startpakket / Hoekset
Kit de départ / Kit d'angle

Startpakke / Hjørnepakke




<p>9</p> <p>958</p> <p>Ø60</p> <p>Ø25</p> <p>x 8 K2-1077160 RAL 7016 K2-1077161 RAL 9005 K2-1077162 Pearl grey</p>	<p>27</p> <p>x 2 K1-39010 RAL 7016 K1-71290 RAL 9006 K1-1077005 RAL 9005</p>	<p>29</p> <p>x 1 K1-39110 RAL 7016 K1-71291 RAL 9006 K1-1077011 RAL 9005</p>		
	<p>Ø42</p> <p>1000</p>			
	<p>31</p> <p>x 1 K1-1077159</p>	<p>32</p> <p>x 1 K1-1077165 RAL 7016 K2-1077166 RAL 9005 K2-1077167 Pearl grey</p>	<p>33</p> <p>x 2 K2-1077170 RAL 7016 K2-1077171 RAL 9005 K2-1077172 Pearl grey</p>	
<p>46</p> <p>x 8 K3-05011 M5 x 20</p>	<p>47</p> <p>x 25 K3-08002 Ø8 x 40</p>	<p>48</p> <p>x 24 K3-06027 Ø5 x 50 TX25</p>	<p>49</p> <p>x 1 K3-90001</p>	<p>54</p> <p>x 1 K3-06375 Ø5 x 80 TX25</p>

Extension kit
Ergänzungspaket

Uitbreidingsset
Kit de suite

Forlængerpakke

<p>9</p> <p>958</p> <p>Ø60</p> <p>Ø25</p> <p>x 8 K2-1077160 RAL 7016 K2-1077161 RAL 9005 K2-1077162 Pearl grey</p>	<p>26</p> <p>x 1 K1-39011</p>	<p>29</p> <p>x 1 K1-39110 RAL 7016 K1-71291 RAL 9006 K1-1077011 RAL 9005</p>
	<p>Ø42</p> <p>1000</p>	
	<p>46</p> <p>x 8 K3-05011 M5 x 20</p>	<p>47</p> <p>x 24 K3-08002 Ø8 x 40</p>

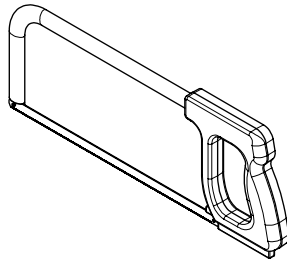
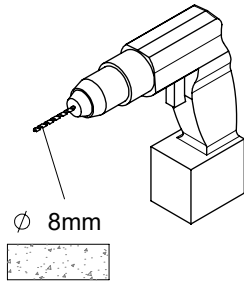


2,5 mm
6 mm




TX25

Tools not included!
Werkzeuge nicht enthalten!
Gereedschap niet inbegrepen!
Outils non inclus!
Værktøj ikke inkluderet!

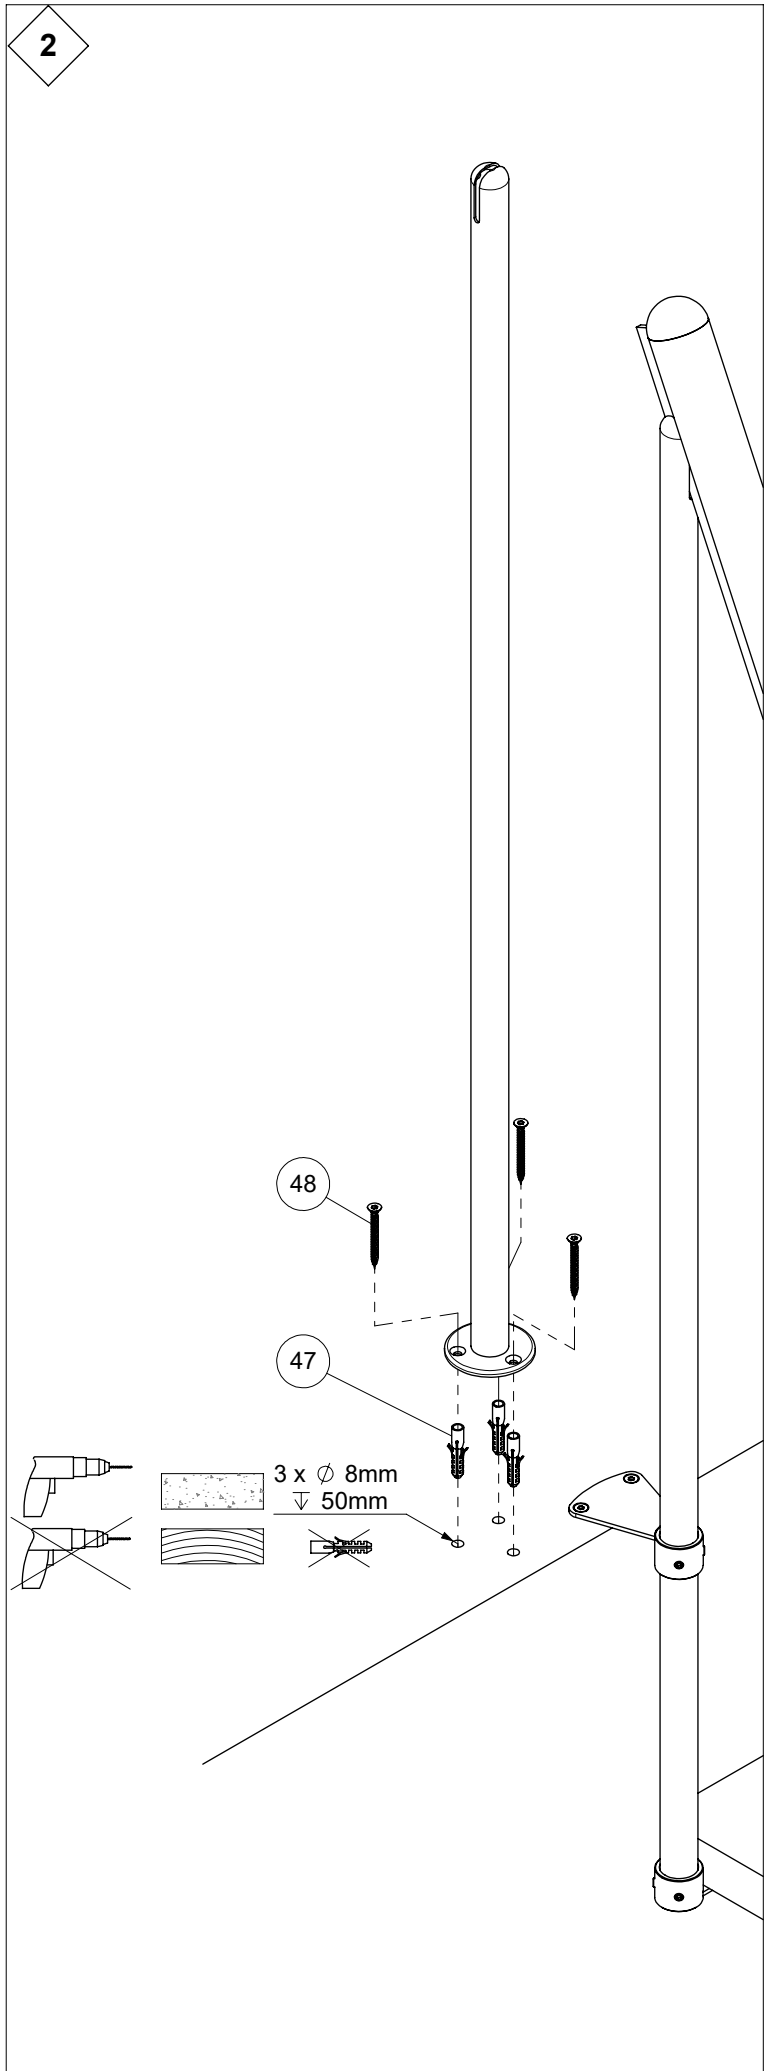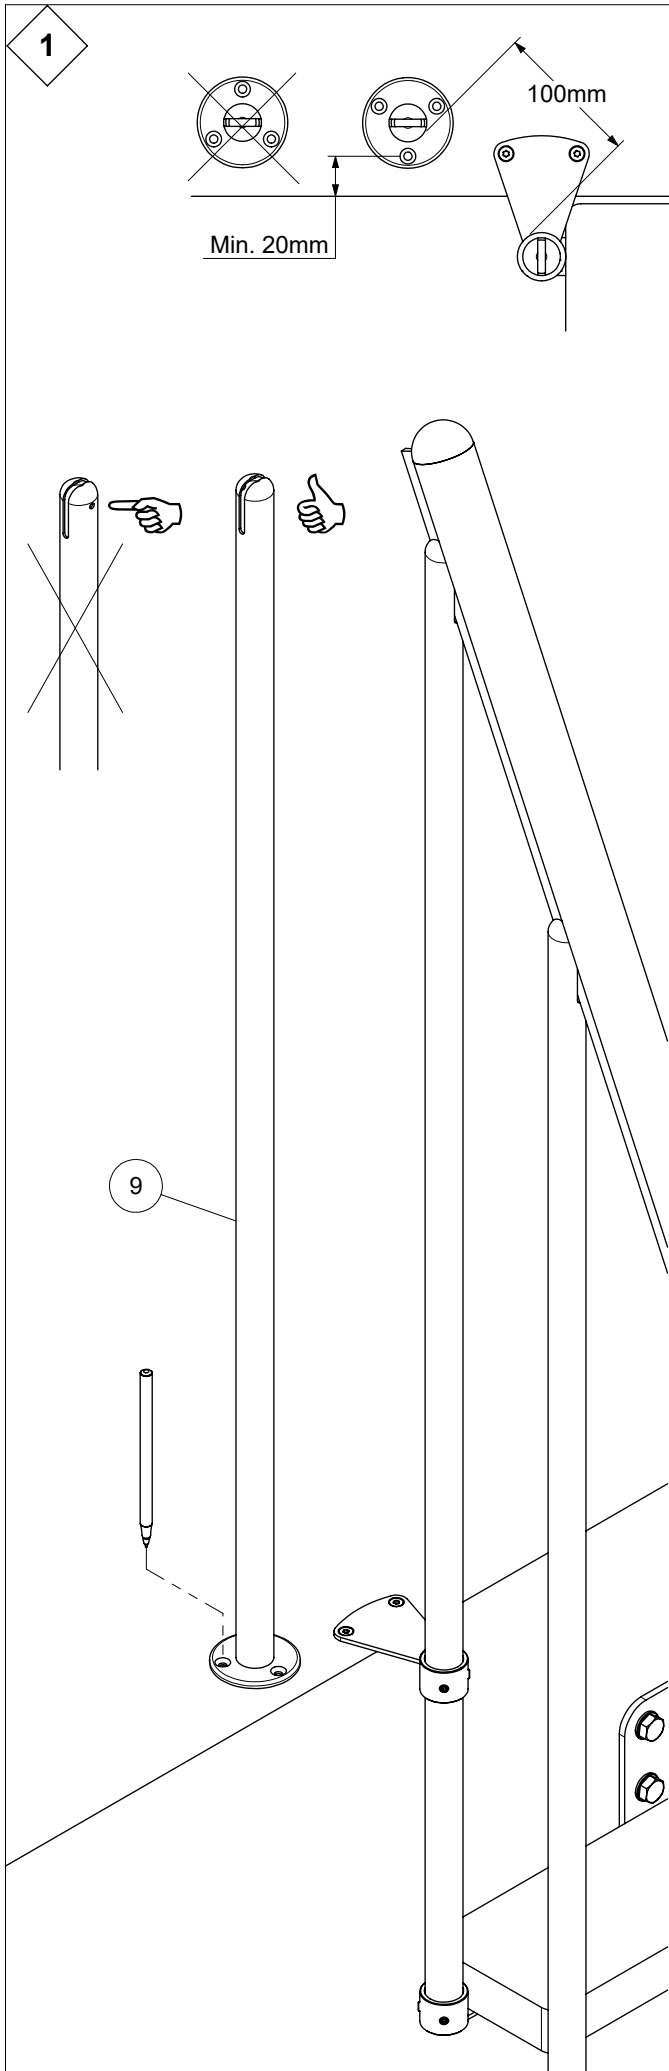





3





A



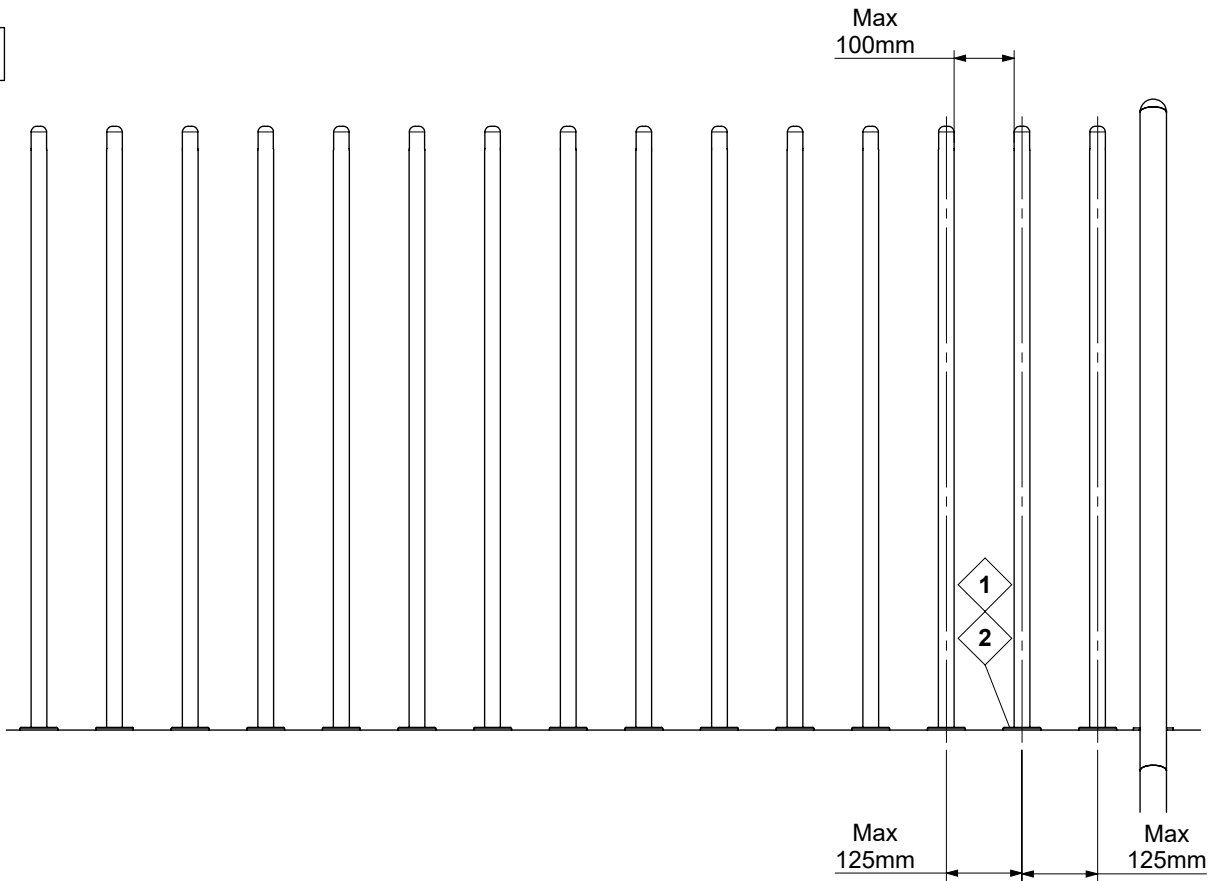


B

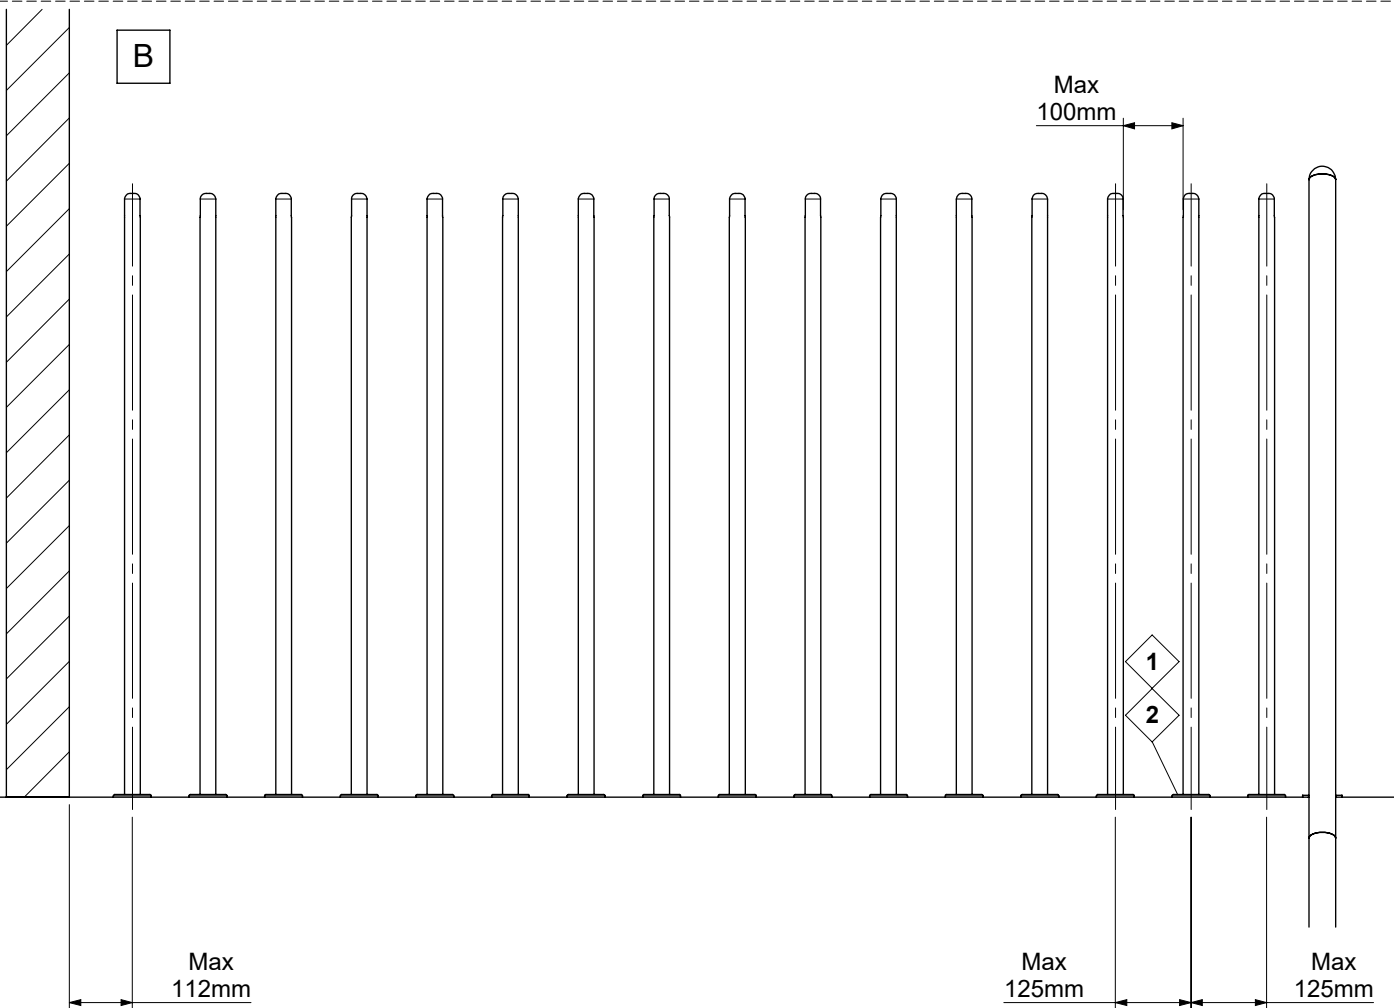

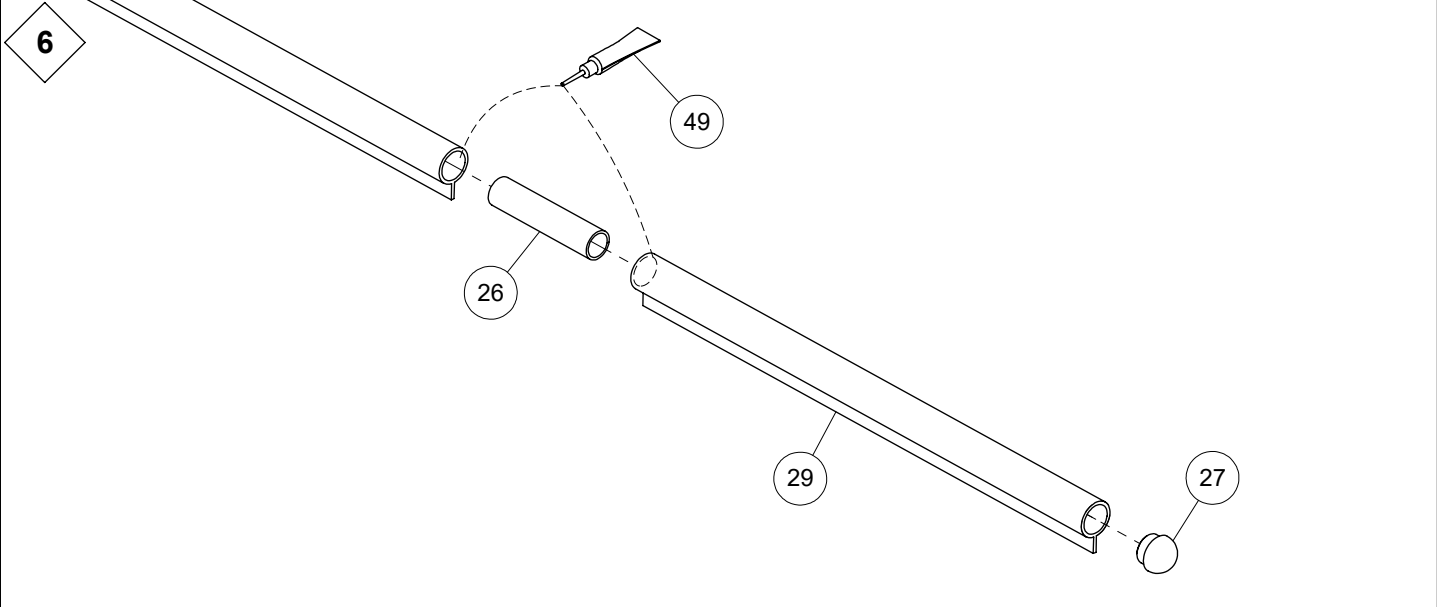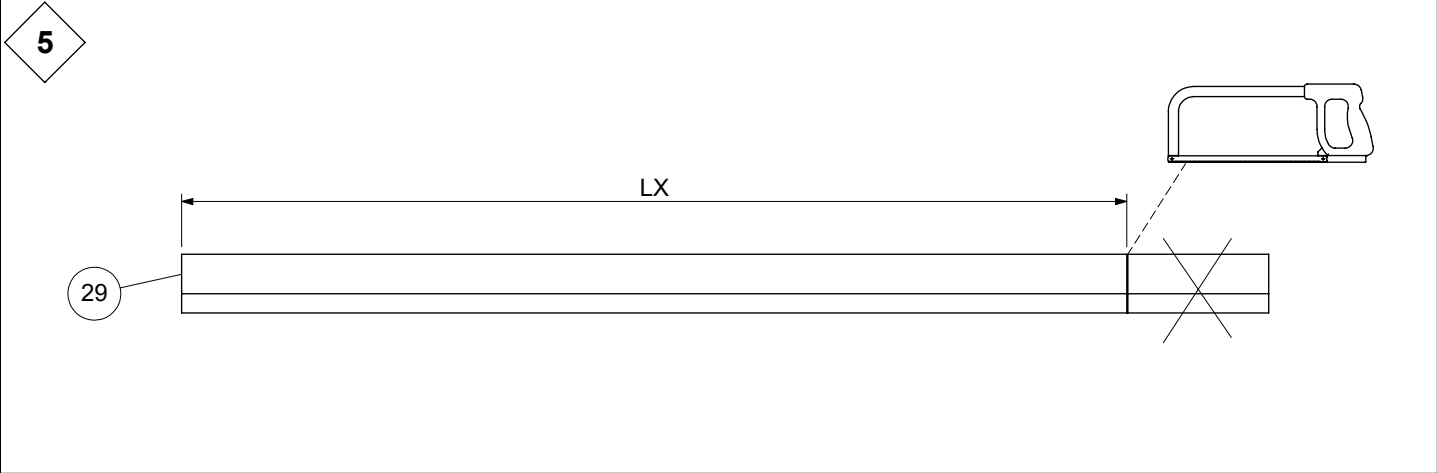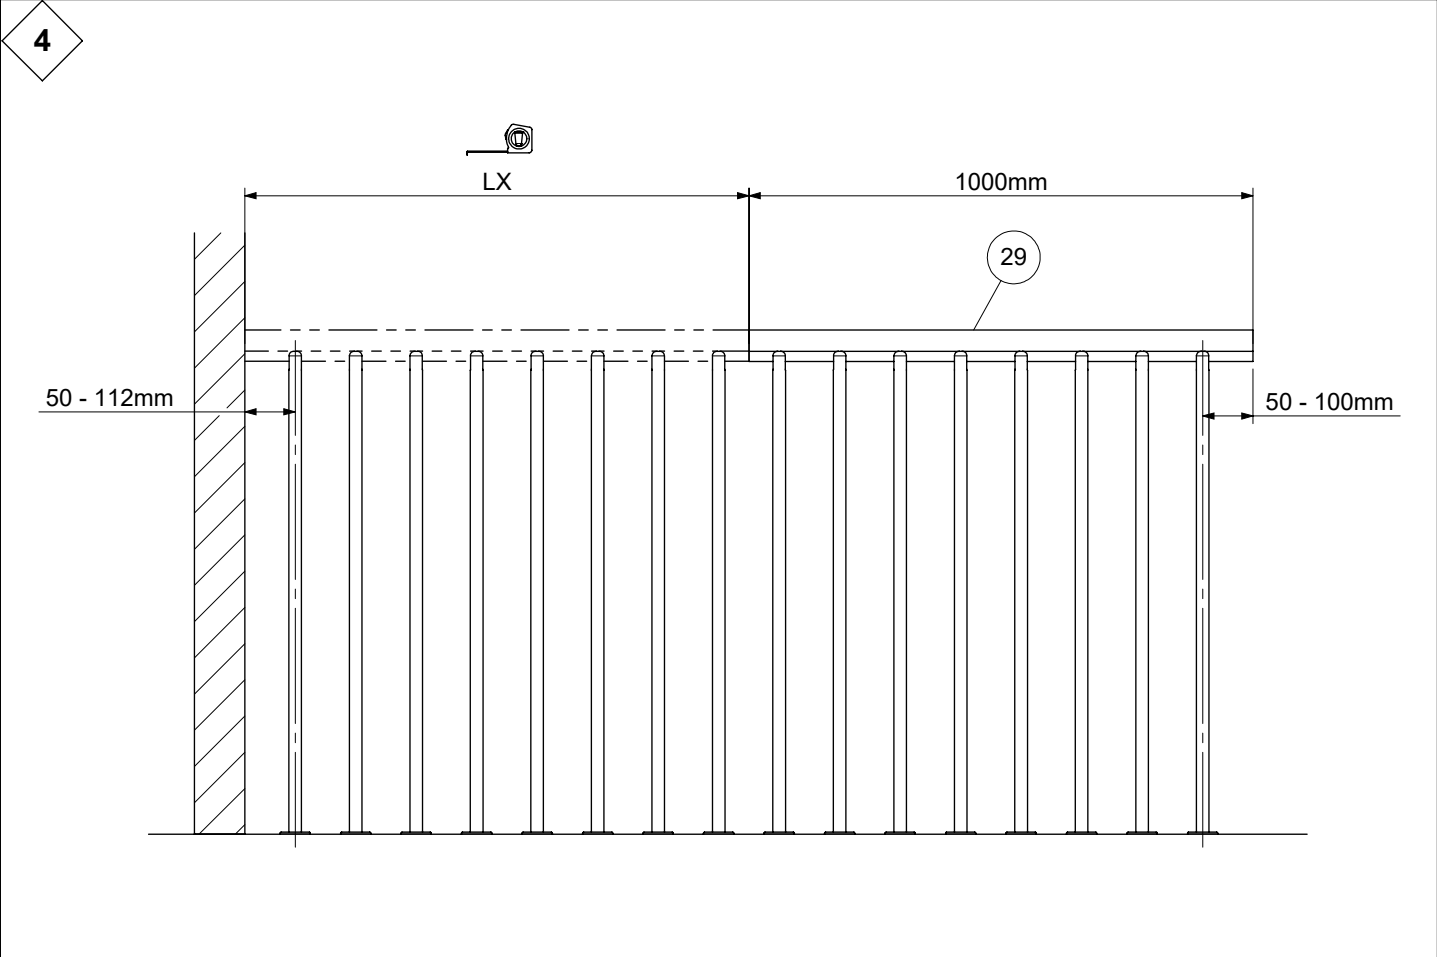

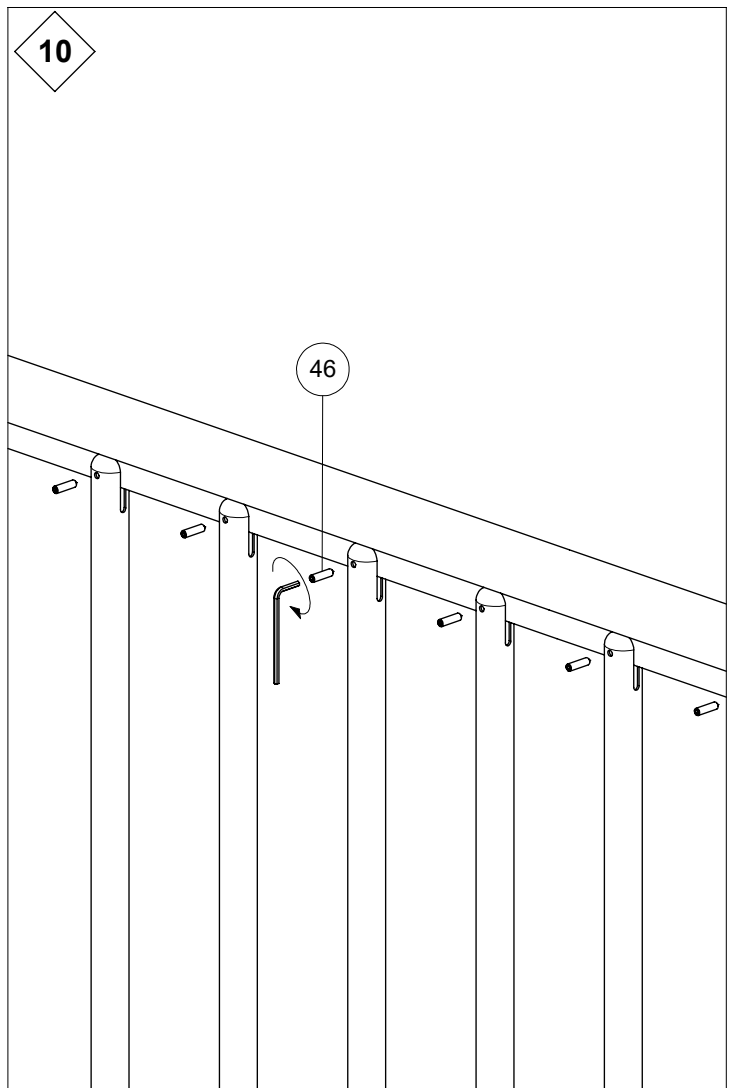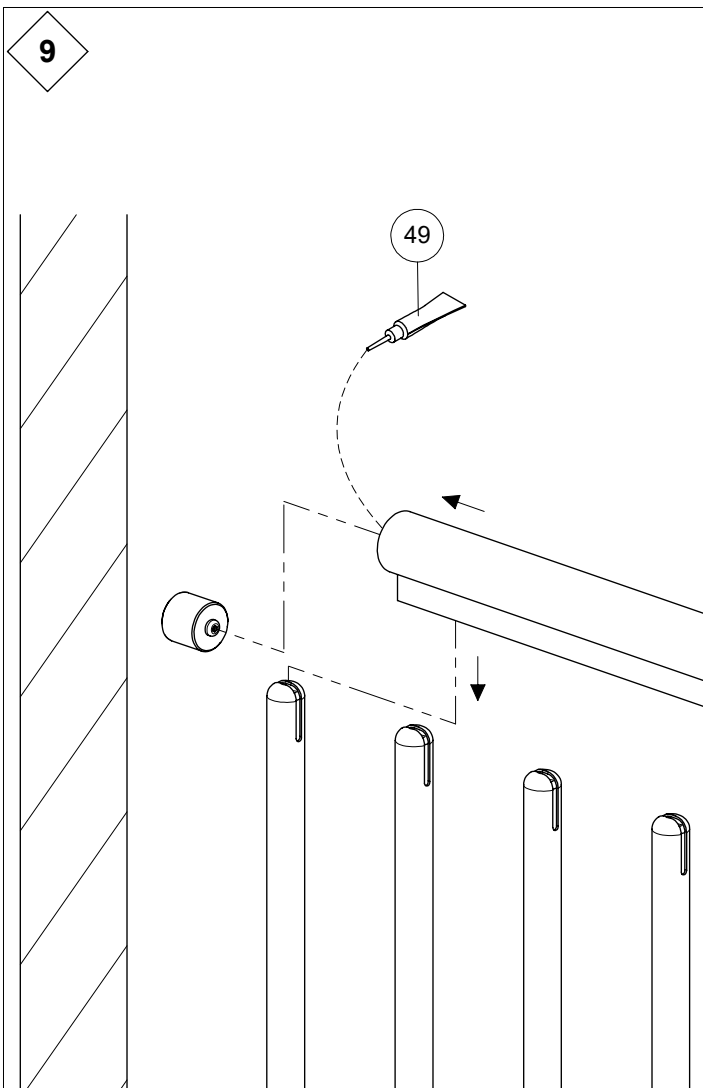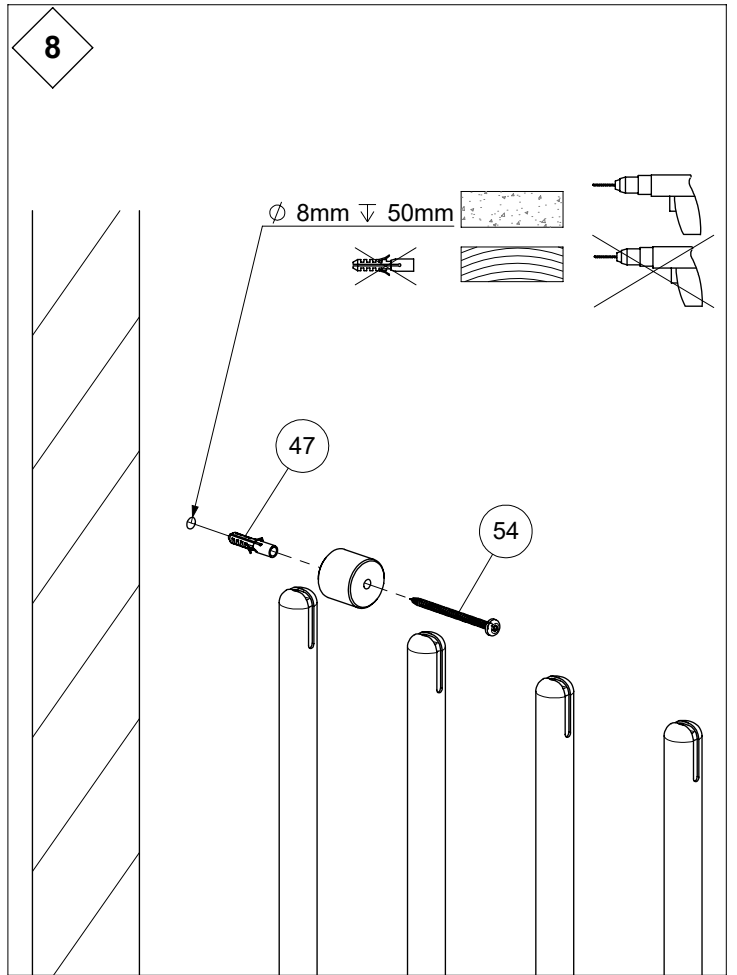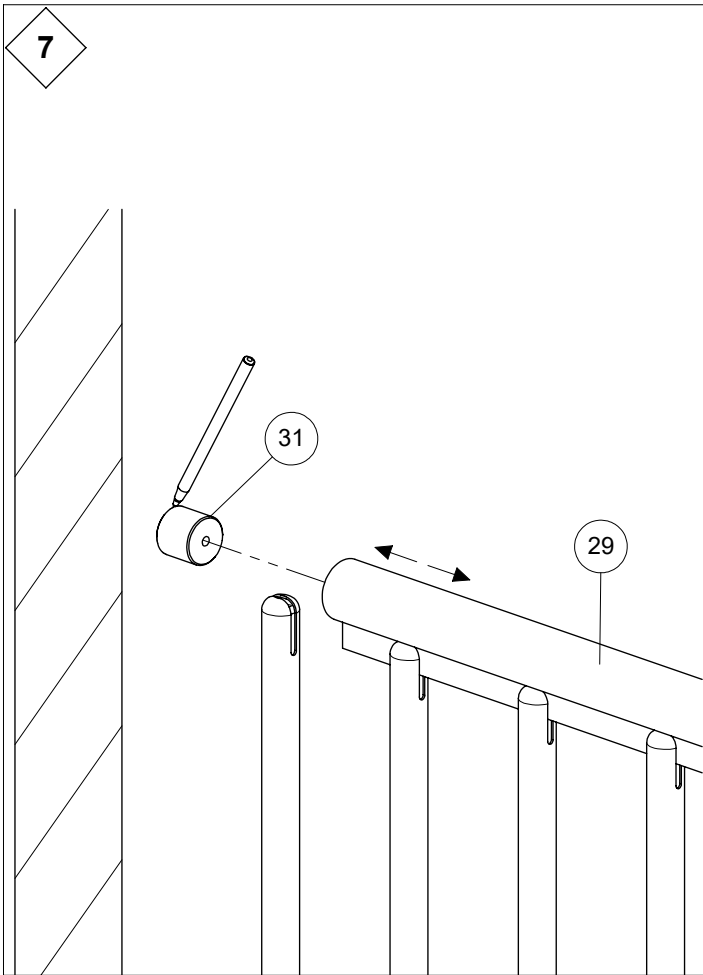

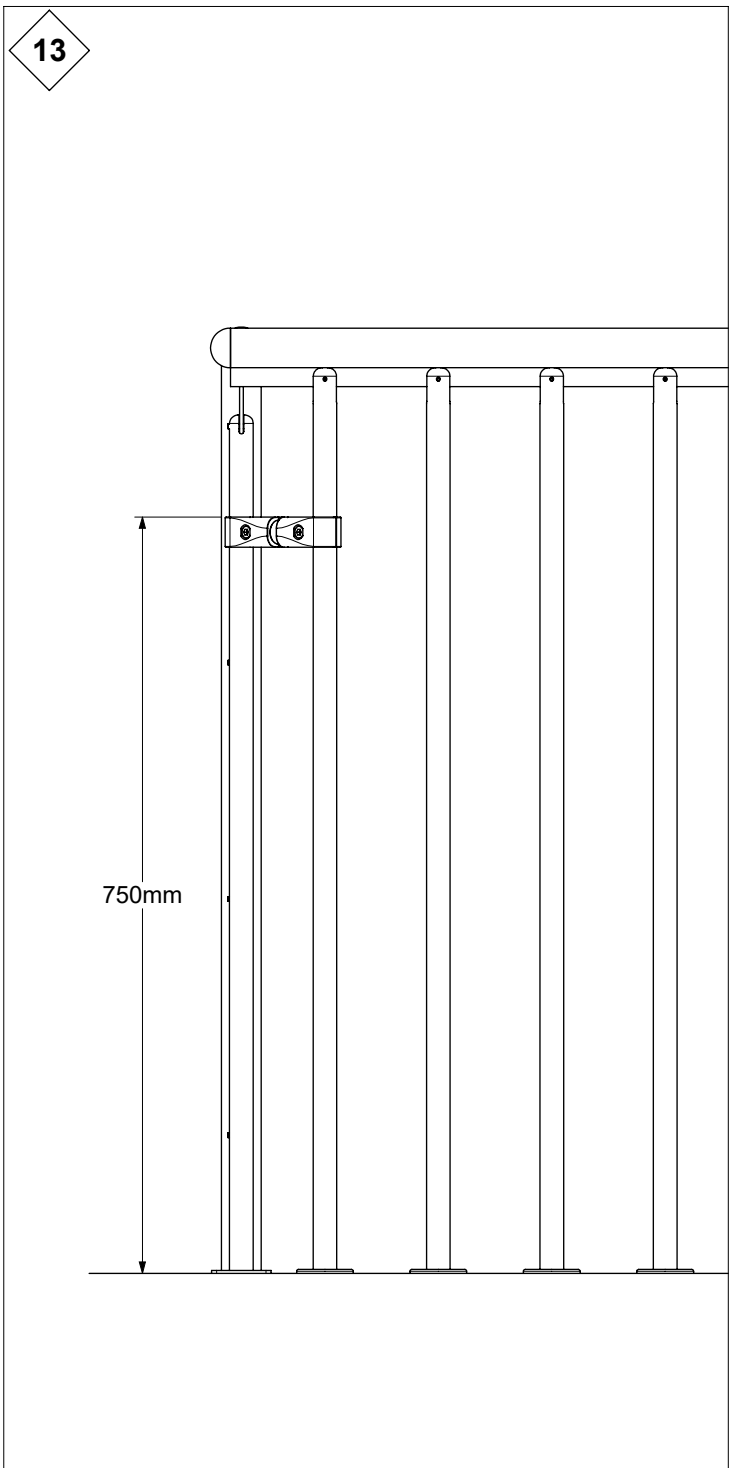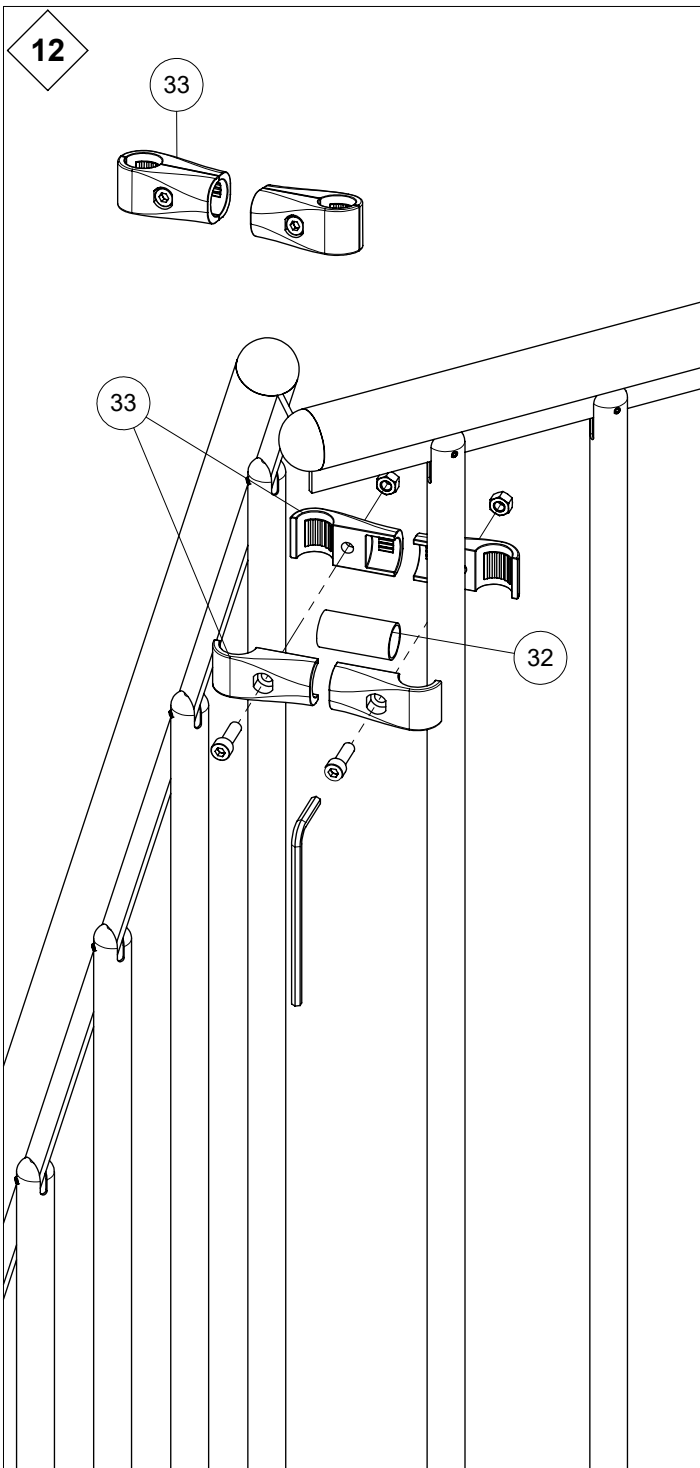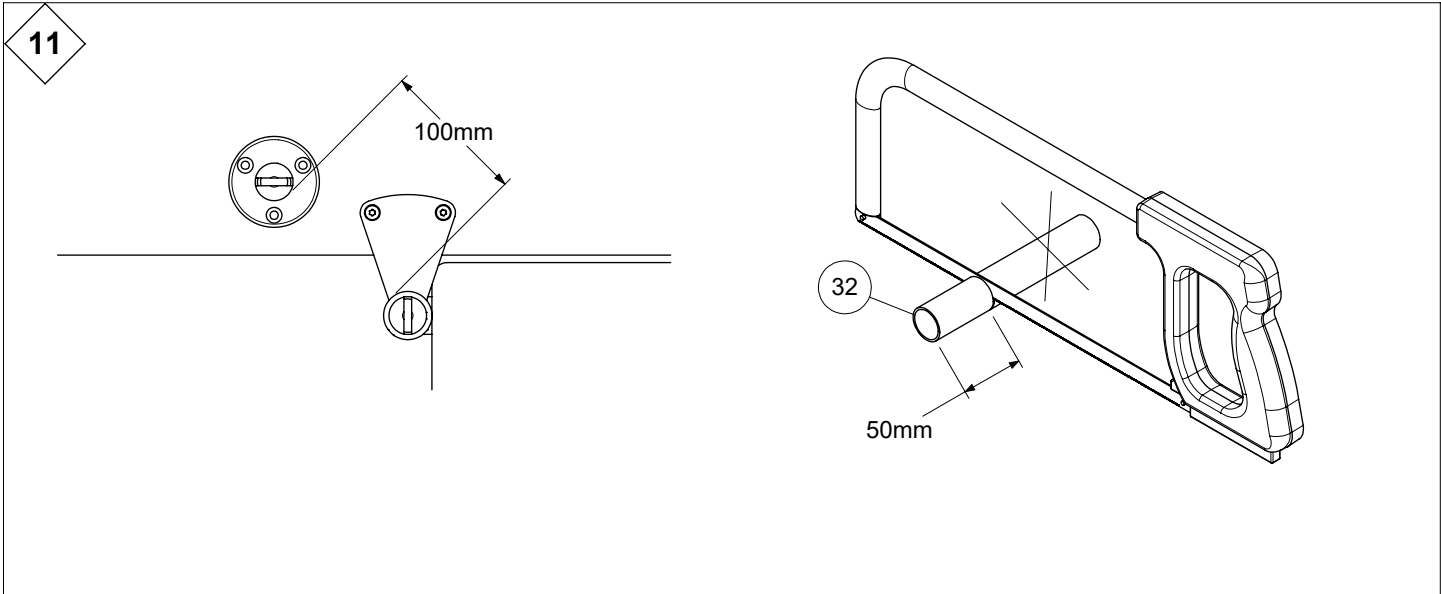

Extension kit
Ergänzungspaket
Uitbreidingsset
Kit de suite
Forlængerpakke

Start kit / Corner kit
Anfangspaket / Eckenpaket
Startpakket / Hoekset
Kit de départ / Kit d'angle
Startpakke / Hjørnepakke

