


Installation Instructions


Step 1

Remove the existing pipe.

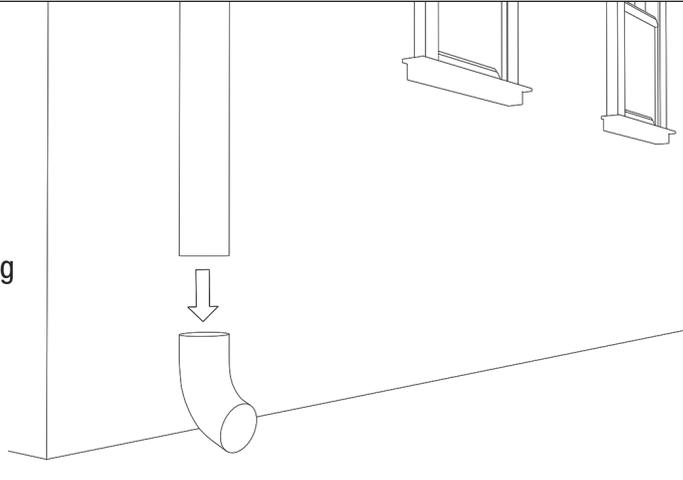


Step 2

Attach Mr. Flowout and make sure to insert it fully on to the existing pipe.

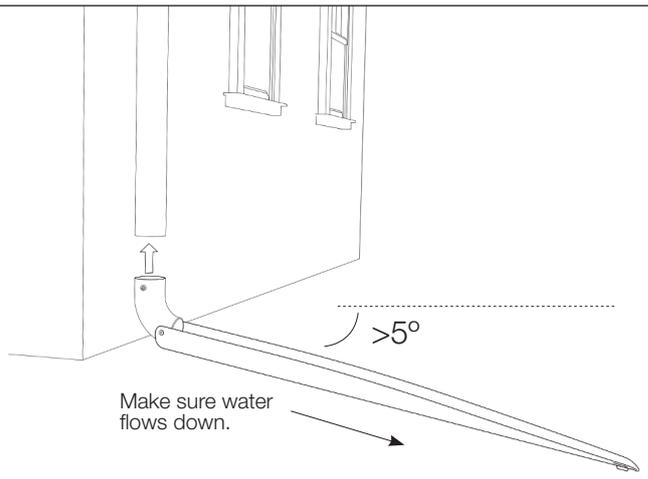

Step 3

Use the included screws for attachment on both sides. Use a PH2 bits together with a power tool (not included).

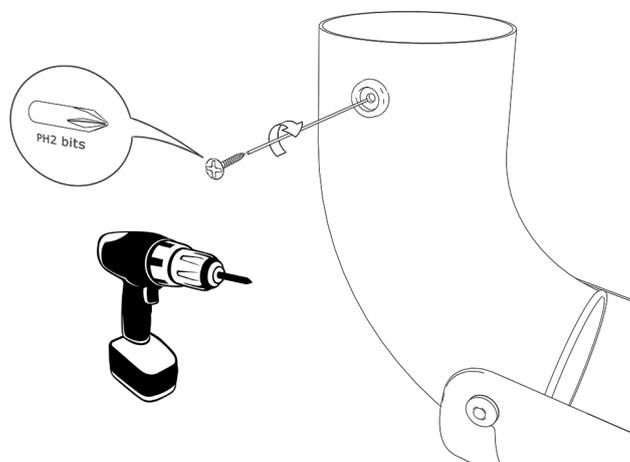

Mr. Flowout is manufactured of environmentally safe composite material.

UMIK SOLUTIONS AB • 559226-8766



Made in Sweden