

# H3x360G

  
**Hultafors**



Operating instructions

EN

## INCLUDED IN DELIVERY WITH THE H3x360G

H3x360G

3.6V Li-ion Batteries (3450mAh)

Power plug

Charger

Quick start guide

Case



# Operating manual

## cross laser H3x360G

### About this manual

Congratulations on the purchase of your new H3x360G! You have acquired a Hultafors measuring instrument, which can make your work easier, faster and more precise. To utilize the complete functionality range of this measuring instrument, and to ensure safe operation, please observe the following instructions:

- Please read this operating manual before starting to use the device.
- Always keep the operating manual near the device.
- Only hand over the device to other users together with the operating manual.
- Never render the attached warning signs unreadable.

### Contents

1. General information
2. Description
3. Technical data
4. Safety instructions
5. Laser safety/Classification
6. Getting Started
7. Operation
8. Checking the accuracy
9. Maintenance, storage and transportation
10. Delivery contents and accessories
11. Troubleshooting
12. Disposal
13. Manufacturer's guarantee
14. EC conformity declaration

# 1. General information

## 1.1 Signal words and their meaning

### DANGER

For an imminent danger that could lead to serious injury or death.

### WARNING

For a possibly dangerous situation that could lead to serious injury or death.

### CAUTION

For a possibly dangerous situation that could lead to slight injury or property damage.

### NOTE

For application notes and other useful information

## 1.2 Pictograms and other information

### 1.2.1 WARNING SIGNS



Warning of dangers in general

### 1.2.2 SYMBOLS



Read instructions before use.



Batteries and devices must not be disposed of with household waste.



Do not throw batteries into a fire.



Warning label on packages with Li-ion batteries.



Warning signs on battery Do not heat the battery above 60 °C.



Class 2 laser device.



Do not look into the laser beam!

## 2. Description

### 2.1 Unit components

1. Laser beam output aperture
2. On/off switch, transport lock
3. Tripod adapter 1/4" & 5/8"
4. Battery compartment cover



### 2.2 Intended use

The H3x360G is a line laser that enables a single person to level and align plumb points as well as 90 degree angles horizontally and vertically. The device is designed to be preferably used indoors. For outdoor applications, it must be ensured that the ambient conditions are similar to those indoors. The visibility range of the laser lines depends on the ambient conditions. In low light conditions or for long distances, the hand-held receiver can be used to locate the laser line position (the hand-held receiver is not included in the standard delivery, but can be ordered as an option). Follow the instructions contained in this manual. The device and accessory equipment may be a source of danger if they are utilised improperly or inappropriately by persons who are not adequately instructed.

## 3. Technical data

### 3.1 Cross laser H3x360G

---

**Working range**

- Laser lines	r = 20 m*
- Receiver	r = 80 m*

---

**Max. measurement tolerance**

- Laser lines	± 0.3 mm/m
---------------	------------

---

Protection class	IP 54
------------------	-------

---

Levelling range (typical)	± 3°
---------------------------	------

---

Levelling time (typical)	≤ 5 s
--------------------------	-------

---

Power supply	2 x 3.6 V Li-ion batteries (3450 mAh)
--------------	---------------------------------------

---

Battery life (at 20°C)	8 hrs (all diodes)
------------------------	--------------------

---

**Permissible temperatures**

Operating temperature	-10°C to +50°C
Storage temperature	-20°C to +60°C

---

Laser diode lines/points	505-520 nm < 1 mW
--------------------------	-------------------

---

Laser class	2, DIN EN 60825-1 : 2014
-------------	--------------------------

---

Tripod adapter	1/4" & 5/8"
----------------	-------------

---

Weight without batteries	720 g
--------------------------	-------

---

Dimensions H x W x L	150 x 95 x 125mm
----------------------	------------------

---

\*... depending on the ambient conditions in the workplace. Subject to modifications (drawings, descriptions and technical data).

## 4. Safety instructions

### 4.1 Area of responsibility

#### 4.1.1 MANUFACTURER

Hultafors is responsible for the safe delivery condition of the product, including the operating manual and the original accessories.

**Hultafors Group AB**  
**Hultaforsvägen 21**  
**517 21 Bollebygd, Sweden**



#### 4.1.2 OPERATOR

The operator is responsible for using the product as intended, the deployment of personnel, their training and the operational safety of the product.

- The operator understands the safety information which is stated on the product and the instructions which are contained in the operating manual.
- The operator shall comply with local regulations relating to safety and accident prevention regulations as well as worker protection laws and regulations.
- The operator shall immediately notify Hultafors if safety-related issues should develop on the product or during its utilization.
- The operator shall ensure that the product is not utilized any further if defects become evident, and he will have the product repaired professionally.

### 4.2 Improper Use

- Use of the device and the accessories without instruction.
- Use of third-party accessories or additional equipment.
- Use outside of the intended limits (see Chapter 3 / Technical data).
- Use under extreme temperature fluctuations without an adequate acclimatization.
- Disabling of safety devices and removal of hazard notices and labels.
- Unauthorized opening of the device.
- Performance of modifications or alterations the device or the accessories.
- Deliberate blinding of third parties.
- Inadequate safeguarding at the installation site.

### 4.3 Utilization limitations

The H3x360G is suitable for a continuous use in an atmosphere which can be inhabited by humans.

- Do not operate the product in explosion-prone or corrosive environments.
- Inform the local safety authorities and safety experts before working in hazardous environments, in close proximity to electrical installations or similar surroundings.

## 4.4 Usage Hazards

### 4.4.1 GENERAL



#### WARNING

Missing or incomplete instructions may result in improper or incorrect use. This can cause accidents with serious damages to persons, property, assets and the environment.

- Follow the manufacturer's and operator's safety instructions.
- Protect equipment and accessories from access by children.



#### WARNING

Blinding by laser radiation can indirectly lead to serious accidents, especially for people who are driving a vehicle or operating machinery. Do not look into the laser beam.

- Do not set up the laser beam and the laser plane at eye level or aim at people.



#### CAUTION

A fall, longer storage, transportation or other mechanical effects can lead to erroneous measurement results. Check the unit for damage before use. Do not use damaged equipment.

- Repairs have to be exclusively performed by Hultafors.
- Before use, check the accuracy of the device (see Chapter 8/Checking the accuracy)

### 4.4.2 CHARGER/BATTERIES/RECHARGEABLE BATTERIES



#### DANGER

Strong mechanical influences, can lead to a leakage, fire or explosion of the batteries or trigger the release of toxic substances.

- Batteries and rechargeable batteries may not be opened or exposed to mechanical loads.
- Repairs have to be exclusively performed by Hultafors.



#### WARNING

High ambient temperatures and immersion into liquids can cause a leakage, fire or explosion of the batteries or trigger the release of toxic substances.

- Protect batteries and rechargeable batteries from mechanical influences during transport.
- Do not overheat batteries and rechargeable batteries or expose them to fire.
- Avoid the ingress of moisture into batteries and rechargeable batteries.
- Do not use damaged batteries or rechargeable batteries. Perform a proper disposal (see Chapter 12 / Disposal).



#### **WARNING**

A short-circuiting or unintended use can cause batteries to overheat and create an injury or fire hazard.

- Do not transport or store batteries in the pockets of garments.
- Do not bring the battery contacts in contact with jewelry, keys, or other electrically conductive objects.
- Do not charge non-rechargeable batteries.
- Do not discharge the batteries through short-circuiting.
- Do not solder the batteries within the device.
- Do not mix old and new batteries, and do not mix batteries from different manufacturers or with a differing type designation.



#### **WARNING**

If disposed of improperly third parties can possibly be seriously injured and the environment polluted. The burning of plastic components generates toxic fumes which may impair the health of people. Batteries/rechargeable batteries may explode if they are damaged or heated excessively, and thereby cause poisoning, burning, corrosion or environmental contamination.

If disposed of negligently unauthorized persons are able to use the product improperly.

- The product must not be disposed of together with household waste. Dispose of the device and accessories properly (see Chapter 12 / Disposal).
- Protect the product at all times from access through unauthorized persons, especially children.

### **4.5 Electromagnetic compatibility (EMC)**

The electromagnetic compatibility is the ability of the product to function in an environment where electromagnetic radiation and electrostatic discharges are present, without causing electromagnetic interference to other devices.

#### 4.5.1 INTERFERENCE OF OTHER DEVICES BY H3X360G

Although the product meets the strict requirements of the relevant directives and standards, Hultafors can not completely exclude the possibility of interference with other devices (for example, when using the product in combination with third-party devices, such as field computers, personal computers, wireless devices, mobile phones, certain cables or external batteries).

- When using computers and radio equipment make sure to observe the vendor-specific information about electromagnetic compatibility.
- Only use original Hultafors equipment and accessories.

#### 4.5.2 INTERFERENCE OF THE H3X360G BY OTHER DEVICES

Although the product meets the strict requirements of the relevant directives and standards, Hultafors can not entirely exclude the possibility that intense electromagnetic radiation in the immediate vicinity of radio transmitters, two-way radios, diesel generators, etc. can distort the measurement results.

- When performing measurements under these conditions check the plausibility of the results.

## 5. Laser safety/classification

The H3x360G projects a 360° horizontal line and two 360° vertical lines.

The product corresponds to Laser class 2 according to DIN EN 60825-1:2014.

### Class 2 laser:

When using Class 2 laser devices, the eye is protected by the blink reflex or aversion reaction in the case of random and short-term exposure.



### WARNING

Looking directly into the beam with optical aids (e.g. binoculars, telescopes) can be dangerous.



### CAUTION

Looking into the laser beam may be hazardous to the eye.

- Do not look into the laser beam.
- Do not aim the laser beam at other people.

## Labelling on the device:



- Do not remove the type plate!

## 6. Getting Started

Fully charge the batteries before first use. The battery charge status is shown on the display. Charge the batteries when the symbol flashes continuously on the screen. Use the charger supplied with your H3x360G. The device cannot be used whilst charging. The batteries are fully charged in approx. 3 hours.

### 6.1 Operation with batteries

1. Open the battery compartment cover.
2. Insert batteries with the correct polarity into the H3x360G.
3. Close the battery compartment cover (audible click of the cover).

Only use type 18650 3.6 V Li-ion batteries (3450 mAh).

Remove the batteries if the instrument is not used for an extended period.



#### NOTE

The intensity of the laser lines can vary depending on the battery quality.



## 7. Operation

### 7.1 Getting started

#### 7.1.1 SWITCHING THE INSTRUMENT ON AND OFF

##### ON:

Push the on/off switch, transport lock to the right (ON position) and the pendulum unit will be released. The device emits three 360° lines from the outlet openings. To turn the vertical and horizontal 360° lines on and off, press the H and V buttons. The instrument will level itself automatically within the specified inclination range (see Chapter 3/ Technical data).

##### OFF:

Push the on/off switch, transport lock to the left (OFF position) and the pendulum unit will be locked; the laser line will disappear.



#### NOTE

Magnets can affect the measurement instrument and lead to false results.

If the vertical laser line is not projected vertically to the wall or to the target surface, uneven surfaces can lead to erroneous measurement results.

- Make sure that the vertical laser line is projected vertically on to the wall or the target surface.

Severe temperature fluctuations can lead to erroneous measurement results.

- Before start-up, allow the device to acclimatize to the ambient conditions.

The laser lines will flash every 30 seconds when the battery capacity falls below 10%.

- Recharge the battery regularly or ensure additional batteries are available.

#### 7.1.2 PULSE MODE

The REC LGDO receiver can be used to detect the laser lines at even greater distances or in unfavorable environmental conditions. Pulse mode is active on the H3x360G when the MODE button is pressed. The laser lines flash three times to indicate the change.

#### 7.1.3 CREATING INCLINATIONS BEYOND THE RANGE OF AUTOMATIC LEVELLING

##### ON:

- Push the on/off switch, transport lock to the left (OFF position).
- Hold down the MODE button for at least 5 seconds.
- To indicate that the self-leveling is switched off, the lines will blink every 4 seconds.

##### OFF:

- Hold down the MODE button for at least 5 seconds.




#### CAUTION

If the laser line is not projected vertically to the surface or the surface is uneven, this can lead to erroneous measurement results.


- Make sure that the laser line is projected vertically on to the wall or the target surface.

## 7.2 Applications


### 7.2.1 HORIZONTAL LEVELLING 360°

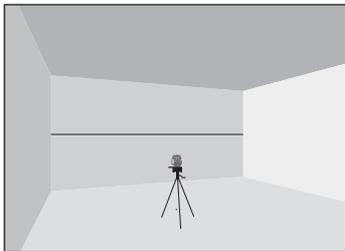


### 7.2.2 VERTICAL LEVELLING 360°

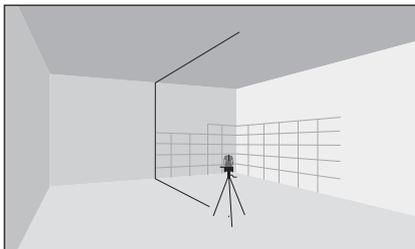

### 7.2.3 90° ANGLE

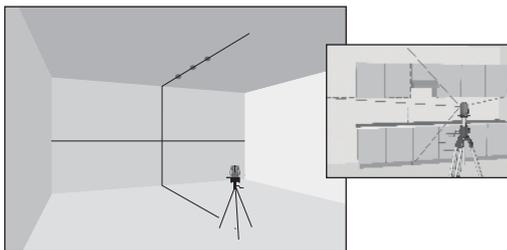

### 7.2.4 INCLINATION

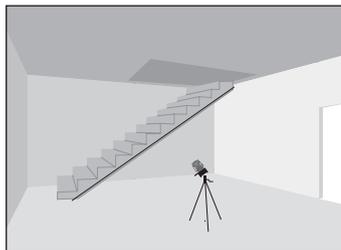

### 7.2.5 WORKING AT DISTANCES



## 8. Checking the accuracy


Check the accuracy of the Hultafors H3x360G before each measurement.

- Before starting the check, let the device acclimatise to the environmental conditions.

### 8.1 Checking the accuracy of the vertical line



- Attach a plumb line as close as possible to a (at least) 3 m high wall.
- Mount the H3x360G onto a tripod at a height of approx. 1.2 m.
- Position the device approx. 3 m in front of the plumb line.
- Switch on the H3x360G and project the vertical laser line onto the plumb line.

If the deviation is greater than 4 mm, the device must be readjusted. In this case, consult your dealer.

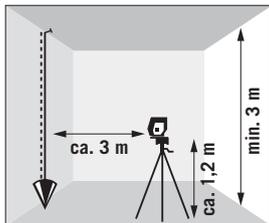


### 8.2 Checking the leveling accuracy of the horizontal line

1. Select two horizontal, flat walls (A & B), which are approx. 10 meters apart.
  - Mount the H3x360G onto a tripod and position it at a distance of approx. 20 cm from wall A.
  - Mark the intersecting point ① of the vertical and horizontal lines on wall A.
2. Rotate the H3x360G by 180° and mark point ② on wall B.
  - Position the laser at the same height approx. 20 cm away from wall B and mark point ③ on wall B.
3. Rotate the H3x360G by 180° and mark point ④ on wall A.
  - Measure the vertical distance (d1) of the marked points ①-④ and the vertical spacing (d2) of the points ②-③.

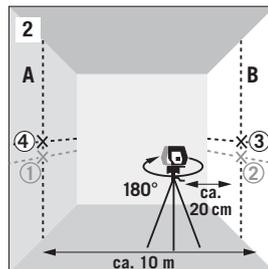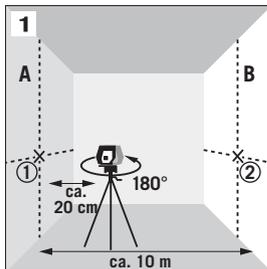

- Mark the center point of (d1) and (d2).
- If the reference points (1) and (3) are on different sides of the center point, (d2) must be subtracted from (d1).
- If the reference points (1) and (3) are on the same side of the center point, (d2) must be added to (d1).
- Divide the results with twice the value of the room length.

If the result is greater than 4 mm, the device must be readjusted. For this, please consult your dealer.

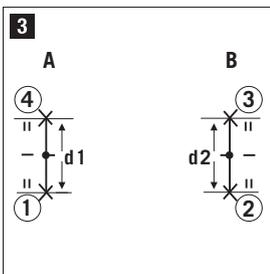

## 9. Maintenance, storage and transportation

### 9.1 Cleaning

- Wipe off any dirt with a soft damp cloth.
- Check the outlet openings of the laser regularly, and thoroughly clean them if necessary. Do not touch the glass with your fingers.
- Do not use aggressive cleaning agents or solvents.
- Do not immerse the device into water!
- Clean and dry wet equipment, accessories and transport containers prior to packaging them. Only pack equipment again when it is completely dry.
- Keep plug connections clean and protected from moisture.

### 9.2 Storage

#### 9.2.1 GENERAL

- The equipment may only be stored within the specified temperature limits (see Chapter 3 / Technical data).
- After a prolonged storage, check the accuracy of the measuring device before using it.

#### 9.2.2 BATTERIES

- For storage, remove the batteries from the device or from the charging station.
- The storage should preferably be performed in a dry environment at room temperature (see Chapter 3 / Technical data).

- Protect from moisture and humidity. Dry wet or damp batteries before storage or before use.
- Prior to a prolonged storage, charge the battery to 80 % capacity (see Chapter 7 / operation). Repeat the procedure every 6 months.
- After storage, fully charge the battery before use.
- Check the battery for damage before use. Do not use damaged batteries!

## 9.3 Transport

### 9.3.1 GENERAL

- The device may be damaged by strong vibrations or by falling.
- Never transport the product loose. Always use the original packaging or an equivalent transport container.
- Switch off the measuring device before transporting it. During the shutdown the pendulum unit is locked in position and protected against damage.
- Check the unit for damage before use.
- Regularly check the accuracy of the device (see Chapter 8 / Checking the accuracy).

### 9.3.2 BATTERIES

When transporting or shipping batteries, the operator is responsible for complying with the applicable national and international laws and regulations.

- Before shipping, remove the batteries from the device.

## 10. Delivery contents and accessories

### 10.1 Product contents H3x360G

H3x360G Cross laser  
 3.6V Li-ion Batteries (3450mAh)  
 Power plug  
 Charger  
 Quick Starter  
 Case

### 10.2 Accessories

RECG Hand-held receiver  
 B-120 Compact tripod  
 UH Universal holder  
 LA-2 Thread adapter set  
 LBG Laser goggles, green  
 TPG Magnetic target, green  
 MAH Magnetic bracket  
 B-10 Mini tripod

Further information on accessories can be found at **[www.hultafors.com](http://www.hultafors.com)**

## 11. Troubleshooting

<b>Error</b>	<b>Possible cause</b>	<b>Remedy</b>
Laser lines blink in one second intervals.	<ul style="list-style-type: none"><li>• Device outside of self-leveling range.</li></ul>	<ul style="list-style-type: none"><li>• Align device horizontally.</li></ul>
Device turns off again immediately after startup.	<ul style="list-style-type: none"><li>• Battery flat.</li><li>• Battery empty.</li></ul>	<ul style="list-style-type: none"><li>• Replace battery.</li><li>• Charge battery.</li></ul>
Laser lines blink every 4 seconds.	<ul style="list-style-type: none"><li>• Device is in manual inclination mode.</li></ul>	<ul style="list-style-type: none"><li>• Push the on/off switch, transport lock to the right (OFF position).</li></ul>
Laser lines flash every 30 seconds.	<ul style="list-style-type: none"><li>• Battery capacity below 10%.</li></ul>	<ul style="list-style-type: none"><li>• Replace the battery.</li></ul>

## 12. Disposal

If disposed of improperly third parties can possibly be seriously injured and the environment polluted.

The burning of plastic components generates toxic fumes which may impair the health of people.

Batteries/rechargeable batteries may explode if they are damaged or heated excessively, and thereby cause poisoning, burning, corrosion or environmental contamination.

If disposed of negligently unauthorized persons are able to use the product improperly.

Measuring tools, accessories and packaging must be recycled in an environmentally-friendly manner.



The product as well as the accessories – especially the batteries and rechargeable batteries – may not be disposed of with household waste.

- Ensure proper disposal of the device and the accessories.
- Observe the country-specific disposal requirements.

Your Hultafors dealership will accept returned batteries as well as old equipment, and will ensure proper disposal.

### Only for EU countries



Electric tools may not be disposed of with household waste!

According to the European Directive 2002/96/EC on Waste Electrical and Electronic Equipment and its implementation in national law, no longer usable electrical and electronic equipment must be collected separately and recycled in an environmentally friendly manner.

## 13. Manufacturer's Guarantee

The manufacturer guarantees freedom from defects of the device for a period of two years, with the exception of batteries, as of the point in time the device is handed over. The guarantee is limited to repairs and/or replacements at the manufacturer's discretion.

Defects which are caused through improper handling by the purchaser or third parties, natural wear and optical flaws that do not affect the usability of the equipment, are not covered by this guarantee. Claims under this guarantee can only be invoked if the device is submitted to the dealer along with the invoice or original receipt.

If the guarantee claim is justified, the manufacturer shall bear the transport costs. The duration of the guarantee will not be extended through repair or spare parts work which is carried out within the scope of the guarantee.

Further claims are excluded, unless these are stipulated by the respective national legislation. In particular the manufacturer shall not be liable for any direct, indirect, incidental or consequential damages, losses or expenses in connection with the use or because of the inability to use the tool for any purpose whatsoever. Implied warranties for the usage or suitability for a particular purpose are expressly excluded.

## 14. EC conformity declaration



### Declaration of Conformity



We **Hultafors Group AB, Hultaforsvägen 21, Hultafors**

declare under our sole responsibility that the Product(s)

**H3x360G**

to which this declarations relates is in conformity with the following standards.

**EN 60825-1:2014**

Following the provisions of Directive(s)

**Electromagnetic compatibility 2014/30/EU**

**Low Voltage Directive 2014/35/EU**



**Hultafors**